



**Touch Panel Teaching
CON-PT, CON-PD, CON-PG**

Operating Manual Fourth Edition



IAI America, Inc.



Please Read Before Use

Thank you for purchasing our product.

This Operation Manual explains the handling methods, structure and maintenance of this product, among others, providing the information you need to know to use the product safely.

Before using the product, be sure to read this manual and fully understand the contents explained herein to ensure safe use of the product.

The CD/DVD that comes with the product contains operation manuals for IAI products.

When using the product, refer to the necessary portions of the applicable operation manual by printing them out or displaying them on a PC.

After reading the Operation Manual, keep it in a convenient place so that whoever is handling this product can reference it quickly when necessary.

[Important]

- This Operation Manual is original.
- The product cannot be operated in any way unless expressly specified in this Operation Manual. IAI shall assume no responsibility for the outcome of any operation not specified herein.
- Information contained in this Operation Manual is subject to change without notice for the purpose of product improvement.
- If you have any question or comment regarding the content of this manual, please contact the IAI sales office near you.
- Using or copying all or part of this Operation Manual without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the sentences are registered trademarks.

RC ROBO CYLINDER

Table of Contents

Safety Guide (Read This Section Before Use).....	1
Handling Precautions	7
Product Check.....	8
Supported Models	9
1. Basic Specification	11
2. Explanation of Each Part.....	13
3. Connection and Disconnection to/from Controller	15
4. Connection of CON-PG and Controller	16
5. Operation of CON Controllers	17
5.1 Displayed Language Change.....	17
5.2 Transition of Operating States.....	18
5.3 Initial Screen	22
5.4 Changing Operating Axis.....	23
5.5 Menu Selection	24
5.6 Monitor.....	25
5.7 Position Editing.....	34
5.7.1 Position Data.....	35
5.7.2 Entering New Data.....	42
5.7.3 Changing Position Data	62
5.7.4 Clearing Position Data, Clearing All Position Data	63
5.8 Parameter Editing.....	67
5.9 Trial Operation	69
5.9.1 Jog/Inching Operation.....	71
5.9.2 Position Movement Operation	73
5.9.3 Direct Movement Operation	74
5.9.4 I/O Test.....	75
5.10 TP Operation Mode	76
5.11 Alarm List.....	77
5.12 Controller Restart	79
5.13 User Adjustment	80
5.14 Parameter Initialization	81
5.15 Axis Number Setting.....	83
5.16 Information Display.....	84
5.17 Environment Setting	85
5.18 Data Backup	89
6. Operation of SEP Controllers	90
6.1 Displayed Language Change	90
6.2 Transition of Operating States.....	91
6.3 Initial Screen	94
6.4 Initial Setting	95
6.5 Changing Operating Axis.....	96
6.6 Menu Selection.....	97
6.7 Monitor.....	98

6.8	Information.....	100
6.9	Alarm List.....	102
6.10	Position Setting (Setting of Position-related Data, Jog/Inching Operation).....	103
6.11	I/O Setting (Setting of Operation Parameters, Etc.).....	127
6.12	Parameters (Parameter Editing, Axis Number Setting, Parameter Initialization to Factory Default Settings, System Password).....	138
6.13	Test (I/O Tests, Operation Tests for Axis Movement).....	146
6.14	Environment set (Sound, Language, Auto Monitor, Display (Screen Adjustment)).....	151
6.15	Data Backup.....	154
7.	Operation of MEC Controllers.....	155
7.1	Displayed Language Change.....	155
7.2	Transition of Operating States.....	156
7.3	Initial Screen.....	160
7.4	Initial Setting.....	161
7.5	MEC Menu Selection.....	162
7.6	Initial Setting.....	163
7.7	Position Setting (Position Data Setting and Manual Axis Operation (Jogging, Inching)).....	168
7.8	Trial Operation.....	188
7.9	Information.....	190
7.10	Maintenance – Parameters.....	192
7.11	Maintenance – I/O Tests.....	200
7.12	Maintenance – Alarm List.....	201
7.13	Maintenance – Data Backup.....	203
7.14	Maintenance – Environment Setting.....	204
7.15	Monitor.....	207
8.	Error Display.....	208
8.1	Occurrence of Alarm.....	208
8.1.1	Alarms Detected by Controller.....	208
8.1.2	Alarms Detected by Touch-panel Teaching Pendant.....	208
8.2	Error Messages on Touch Panel.....	210
9.	Warranty.....	211
9.1	Warranty Period.....	211
9.2	Scope of Warranty.....	211
9.3	Honoring the Warranty.....	211
9.4	Limited Liability.....	211
9.5	Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications.....	212
9.6	Other Items Excluded from Warranty.....	212
10.	Change History.....	213

Safety Guide

“Safety Guide” has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

No.	Operation Description	Description
1	Model Selection	<ul style="list-style-type: none">• This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications.<ol style="list-style-type: none">1) Medical equipment used to maintain, control or otherwise affect human life or physical health.2) Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility)3) Important safety parts of machinery (Safety device, etc.)• Do not use it in any of the following environments.<ol style="list-style-type: none">1) Location where there is any inflammable gas, inflammable object or explosive2) Place with potential exposure to radiation3) Location with the ambient temperature or relative humidity exceeding the specification range4) Location where radiant heat is added from direct sunlight or other large heat source5) Location where condensation occurs due to abrupt temperature changes6) Location where there is any corrosive gas (sulfuric acid or hydrochloric acid)7) Location exposed to significant amount of dust, salt or iron powder8) Location subject to direct vibration or impact• Do not use the product outside the specifications. Failure to do so may considerably shorten

No.	Operation Description	Description
2	Transportation	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • Consider well so that it is not bumped against anything or dropped during the transportation. • Transport it using an appropriate transportation measure. • Do not step or sit on the package. • Do not put any heavy thing that can deform the package, on it. • When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. • When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment's capability limit. • Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. • Do not get on the load that is hung on a crane. • Do not leave a load hung up with a crane. • Do not stand under the load that is hung up with a crane.
3	Storage and Preservation	<ul style="list-style-type: none"> • The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation.
4	Installation and Start	<p>(1) Installation of Robot Main Body and Controller, etc.</p> <ul style="list-style-type: none"> • Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. • Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. • When using the product in any of the places specified below, provide a sufficient shield. <ol style="list-style-type: none"> 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location with the mains or power lines passing nearby 4) Location where the product may come in contact with water, oil or chemical droplets <p>(2) Cable Wiring</p> <ul style="list-style-type: none"> • Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool. • Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error. • Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error. • When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction. • Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product. • Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire.





No.	Operation Description	Description
4	Installation and Start	<p>(3) Grounding</p> <ul style="list-style-type: none"> ● Make sure to perform the grounding of type D (Former Type 3) for the controller. The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation. <p>(4) Safety Measures</p> <ul style="list-style-type: none"> ● When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. ● When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot's movable range. When the robot under operation is touched, it may result in death or serious injury. ● Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. ● Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine suddenly and cause an injury or damage to the product. ● Take the safety measure not to start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. ● When the installation or adjustment operation is to be performed, give clear warnings such as "Under Operation; Do not turn ON the power!" etc. Sudden power input may cause an electric shock or injury. ● Take the measure so that the work part is not dropped in power failure or emergency stop. ● Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. ● Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. ● When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity.

No.	Operation Description	Description
5	Teaching	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign “Under Operation” at the position easy to see. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>
6	Trial Operation	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation. • When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation. • Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc. • Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction.
7	Automatic Operation	<ul style="list-style-type: none"> • Before the automatic operation is started up, make sure that there is nobody inside the safety protection fence. • Before the automatic operation is started up, make sure that all the related peripheral machines are ready for the automatic operation and there is no error indication. • Make sure to perform the startup operation for the automatic operation, out of the safety protection fence. • In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product. • When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure.

No.	Operation Description	Description
8	Maintenance and Inspection	<ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the “Stipulations for the Operation” and make sure that all the workers acknowledge and understand them well. • When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign “Under Operation” at the position easy to see. • For the grease for the guide or ball screw, use appropriate grease according to the Operation Manual for each model. • Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p>
9	Modification and Dismantle	<ul style="list-style-type: none"> • Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion.
10	Disposal	<ul style="list-style-type: none"> • When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. • Do not put the product in a fire when disposing of it. The product may burst or generate toxic gases.

Alert Indication

The safety precautions are divided into “Danger”, “Warning”, “Caution” and “Notice” according to the warning level, as follows, and described in the Operation Manual for each model.

Level	Degree of Danger and Damage	Symbol
Danger	This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury.	 Danger
Warning	This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury.	 Warning
Caution	This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage.	 Caution
Notice	This indicates lower possibility for the injury, but should be kept to use this product properly.	 Notice

Handling Precautions

- In this touch panel teaching, the language to be displayed can be changed.
Refer to the followings for the way how to change.
 - CON System Controllers 5.1 Displayed Language Change
 - SEP Controllers 6.1 Displayed Language Change
 - MEC Controllers 7.1 Displayed Language Change
- Be careful not to apply mechanical shocks on this touch-panel teaching pendant CON-PT/CON-PD/CON-PG. Failure may occur.
- When operating this touch-panel teaching pendant CON-PT/CON-PD/CON-PG, be sure to hold the teaching pendant to prevent the cables from receiving unnecessary tensile loads.



Caution

- This touch-panel teaching pendant CON-PT/CON-PD/CON-PG is exclusively designed for use with IAI controllers. Never connect it to other equipment.
Failure may occur.

Product Check

This product, if adopting a standard configuration, consists of the parts listed below.


1. Component (excluding options)

No.	Product name	Model number	Remarks
1	Teaching pendant	Refer to "How to Read Model Nameplate" and "How to Read Model Number."	
Accessories			
2	Touch pen	Built into teaching pendant	
3	First step guide		
4	Operation manual (CD/DVD)		
5	Safety guide		


2. Operation manual related to this product, stored in the CD/DVD

No.	Name	Control number
1	Operation manual for touch-panel teaching pendant CON-PT/CON-PD/CON-PG	ME0227
2	Operation manual for actuator integrated with ERC2 controller (PIO type)	ME0158
3	Operation manual for actuator integrated with ERC2 controller (SIO type)	ME0159
4	Operation manual for PCON-C/CG/CF controller	ME0170
5	Operation manual for PCON-CY controller	ME0156
6	Operation manual for PCON-SE controller	ME0163
7	Operation manual for PCON-PL/PO controller	ME0164
8	Operation manual for ACON-C/CG controller	ME0176
9	Operation manual for ACON-CY controller	ME0167
10	Operation manual for ACON-SE controller	ME0171
11	Operation manual for ACON-PL/PO controller	ME0166
12	Operation manual for SCON controller	ME0161
13	Operation manual for SCON-CA	ME0243
14	Operation manual for ROBONET	ME0208
15	Operation manual for ASEP/PSEP controller	ME0216
16	Operation manual for PMEC/AMEC controller	ME0245

3. How to Read Model Nameplate



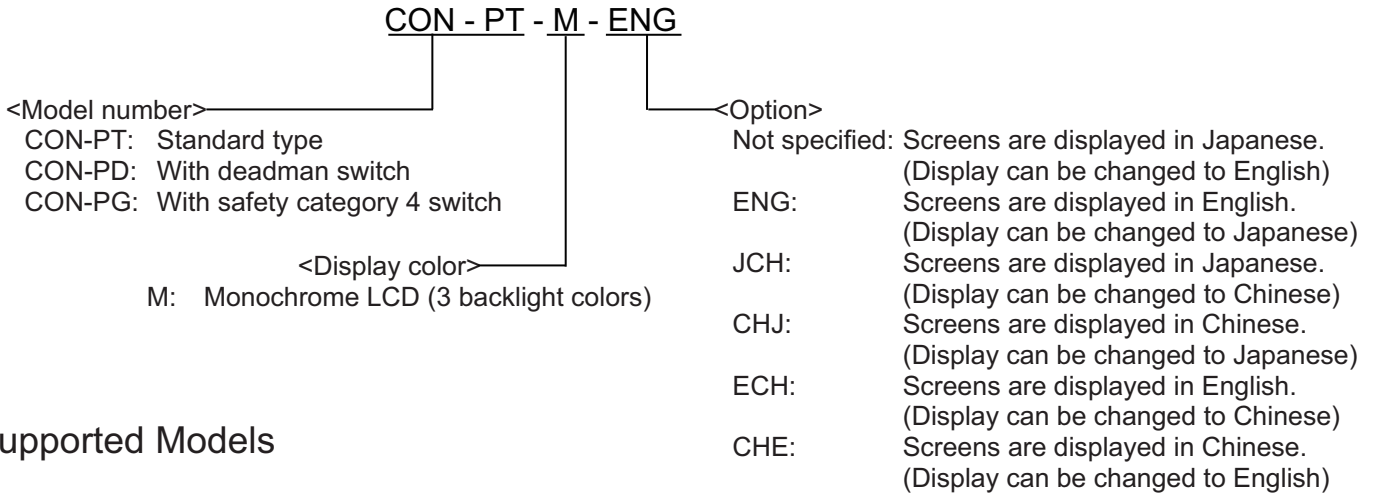4. How to Read Model Number



Supported Models

The table below lists supported models.

List of Supported Models

Controller model
ERC2 ^{*1}
ACON
PCON
SCON ^{*2}
RACON
RPCON
ASEP
PSEP
AMEC
PMEC

*1 Whether or not ERC2 is supported can be checked on the sticker attached to the left side face of the cover (as viewed from the rear).

*2 SCON-CA is supported from version 1.20.

Information on sticker

I/O type	Not supported	Supported
NP	NP U5 M	NP T1 4904
PN	PN U3 M	PN T1 4904

Note that touch-panel teaching pendants can be connected to ERC2 controllers of SIO type via a SIO converter regardless of their version.

1. Basic Specification


This touch-panel teaching pendant is a display operation unit you can use to display or edit data saved in the controller as a result of communication with the controller (parameter data, position data, etc.). This unit is used for checking teaching alarms or performing other tasks in an offline state when no host PLC, etc., is connected.

Item	Specifications
	Monochrome LCD type
Power consumption	2.4 W or less (100 mA or less)
Surrounding air temperature, humidity	Temperature 0 to 50°C, humidity 20 to 85% RH (non-condensing)
Ambient storage temperature, humidity	Temperature -20 to 60°C, humidity 10 to 85% RH (non-condensing)
Vibration resistance	10 to 55 Hz (1-minute period) based on reversed amplitude of 0.75 mm in X, Y and Z directions for 10 minutes
Impact resistance	98 m/s ² or more, applied 4 times each in X, Y and Z directions
Environmental resistance	IP 40 or equivalent
Dimension	180 mm (H) x 132 mm (W) x 92.1 mm (D)
Mass	Approx. 780 g (including 5 m of cable)
Cable length	5 m (standard)
Accessories	Touch pen


Language Change

Model	Displayed Language (in Delivery)	Available Language
CON-PT-M-ENG	English	Japanese
CON-PT-M-ECH	English	Chinese

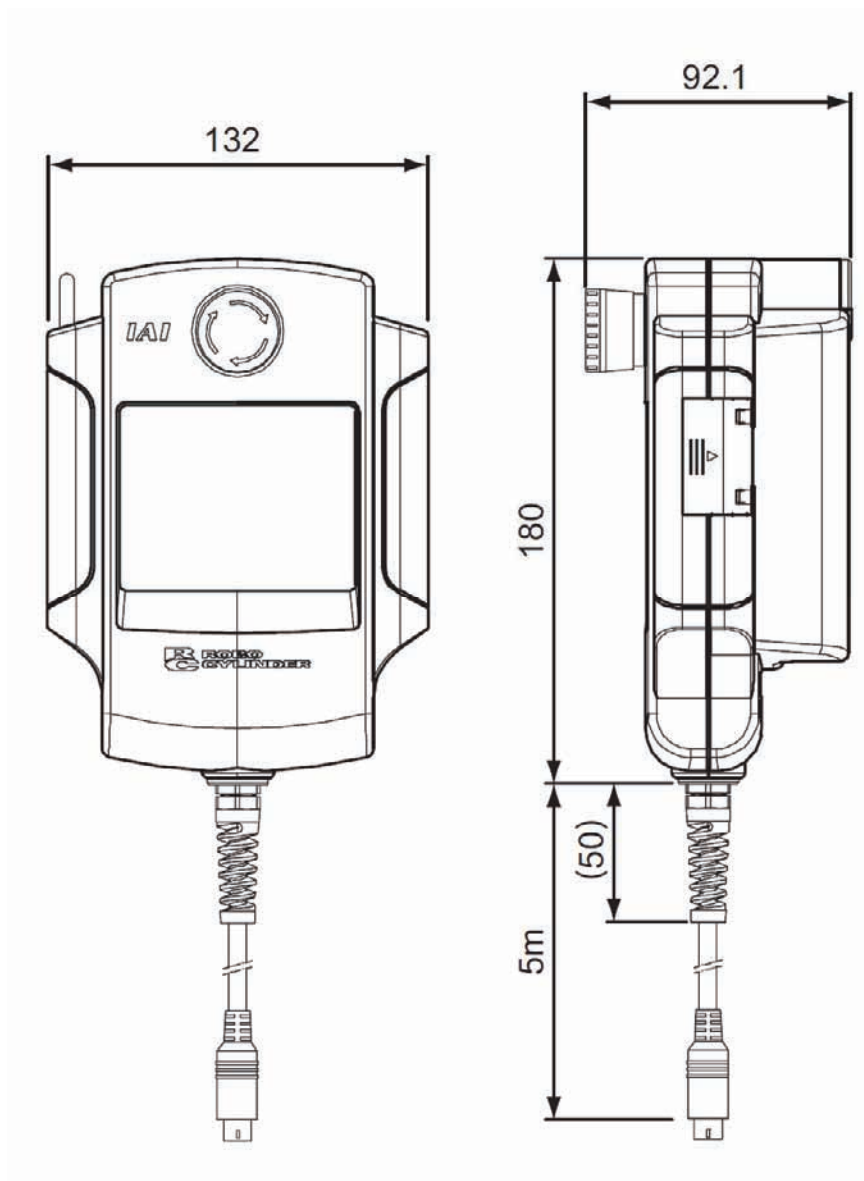External Dimensions



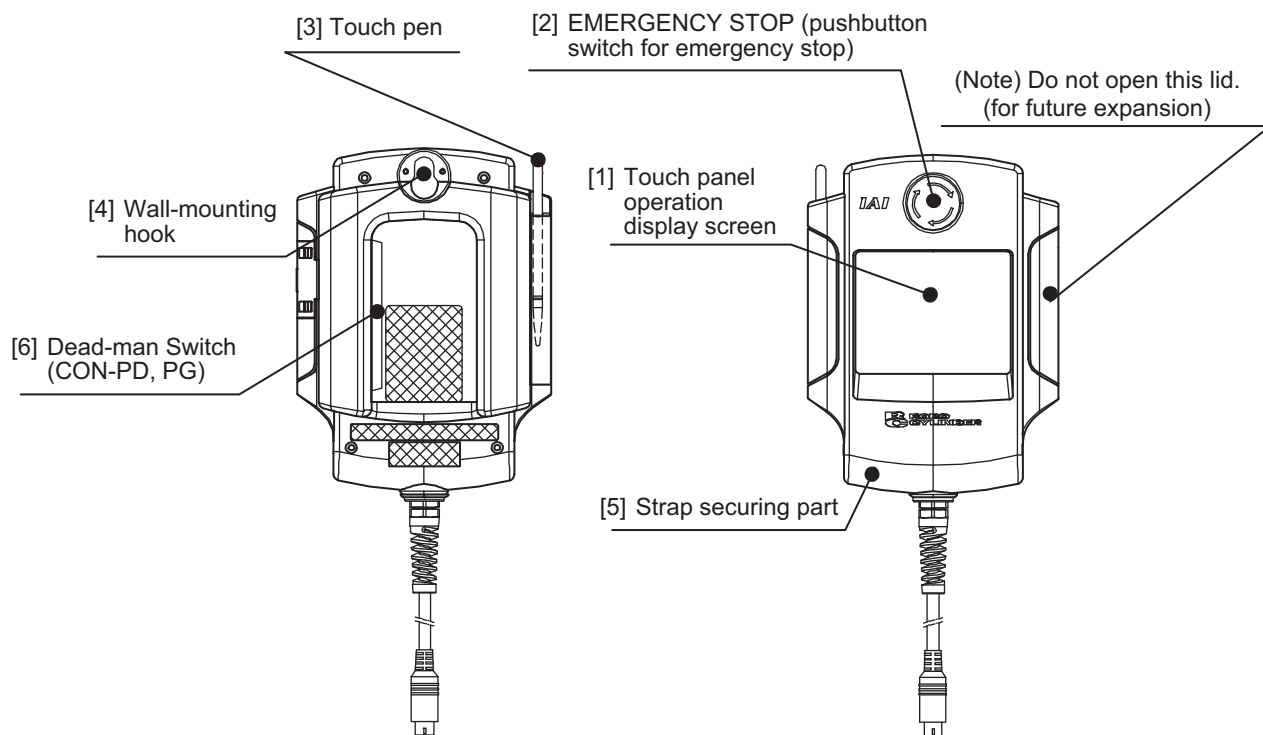2. Explanation of Each Part



- [1] Touch-panel operation display screen
The screen consists of a STN monochrome LCD and a touch panel. Various settings that have been edited or taught are displayed. To operate the screen, use a finger or the touch pen to touch ^(Note 1) desired parts of the touch panel.
- (Note 1) This touch panel is of analog resistance membrane type, so do not touch two or more locations on the screen at the same time.
If two or more locations are touched at the same time, the centers of all touched locations may respond and trigger multiple operations.
- (Note 2) When operating the touch panel, do not apply a force exceeding 0.5 N.
If any greater force is applied, the touch panel may be damaged.
- (Note 3) The life of touch panel is approx. 1 million touches at the same location. (Assuming a use environment of 25°C)
- [2] EMERGENCY STOP (Pushbutton switch for emergency stop)
This switch actuates an emergency stop.
- [3] Touch pen
This touch pen is used to touch the touch-panel operation display screen.
- [4] Wall-mounting hook
This hook is used to mount the touch panel on a wall.
- [5] Strap securing part
This part is used to attach a strap (optional).

[6] Dead-man Switch (CON-PD, PG)

There are three stages for the dead-man switch. The ON/OFF in each stage are described as follows.

1st Stage	Switch OFF	The condition where finger is released from the switch, or the force of pressing the switch is very weak.
2nd Stage	Switch ON	Condition where the switch is pressed with appropriate force.
3rd Stage	Switch OFF	Condition where the switch is pressed strongly.

The servo-motor can be turned ON under the switch ON condition.

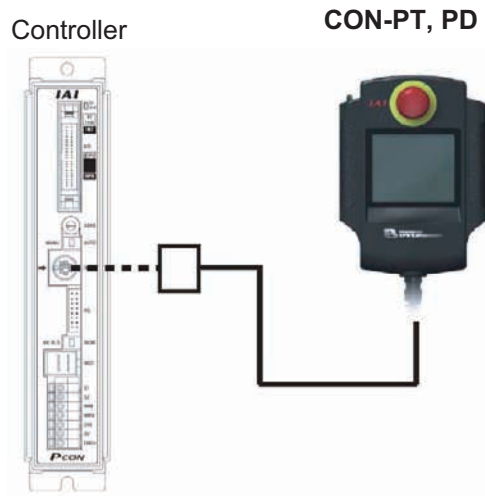
When the switch is turned OFF, the driving power source is disconnected and the servo-motor is turned OFF.

Even when the switch is turned OFF, the operations in the modes where turning ON the servo-motor is not required are available. (such as edit mode)


3. Connection and Disconnection to/from Controller

The touch-panel teaching pendant CON-PT can be connected or disconnected without turning off the controller power first.

If an alarm occurs, the CON-PT can be connected while the controller power is still supplied, to check the details of the alarm.



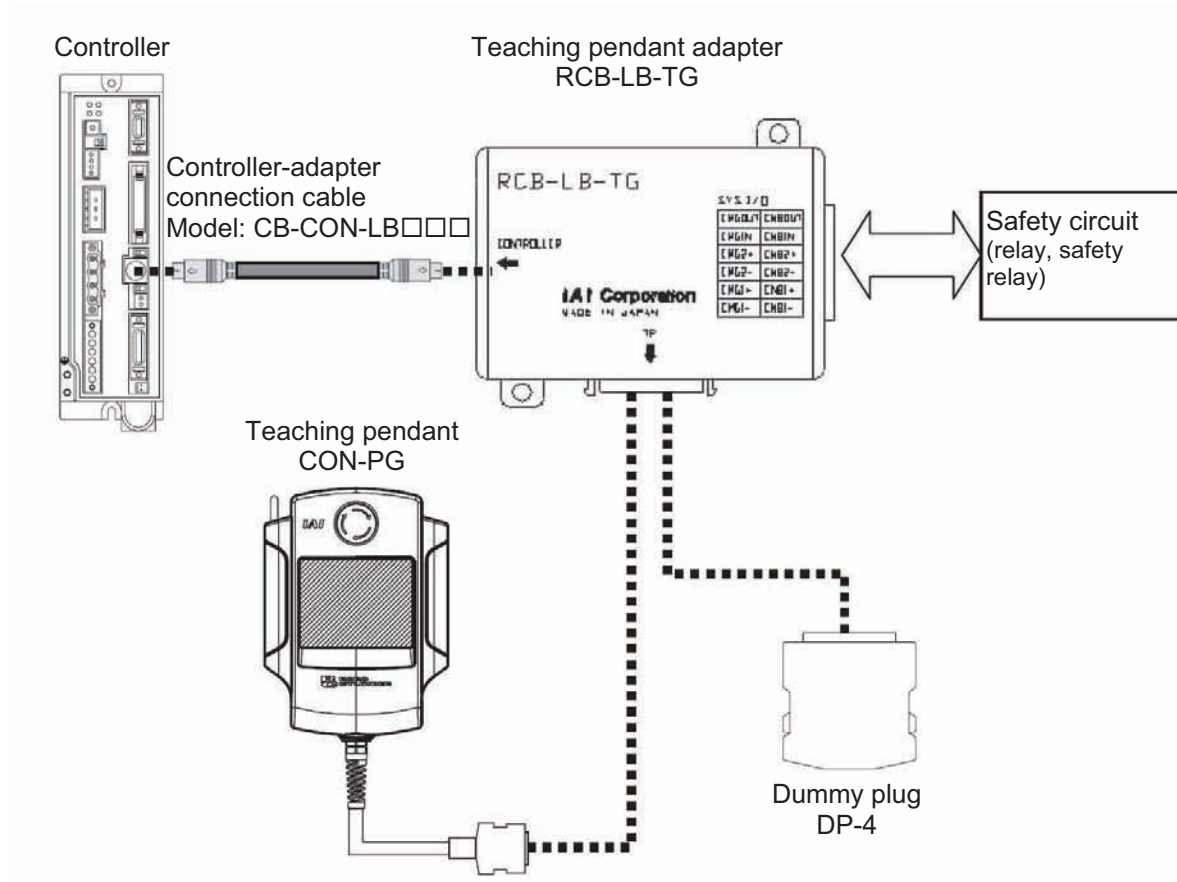4. Connection of CON-PG and Controller



Caution: While the teaching pendant CON-PG is not connected, be sure to connect the dummy plug DP-4 to the teaching pendant adapter.

5. Operation of CON Controllers

CON controllers: ERC2, ACON, PCON, SCON, RACON, RPCON

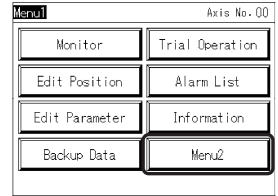
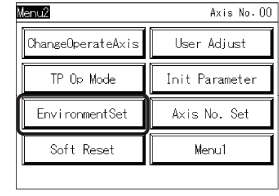
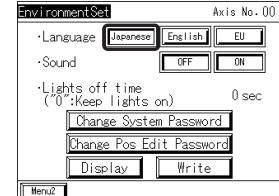
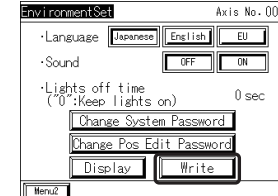
5.1 Displayed Language Change

The language can be changed by following the steps below.





For the operations after the language change, please refer to the instruction manual written in each language.

Model: CON-PT-M-ENG CON-PT-M-JCH

Display change from English to Japanese





 <p>Touch [Menu2] in Menu1.</p>	 <p>Touch [EnvironmentSet] in Menu2.</p>	 <p>Touch [Japanese].</p>	 <p>Touch [Write].</p>
--	---	---	---

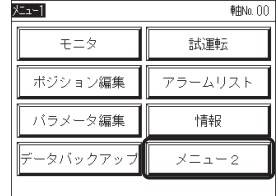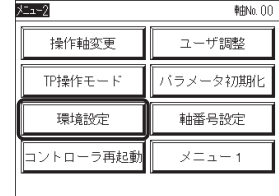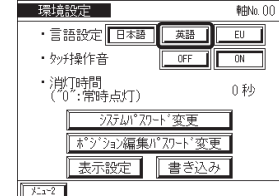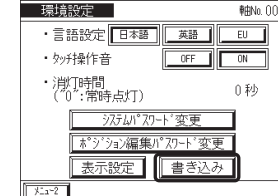Display change from Japanese to English





 <p>Touch [メニュー2] in メニュー1.</p>	 <p>Touch [環境設定] in メニュー2.</p>	 <p>Touch [英語].</p>	 <p>Touch [書き込み].</p>
---	--	--	---

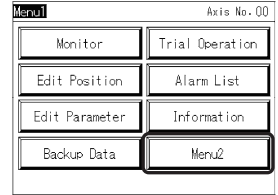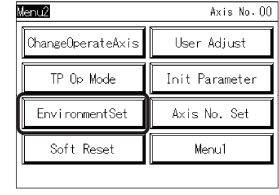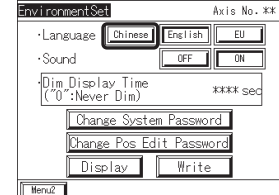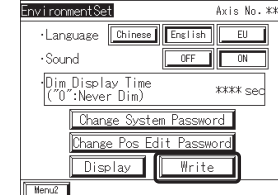Model: CON-PT-M-ECH CON-PT-M-CHE

Display change from English to Chinese


 <p>Touch [Menu2] in Menu1.</p>	 <p>Touch [EnvironmentSet] in Menu2.</p>	 <p>Touch [Chinese].</p>	 <p>Touch [Write].</p>
--	---	--	---

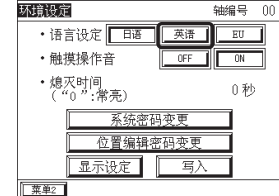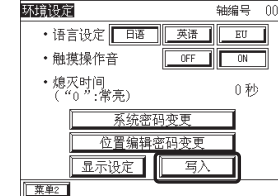Display change from Chinese to English

 <p>Touch [菜单2] in 菜单1.</p>	 <p>Touch [环境设定] in 菜单2.</p>	 <p>Touch [英语].</p>	 <p>Touch [写入].</p>
--	---	---	--

5.2 Transition of Operating States

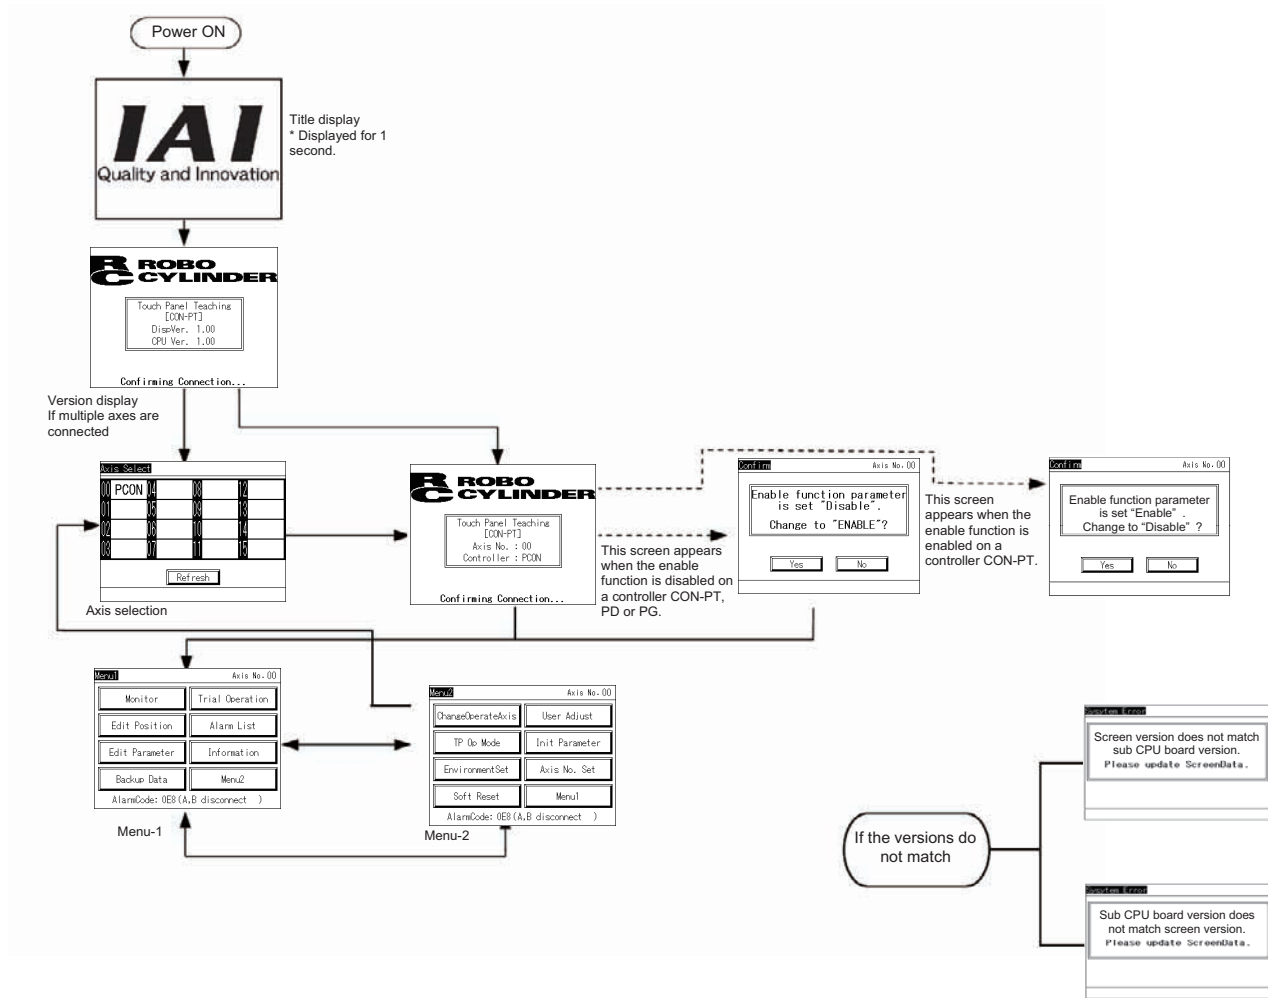
Transition of operating states when the touch-panel teaching pendant CON-PT is connected to a CON controller is shown.




Menu-1

Monitor

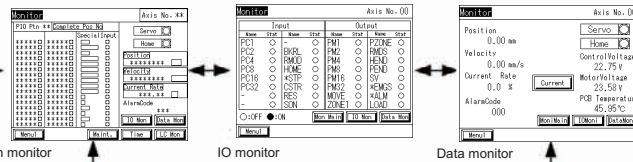
Models other than SCON-CA



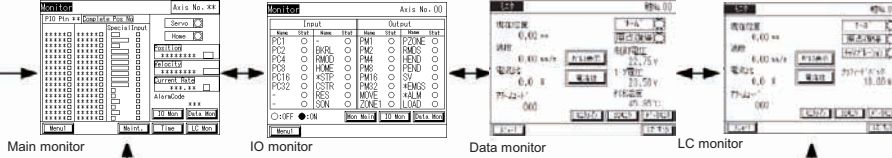
SCON-CA (CON-PT version 1.20 or later, but before 2.00)



SCON-CA (CON-PT Version 2.00 or Later)

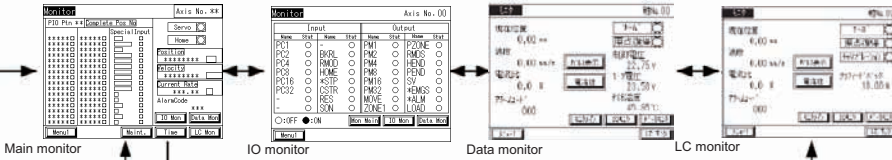

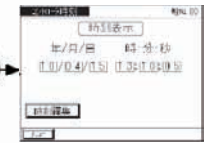When the [Time] switch is pressed on the monitor screen




Position editing

Maintenance information screen

Maintenance information screen in edit mode




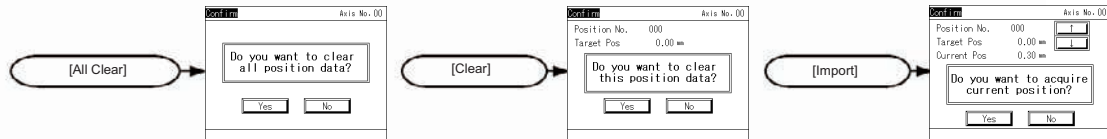When editing password is entered





Alarm List

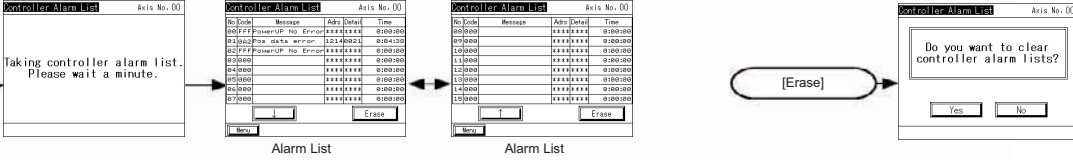
Models other than SCON-CA



SCON-CA

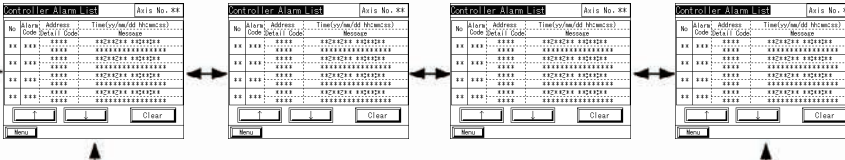

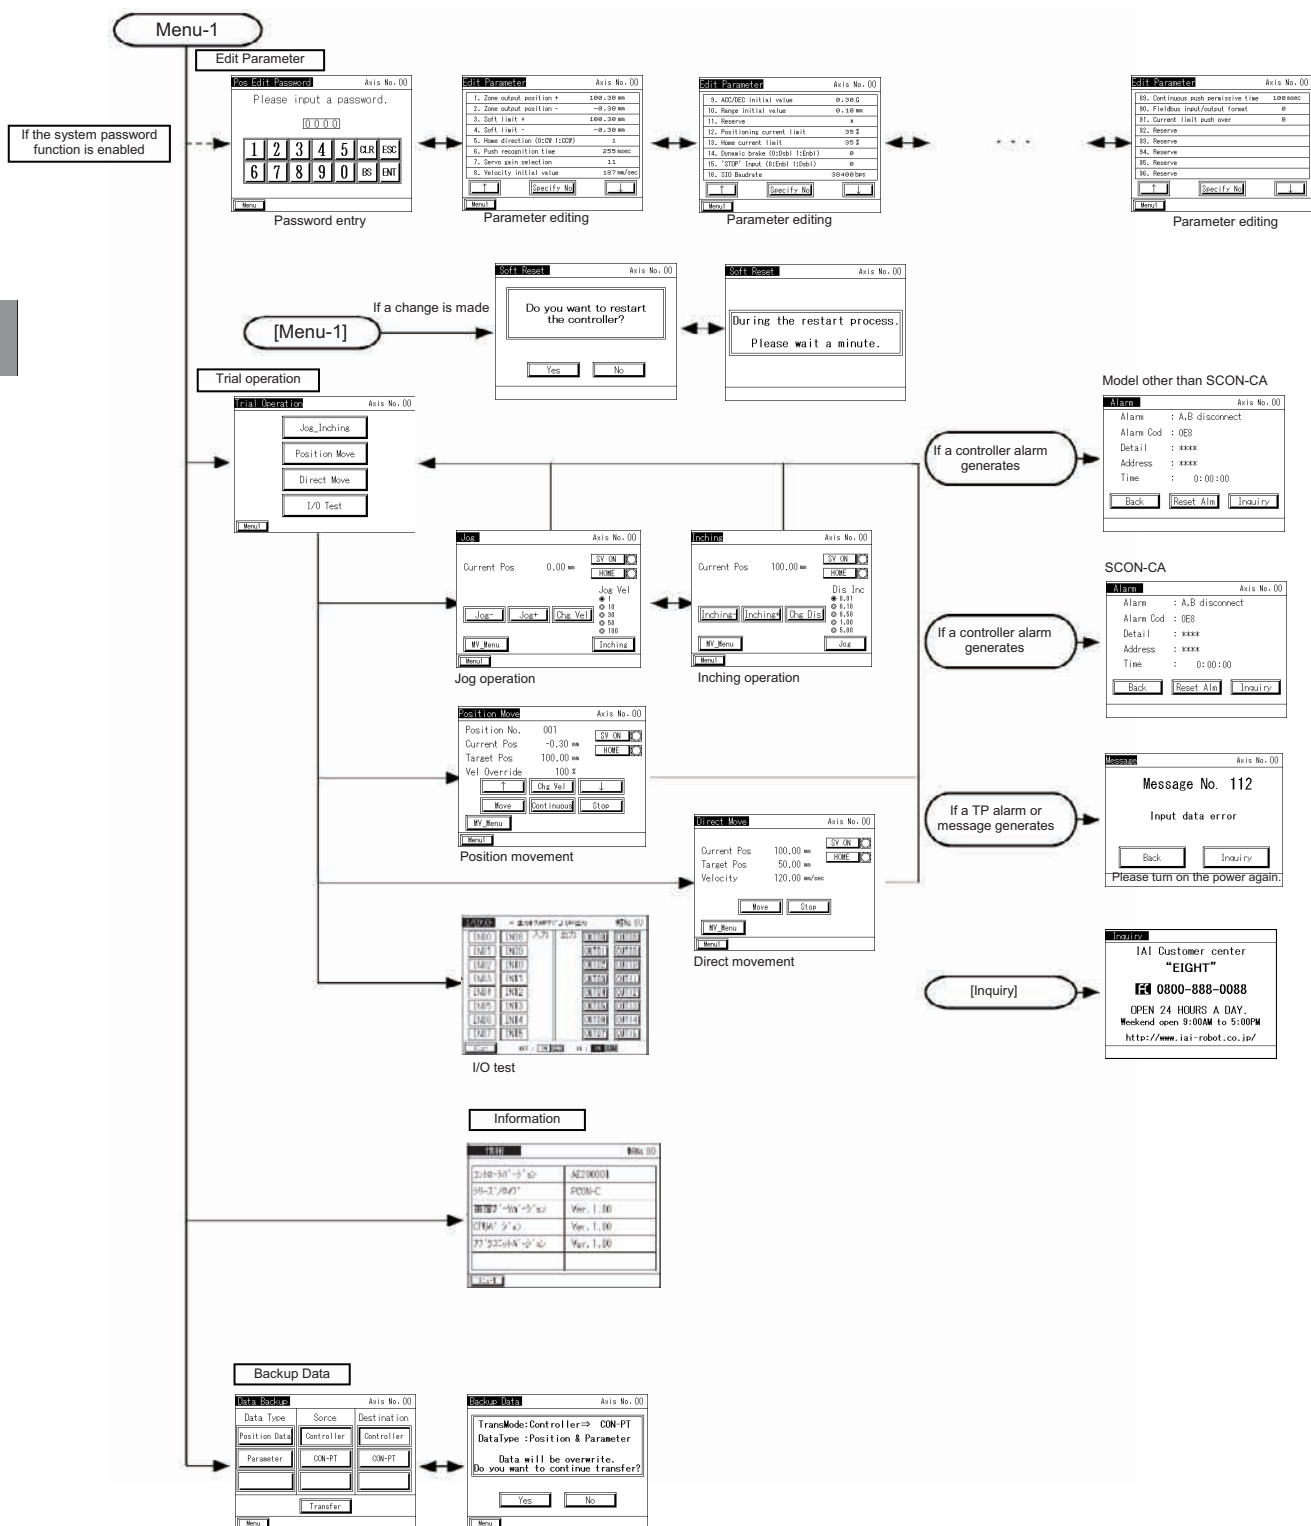


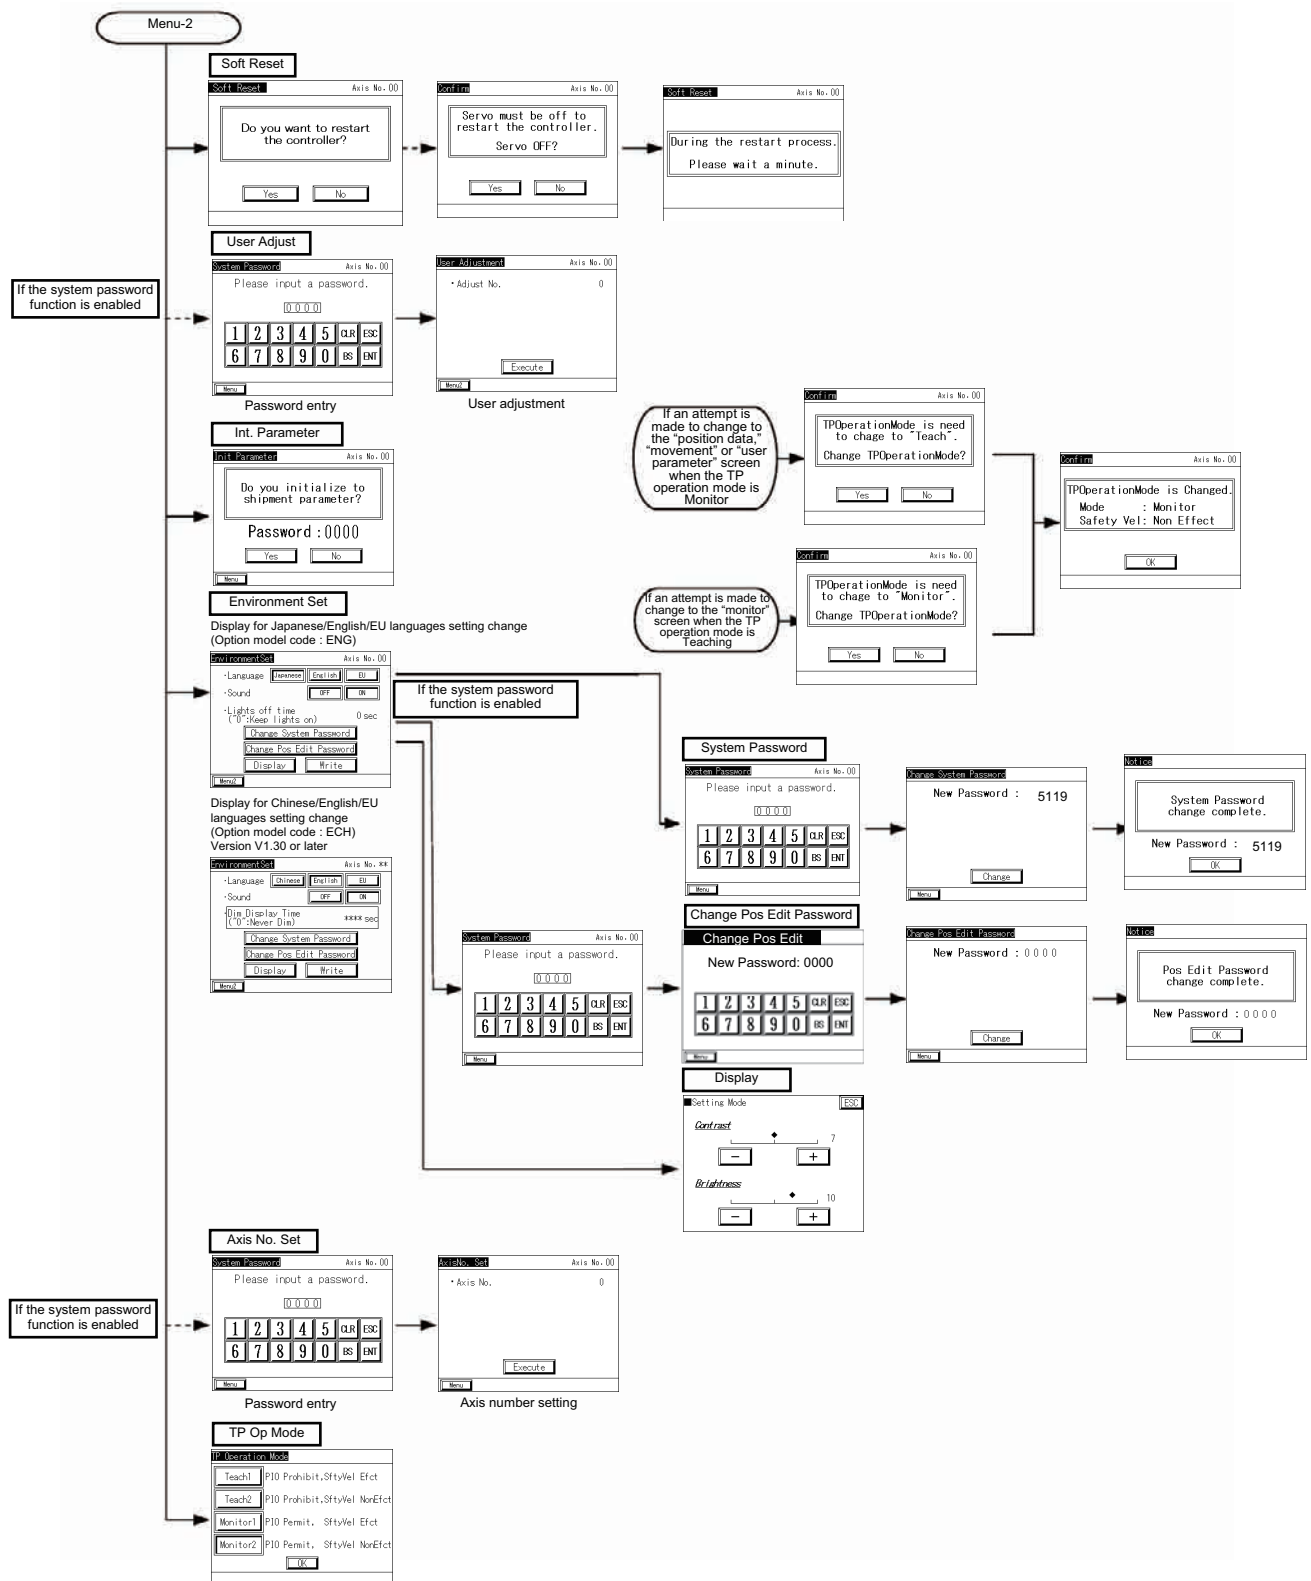

5.3 Initial Screen

Upon connection to the controller, power is supplied to the touch-panel teaching pendant and processing starts.

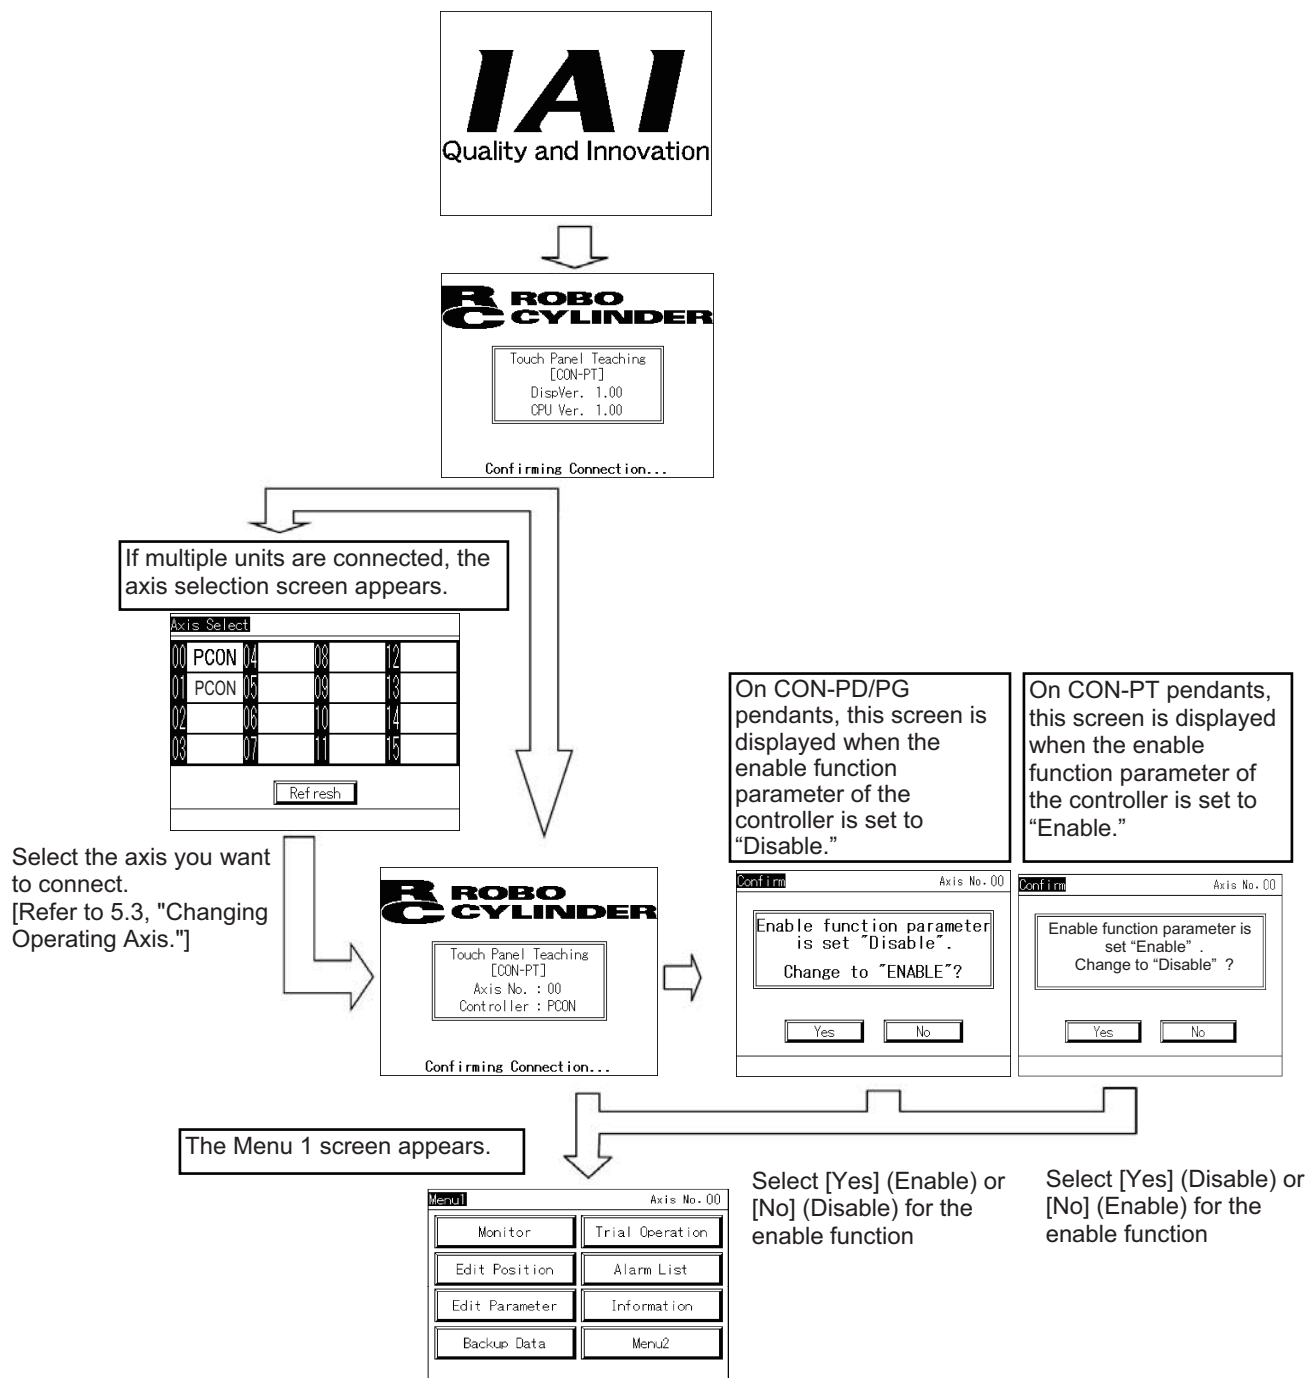When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen (hereinafter referred to as "operation screen") of the touch-panel teaching pendant, after which version information is displayed.



5.4 Changing Operating Axis

If multiple controllers are connected to the communication line, the axis selection screen appears. This screen also appears when [Change Operate Axis] is touched on the Menu 2 screen. If only one controller is connected, you need not select an axis.

Axis Select			
00	PCON	04	08
01	PCON	05	09
02	ACON	06	10
03		07	11
			12
			13
			14
			15

Refresh

Select and touch the axis you want to connect the touch-panel teaching pendant to.

Confirm	Axis No. 00
Enable function parameter is set "Disable". Change to "ENABLE"?	
Yes	No

This screen appears when the enable function parameter of the controller, other than CON-PT, is set to [Disable]. Select and touch [Yes] (Enable) or [No] (Disable) for the enable function.


ROBO CYLINDER
Touch Panel Teaching [CON-PT] Axis No. : 00 Controller : PCON
Confirming Connection...

Connection with the selected controller axis starts.

Menu1	Axis No. 00
Monitor	Trial Operation
Edit Position	Alarm List
Edit Parameter	Information
Backup Data	Menu2
AlarmCode: 0E8 (A,B disconnect)	

When connection with the controller is established, the Menu 1 screen appears.

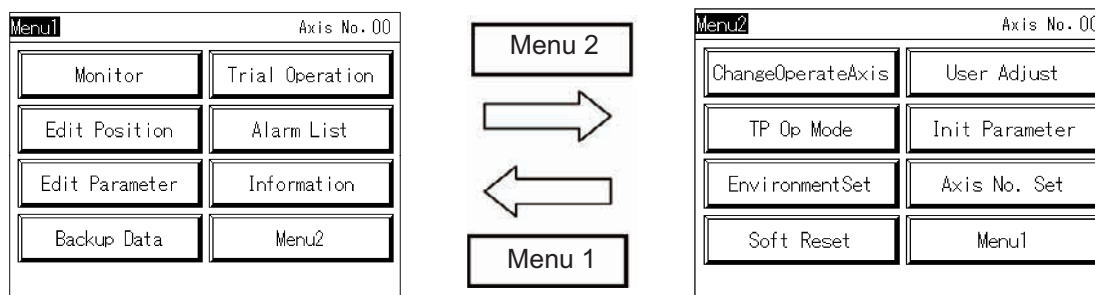Menu 1



The Menu 1 screen and Menu 2 screen provide seven menu items, respectively. Select and touch one of these items.

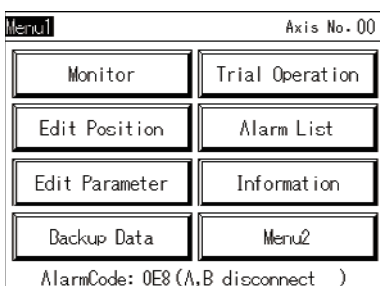
The screen changes to the one corresponding to the menu item you have touched.

- Monitor
- Edit Position
- Edit Parameter
- Trial Operation
- Alarm List
- Information
- Backup Data

Transfer data between the memory of the touch-panel teaching pendant and the controller. [Refer to 5.18, "Data Backup."]

- Change Operating Axis
- Soft Reset
- TP Op Mode
- User Adjust
- Init Parameter
- Axis No. Set
- Environment Set


Set the language and touch tone, change the system password, etc.
[Refer to 5.17, "Environment Setting."]



When an alarm generates, the corresponding alarm code and message will appear at the bottom of the screen and the backlight color will change to pink. If an emergency stop is detected, the backlight color will change to red.


5.6 Monitor

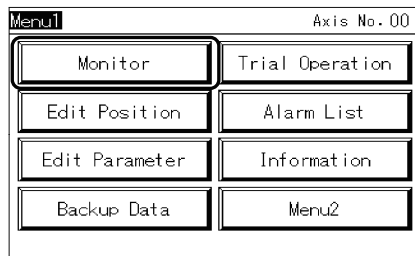The I/O statuses, current position and other information of the controller connected to the serial communication line are displayed.




Touch [Monitor] on the Menu 1 screen.

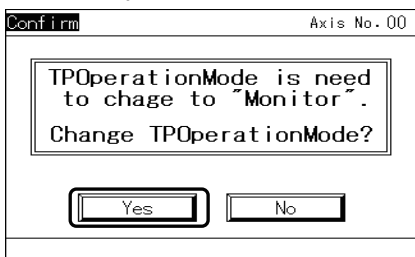If the TP operation mode is not Monitor Mode 1 or 2, the following message screen appears.




Touch [Yes] to change to Monitor Mode 1 or 2.
If not, touch [No].

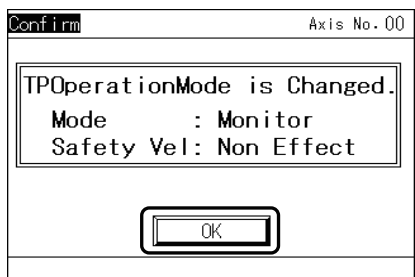(Note) The safety speed does not change.
If the current mode is Teaching Mode 1, it changes to Monitor Mode 1.
If the current mode is Teaching Mode 2, it changes to Monitor Mode 2.




Touch [OK].

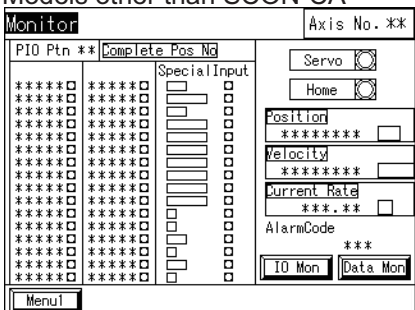Models other than SCON-CA




The main monitor screen appears.

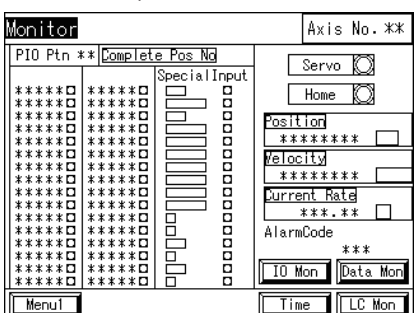SCON-CA (CON-PT version 1.20 or later, but before 2.00)



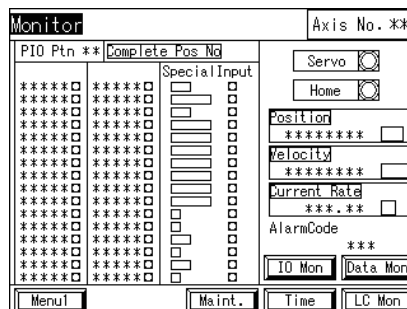SCON-CA (CON-PT version 2.00 or later)
Maintenance information can be displayed.



The main monitor screen appears.
Models other than SCON-CA

Touching [IO Mon] changes the display to one showing only I/Os.

Touching [Data Mon] changes the display to one showing only the current position, etc.

Touching Axis No. switches to the axis selection screen.

SCON-CA (CON-PT version 1.20 or later, but before 2.00)

Touching [IO Mon] changes the display to show only I/Os.

Touching [Data Mon] changes the display to show data such as the current position and control voltage.

Touching [LC Mon] changes the display to show data such as the current position and force feedback.

Touching [Axis No.] switches the screen to one where you can select an axis.

[Displayed Items]

- IO Pattern The PIO pattern number set to the controller is shown.
- Complete Pos No The position number achieved upon completion of positioning is shown.
- IN The status of each input port is shown. ON is lit. OFF is unlit.
- OUT The status of each output port is shown. ON is lit. OFF is unlit.
- Special Input The statuses of the enable switch, etc., are shown. ON is lit. OFF is unlit.
(The displayed items vary depending on the model.)
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- Position The current position is shown.
- Velocity The speed is shown.
- Current Rate The command value of electrical current is shown as a percentage of the rated current.
- Alarm Code The applicable alarm code is shown.

SCON-CA (CON-PT version 2.00 or later)

The screenshot displays the 'Monitor' screen with the following components:

- Header:** 'Monitor' on the left and 'Axis No. *K' on the right.
- Main Data Area:**
 - P10 Ptn **** and **Complete Pos No** are at the top left.
 - Special Input** is a central section with 16 rows of status indicators (checkboxes and bars).
 - Servo** and **Home** status indicators are on the right.
 - Position** and **Velocity** readouts show '*****' values.
 - Current Rate** shows '***.**'.
 - AlarmCode** shows '***'.
 - IO Mon** and **Data Mon** are at the bottom right.
- Footer:** 'Menu1', 'Maint.', 'Time', and 'LC Mon' are at the bottom.

Touching [IO Mon] changes the display to show only IOs.

Touching [Maintenance] changes the display to show maintenance information.

Touching [Data Mon] changes the display to show data such as the current position and control voltage.

Touching [LC Mon] changes the display to show data such as the current position and force feedback.

Touching [Axis No.] switches the screen to one where you can select an axis

[Displayed Items]

- IO Pattern
 - Complete Pos No
 - IN
 - OUT
 - Special Input
-
- Servo
 - Home
 - Position
 - Velocity
 - Current Rate
-
- Alarm Code

The PIO pattern number set to the controller is shown.

The position number achieved upon completion of positioning is shown.

The status of each input port is shown. ON is lit. OFF is unlit.

The status of each output port is shown. ON is lit. OFF is unlit.

The statuses of the enable switch, etc., are shown. ON is lit. OFF is unlit. (The displayed items vary depending on the model.)

The servo ON status is shown. ON is lit. OFF is unlit.

The home return status is shown. Lit, if home return has completed.

The current position is shown.

The speed is shown.

The command value of electrical current is shown as a percentage of the rated current.

The applicable alarm code is shown.

Models other than SCON-CA IO monitor screen

The screenshot shows the 'IO monitor' screen. At the top, there's a 'Monitor' label and an 'Axis No. 00' field. Below this is a table with two main sections: 'Input' and 'Output'. Each section has columns for 'Name' and 'Stat' (Status). The 'Input' section lists ports PC1 through PC32, with some having specific names like BKRL, RMOD, HOME, *STP, CSTR, RES, and SON. The 'Output' section lists ports PM1 through PM32, with some having specific names like PZONE, RMDS, HEND, PEND, SV, *EMGS, *ALM, and LOAD. Below the table, there are three buttons: 'MoniMain', 'IOMoni', and 'DataMoni'. At the bottom left, there's a 'Menu1' button. A legend at the bottom indicates that an open circle represents 'OFF' and a filled circle represents 'ON'.

Input				Output			
Name	Stat	Name	Stat	Name	Stat	Name	Stat
PC1	○	-	○	PM1	○	PZONE	○
PC2	○	BKRL	○	PM2	○	RMDS	○
PC4	○	RMOD	○	PM4	○	HEND	○
PC8	○	HOME	○	PM8	○	PEND	○
PC16	○	*STP	○	PM16	○	SV	○
PC32	○	CSTR	○	PM32	○	*EMGS	○
-	○	RES	○	MOVE	○	*ALM	○
-	○	SON	○	ZONE1	○	LOAD	○

○:OFF ●:ON

MoniMain IOMoni DataMoni

Menu1

- Input
- Output

The status of each input port is shown. ON is lit. OFF is unlit.
The status of each output port is shown. ON is lit. OFF is unlit.

Models other than SCON-CA Data monitor screen

The screenshot shows the 'Data monitor' screen. At the top, there's a 'Monitor' label and an 'Axis No. 00' field. Below this, there are several data fields: 'Position' (0.00 mm), 'Velocity' (0.00 mm/s), 'Current Rate' (0.0 %), and 'AlarmCode' (000). To the right of these fields are two status indicators: 'Servo' and 'Home', each with a circle and a crosshair. Below the data fields, there are three buttons: 'Pulse count', 'Current', and 'Control Voltage'. To the right of these buttons are two more data fields: 'MotorVoltage' (23.58 V) and 'PCB Temperature' (45.95°C). At the bottom, there are three buttons: 'MoniMain', 'IOMoni', and 'DataMoni'. At the bottom left, there's a 'Menu1' button.

Position 0.00 mm

Velocity 0.00 mm/s

Current Rate 0.0 %

AlarmCode 000

Servo

Home

Pulse count

Current

Control Voltage 22.75 V

MotorVoltage 23.58 V

PCB Temperature 45.95°C

MoniMain IOMoni DataMoni

Menu1

- Position
- Velocity
- Pulse count
- Current Rate
- Current
- AlarmCode
- Servo
- Home
- ControlVoltage
- MotorVoltage
- PCB Temperature

The current position is shown.
The speed is shown.
The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)
The command value of electrical current is shown as a percentage of the rated current.
The command value of electrical current is shown. Touch [Current Rate] to display the command value.
The applicable alarm code is shown.
The servo ON status is shown. ON is lit. OFF is unlit.
The home return status is shown. Lit, if home return has completed.
The voltage of the control power supply is shown.
The voltage of the motor power supply is shown.
The PCB temperature is shown.

Touching [MoniMain] switches to the main monitor display.
Touching [DataMoni] changes the display to one showing only the current position, etc.
Touching Axis No. switches to the axis selection screen.

Touching [MoniMain] switches to the main monitor display
Touching [IOMoni] changes the display to one showing only I/Os.
Touching Axis No. switches to the axis selection screen.
Touch [Current] to display [Current Rate].
Touch [Current Rate] to display [Current]

SCON-CA IO monitor screen

The IO monitor screen displays the status of input and output ports. It includes a title bar with 'Monitor' and 'Axis No. 00'. Below the title bar, there are two main sections: 'Input' and 'Output'. Each section has a table with columns for 'Name', 'Stat', and 'Name', 'Stat'. The 'Input' section lists ports PC1, PC2, PC4, PC8, PC16, PC32, and their corresponding status (ON/OFF). The 'Output' section lists ports PM1, PM2, PM4, PM8, PM16, PM32, and their corresponding status (ON/OFF). At the bottom, there are buttons for 'MoniMain', 'IOMoni', 'DataMoni', 'Menu1', and 'LC Moni'. A legend at the bottom left indicates that a circle with a dot represents 'ON' and a circle with a horizontal line represents 'OFF'.

Input				Output	
Name	Stat	Name	Stat	Name	Stat
PC1	○	-	○	PM1	○
PC2	○	BKRL	○	PM2	○
PC4	○	RMOD	○	PM4	○
PC8	○	HOME	○	PM8	○
PC16	○	*STP	○	PM16	○
PC32	○	CSTR	○	PM32	○
-	○	RES	○	MOVE	○
-	○	SON	○	ZONE1	○

○:OFF ●:ON

Buttons: MoniMain, IOMoni, DataMoni, Menu1, LC Moni

- Input
- Output

The status of each input port is shown. ON is lit. OFF is unlit.
The status of each output port is shown. ON is lit. OFF is unlit.

SCON-CA Data monitor screen

The Data monitor screen displays various data points for the selected axis. It includes a title bar with 'Monitor' and 'Axis No. 00'. The main area shows data for Position (0.00 mm), Velocity (0.00 mm/s), Current Rate (0.0 %), and AlarmCode (000). There are also buttons for 'Pulse count', 'Current', 'Servo', and 'Home'. At the bottom, there are buttons for 'MoniMain', 'IOMoni', 'DataMoni', 'Menu1', and 'LC Moni'. The right side of the screen shows 'ControlVoltage' (22.75 V), 'MotorVoltage' (23.58 V), and 'PCB Temperature' (45.95°C).

Position: 0.00 mm

Velocity: 0.00 mm/s

Current Rate: 0.0 %

AlarmCode: 000

Buttons: Pulse count, Current, Servo, Home

ControlVoltage: 22.75 V

MotorVoltage: 23.58 V

PCB Temperature: 45.95°C

Buttons: MoniMain, IOMoni, DataMoni, Menu1, LC Moni

- Position
- Velocity
- Pulse count

The current position is shown.

The speed is shown.

The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)

- Current Rate
- Current

The command value of electrical current is shown as a percentage of the rated current. The command value of electrical current is shown. Touch [Current Rate] to display the command value.

- AlarmCode

The applicable alarm code is shown.

- Servo

The servo ON status is shown. ON is lit. OFF is unlit.

- Home

The home return status is shown. Lit, if home return has completed.

- ControlVoltage

The voltage of the control power supply is shown.

- MotorVoltage

The voltage of the motor power supply is shown.

- PCB Temperature

The PCB temperature is shown.

Touching [MoniMain] switches to the main monitor display

Touching [Data Mon] changes the display to show data such as the current position and control voltage.

Touching [LC Mon] changes the display to show data such as the current position and force feedback.

Touching [Axis No.] switches the screen to one where you can select an axis.

Touching [MoniMain] switches to the main monitor display

Touching [IOMoni] changes the display to one showing only I/Os.

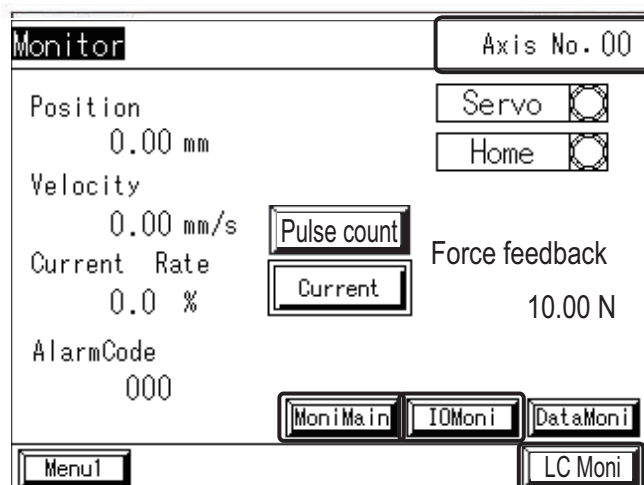
Touching [LC Mon] changes the display to show data such as the current position and force feedback.

Touching [Axis No.] switches the screen to one where you can select an axis.

Touch [Current] to display [Current Rate].

Touch [Current Rate] to display [Current]

SCON-CA LC monitor screen



Touching [MoniMain] switches to the main monitor display

Touching [IOMoni] changes the display to one showing only I/Os.

Touching [Data Mon] changes the display to show data such as the current position and control voltage.

Touch [Current] to display [Current Rate].

Touch [Current Rate] to display [Current]

- Position The current position is shown.
- Velocity The speed is shown.
- Pulse count The pulse count is shown. Touching [Pulse Count] displays the pulse count. (The pulse count is shown in the pulse-train control mode.)
- Current Rate The command value of electrical current is shown as a percentage of the rated current.
- Current The command value of electrical current is shown. Touch [Current Rate] to display the command value.
- AlarmCode The applicable alarm code is shown.
- Servo The servo ON status is shown. ON is lit. OFF is unlit.
- Home The home return status is shown. Lit, if home return has completed.
- Calibration The calibration status of the load cell is shown. Lit, if calibration of the load cell has been completed.
- Force feedback The force feed back from the load cell is shown.

SCON-CA (CON-PT version 2.00 or later)
Maintenance information screen

Maint. Info	Axis No. **
<ul style="list-style-type: none"> ▪ Total Moved Count ***** ▪ Total Run Dist. *****m 	
<input type="button" value="Info Edit"/>	
<input type="button" value="Menu"/>	

Touching [Info Edit] switches the screen to one where you can edit maintenance information.

- Total number of movements The cumulative total number of actuator movements is shown.
- Total travelled distance The cumulative total distance travelled by the actuator is shown.
The above values can be changed on the maintenance information editing screen.

[Thresholds for Total Number of Movements and Total Travelled Distance]

You can set thresholds for total number of movements and total travelled distance in the parameters specified below, to cause an alarm to generate when each threshold is exceeded.

Parameter No.	Name
147	Threshold for total number of movements
148	Threshold for total travelled distance

Message-level alarms

Alarm code	Name	Description
4E	Movements threshold exceeded	This alarm generates when the total number of movements exceeds the threshold set in parameter No. 147.
4F	Travelled distance threshold exceeded	This alarm generates when the total travelled distance exceeds the threshold set in parameter No. 148.

(1) Editing maintenance information

Maint. Info

Axis No. **

▪ Total Moved Count

Moved Count Edit

▪ Total Run Dist.

*****m

Run Dist. Edit

Info Mon.

Set

Menu

Touching [Moved Count Edit] or [Run Dist. Edit] displays the keyboard screen.

Enter a desired value and press [ENT], and the current setting will change to the value you have entered.

Touching [Set] display returns you to the previous maintenance information screen.

Maint. Info

Axis No. **

▪ Total Moved Count

Moved Count Edit

▪ Total Run Dist.

*****m


Run Dist. Edit

1	2	3	4	5	CLR	ESC
6	7	8	9	0	BS	ENT


Menu

Touching [Display Information] without touching [Set] first returns you to the maintenance information screen showing the original value. The setting will not change to the value you have entered.

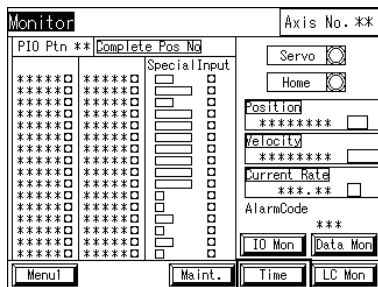
With SCON-CA controllers, you can set the controller time.
[How to Set Time]



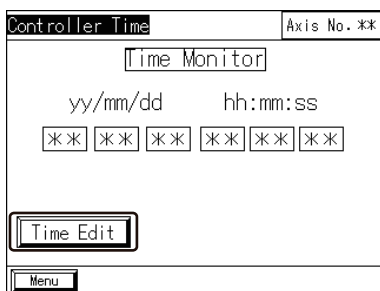
Touching [Time] displays the time setting screen.




Touch [Edit Time].

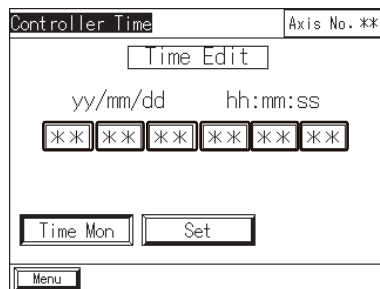

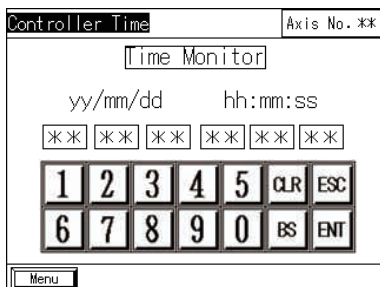Touch the value of year, month, day, hours, minutes or seconds you want to change.



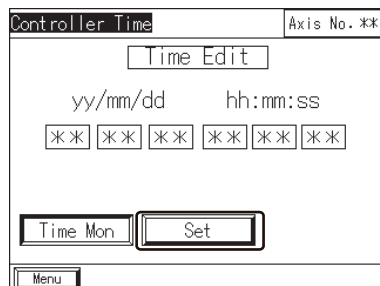
The numeric key pad appears. Enter a desired value, and then press [ENT].



Touch [Set].
The current time on the SCON-CA controller is changed.


5.7 Position Editing

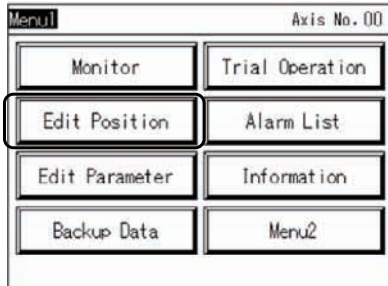Set/edit the target position, speed, acceleration, deceleration and other data related to positions. You can move the axis by jogging or inching.



Touch [Edit Position] on the Menu 1 screen.

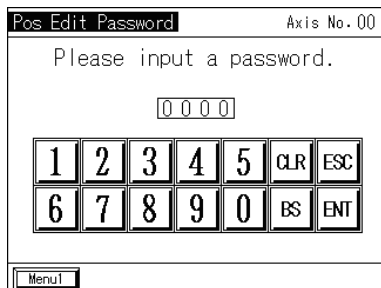
If a position password is set, the password setting screen appears.



Enter the position password.

The default password is "0000."

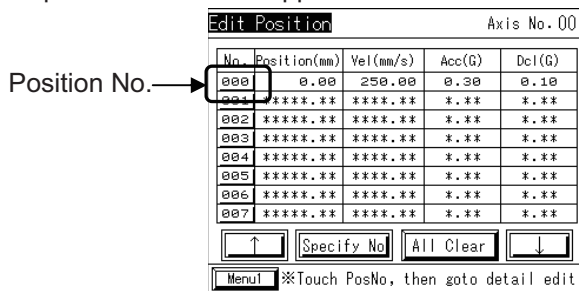A position data table appears.




Touch Specify No. to set the position number you want to set, and a table showing the position number you have just set appears.

To set data other than the target position, speed, acceleration and deceleration shown in the table, touch other position number such as "000."


Data of the selected position number appears.

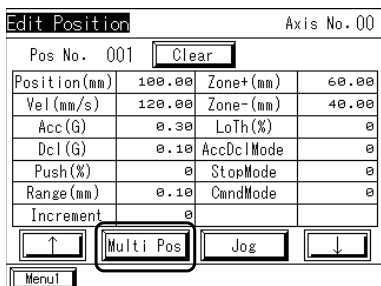Version V1.20 and Earlier



Touching [Multi Pos] returns the screen to the position data table display.

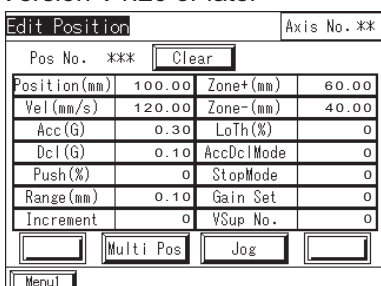Version V1.20 or later



5.7.1 Position Data

Position data table screen

Edit Position Axis No. 00

No.	Position(mm)	Vel(mm/s)	Acc(G)	Dcl(G)
000	0.00	250.00	0.30	0.10
001	*****	*****	*. **	*. **
002	*****	*****	*. **	*. **
003	*****	*****	*. **	*. **
004	*****	*****	*. **	*. **
005	*****	*****	*. **	*. **
006	*****	*****	*. **	*. **
007	*****	*****	*. **	*. **

↑ Specify No. All Clear ↓

Menu ※Touch PosNo, then goto detail edit.

Data display screen showing the selected position number

Version V1.20 and Earlier

Edit Position Axis No. 00

Pos No. 001 Clear

Position(mm)	100.00	Zone+(mm)	60.00
Vel(mm/s)	120.00	Zone-(mm)	40.00
Acc(G)	0.30	LoTh(%)	0
Dcl(G)	0.10	AccDclMode	0
Push(%)	0	StopMode	0
Range(mm)	0.10	CmdMode	0
Increment	0		

↑ Multi Pos Jog ↓

Menu

Version V1.20 or later

Edit Position Axis No. **

Pos No. *** Clear

Position(mm)	100.00	Zone+(mm)	60.00
Vel(mm/s)	120.00	Zone-(mm)	40.00
Acc(G)	0.30	LoTh(%)	0
Dcl(G)	0.10	AccDclMode	0
Push(%)	0	StopMode	0
Range(mm)	0.10	Gain Set	0
Increment	0	VSup No.	0

↑ Multi Pos Jog ↓


Menu

The items set in the position data table include target position, speed, acceleration, deceleration, push, positioning band, incremental, zone+, zone-, threshold, acceleration/deceleration mode, stop mode and command mode.

The settings of zone+, zone-, threshold, acceleration/deceleration mode and stop mode are enabled or disabled depending on the controller type, as shown in the table.


Position table	Zone +/-	AccDcl Mode			Stop mode		Gain set	Vibration Control
		Trapezoid	S-motion	Primary delay	Full Servo	Automatic servo OFF		
ERC2	○ PIO pattern: 3	○	x	x	○	○	x	x
ERC2-SE	○ -	○	x	x	○	x	x	x
ERC3	○ PIO pattern: 3	○	○	○	○	○	x	x
ERC3PIO Converter	○ PIO pattern: 0, 1, 2, 4, 5	○	○	○	○	○	x	x
PCONC/CG/CF	○ PIO pattern: 0, 1, 2, 4, 5	○	x	x	○	○	x	x
PCON-CA	○ PIO pattern: 0, 1, 2, 4, 5	○	○	○	○	○	x	x
-CY	○ PIO pattern: 1	○	x	x	○	○	x	x
-SE	○ -	○	x	x	○	x	x	x
ACONC/CG	○ PIO pattern: 0, 1, 2, 4, 5	○	○	○		○	x	x
-CY	○ PIO pattern: 1	○	○	○		○	x	x
-SE	○ -	○	○	○		x	x	x
SCON-C positioner mode	○ PIO pattern: 0, 1, 2, 4, 5	○	○	○		○	x	x
SCON-CA positioner mode	○ PIO pattern: 0, 1, 2, 4, 5, 6, 7	○	○	○		○	○	○

- (1) No.
The position data number is shown.

 **Warning:** Be sure to specify absolute coordinates on PCON-C/CG, ACON-C/CG and SCON-C controllers of solenoid valve mode 2, or PCON-CY and ACON-CY controllers of solenoid valve mode 1. If incremental coordinates are specified on these controllers, a position data error occurs. Also note that completion of push motion cannot be determined when the push is specified if incremental coordinates are specified.

- (2) Target position [mm]
Enter the target position to move the actuator to.
- Absolute coordinate specification: Enter the target position you want to move the actuator to, based on the distance from the home. A negative value cannot be entered.
 - Incremental coordinate specification: Enter the target position you want to move the actuator to, based on the distance from the current position. A negative value can also be entered.
(Negative direction on displayed coordinate system)
- (3) Speed [mm/sec]
Enter the speed at which to move the actuator.
The default value varies depending on the actuator type.
(Note) SCON-CA issues an alarm when the set value is below the minimum velocity.
- (4) Acceleration/deceleration [G]
Enter the acceleration/deceleration at which to move the actuator.
Basically you should set acceleration/deceleration not exceeding the rated value shown in the catalog. The input range permits entry of values larger than the rated value shown in the catalog, but this is because "shorter tact time when the transferring mass is significantly lighter than the rated value" is assumed. If the load vibrates during acceleration/deceleration to present problems, decrease the value set here.

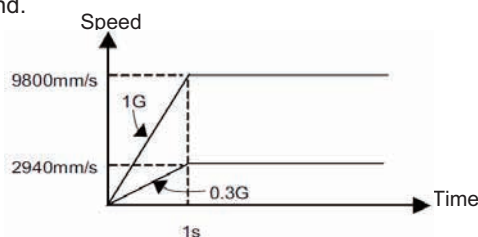(Reference) Acceleration is explained. The same concept applies to deceleration.
 1 G = 9800 mm/s²: Acceleration at which the actuator can increase its speed up to 9800 mm/s per second.
 0.3 G: Acceleration at which the actuator can increase its speed up to 2940 mm/s (9800 mm/s x 0.3) per second.



(Note) SCON-CA issues an alarm when the set value exceeded the rated acceleration or deceleration speed.



Caution

Acceleration/deceleration setting

- (1) Set accelerations/decelerations not exceeding the rated acceleration/deceleration specified in the catalog or this operation manual. If any acceleration/deceleration is set that exceeds the rated acceleration/deceleration, the life of the actuator may be significantly reduced.
- (2) If the actuator or work part receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or work part receiving impact or generating vibration, the life of the actuator may be significantly reduced.
- (3) If the load transferred by the actuator is significantly lighter than the rated payload capacity, you may be able to set accelerations/decelerations exceeding the rating. If this is the case, the tact time can be reduced, so contact IAI. When contacting IAI, tell us the weight, shape and installation method of your work part and installation condition (horizontal/vertical) of your actuator.

(5) Push

Select "Positioning operation" or "Push-motion operation."

The factory setting is 0.

0: Normal positioning operation

Other than 0: A current limiting value is indicated, meaning that this is a push-motion operation.

Caution: With PCON, ACON, SCON and ERC2 controllers, the value entered in the "Push" field may be rounded to a multiple of the controller's minimum resolution.
(When data is acquired from the controller)

(6) Positioning band

What this setting means is different between "Positioning operation" and "Push-motion operation."

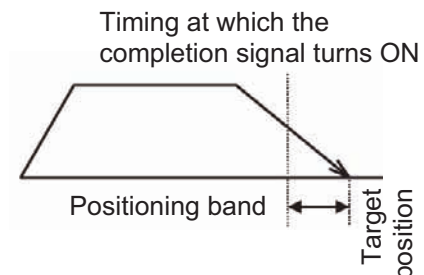
"Positioning operation":

Define how far before the target position you want to turn the completion signal ON.

The factory setting is 0.1 mm.


Standard type

Increasing the value of positioning band quickens the start of the next sequence operation, so the tact time can be reduced. Set an optimal value by considering the balance of the entire system.



Note that on PCON-C/CG, ACON-C/CG and SCON controllers of 3-point type or PCON-CY and ACON-CY controllers of proximity switch type, set the band after which the completion signal turns ON.

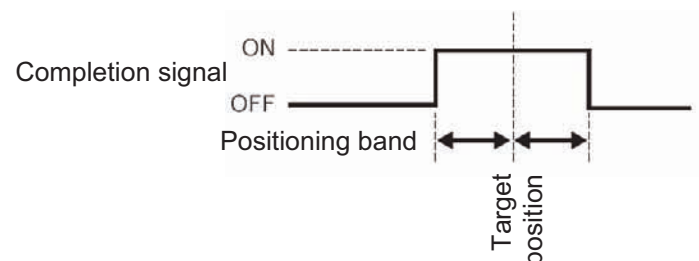
PCON-C/CG, ACON-C/CG and SCON in solenoid valve mode 2, PCON-CY, or ACON-CY in solenoid valve mode 1



"Push-motion operation":

Define the maximum push distance from the target position in push-motion operation.

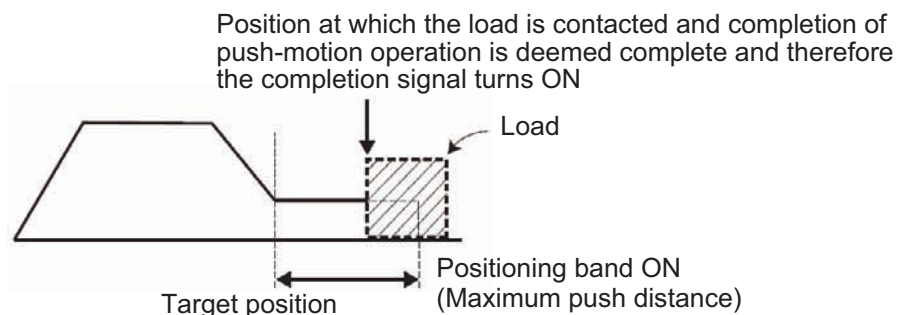Set an appropriate positioning band by considering the mechanical variation of the load, by making sure positioning will not complete before the actuator contacts the load.




- (7) Incremental
Specify absolute coordinates or incremental coordinates.
The factory setting is 0.
0: Absolute coordinate specification
1: Incremental coordinate specification

Warning: Be sure to specify absolute coordinates on PCON-C/CG, ACON-C/CG and SCON-C controllers of solenoid valve mode 2, or PCON-CY and ACON-CY controllers of solenoid valve mode 1.
If incremental coordinates are specified on these controllers, a position data error occurs.


- (8) Zone +/-
Define, for the standard type, the zone in which the zone output signal turns ON.
For added flexibility, these parameters can be set differently for each target position.
[Setting example]

No.	Position [mm]	Zone + [mm]	Zone - [mm]	Remarks
0	5.00	100.00	0.00	Backward end
1	380.00	400.00	300.00	Forward end
2	200.00	250.00	150.00	Intermediate position

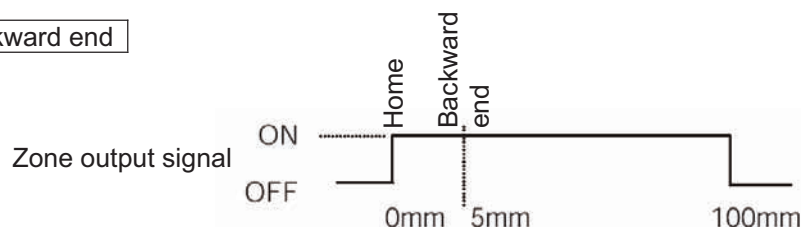
Movement command to backward end



Movement command to forward end

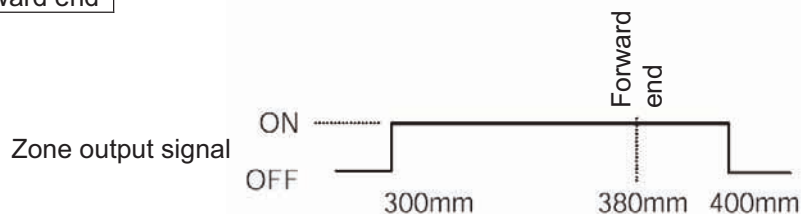

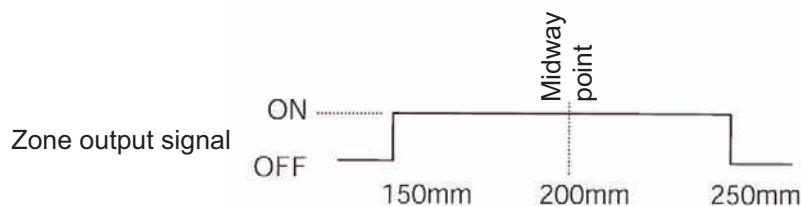
Movement command to intermediate position



- (9) Threshold
With PCON-CF controllers, a load output signal (PIO) is output if the command torque exceeds the value (%) set in "Threshold" inside the verification range.
The verification range is set by "Zone+/Zone-."
It is used to determine if press-fitting action was performed successfully.
* For details, refer to the operation manual for your PCON-CF controller.

- (10) Acceleration/deceleration mode
 Define the acceleration/deceleration pattern.
 The factory setting is 0.
 0: Trapezoid pattern
 1: S-motion
 2: Primary delay filter

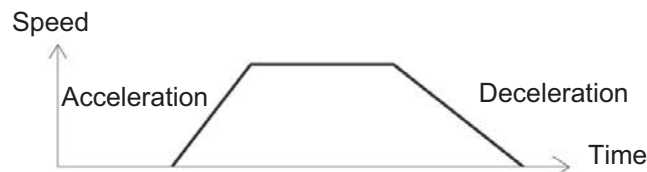
Trapezoid pattern



- * Set the acceleration and deceleration in the "Acc" and "Dcl" fields of the position table.

S-motion

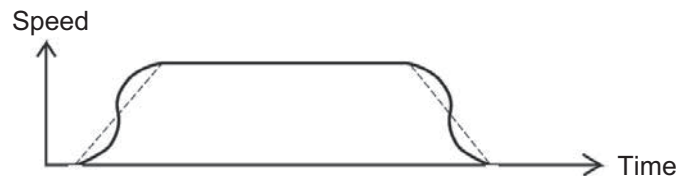
The acceleration curve rises gradually at first and then suddenly shoots up in the middle. Use this mode if you want to set high acceleration/deceleration to meet the required tact time, but want to move the actuator gradually at the start of movement and immediately before stopping.



- * The S-motion level is set by parameter No. 56 [S-motion ratio setting]. The setting unit is %, while the setting range is 0 to 100.
 (The graph above assumes that the parameter is set to 100%.)
 If 0 is set, the S-motion control is disabled.
 Note that the setting made here is not reflected in jogging or inching feed performed from a PC or teaching pendant.
 (Note) This setting is not available on ERC2 and PCON controllers. On these controllers, parameter No. 56 is reserved.

Primary delay filter

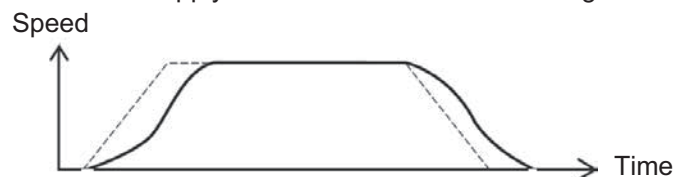The acceleration/deceleration curve becomes more gradual than linear acceleration/deceleration (trapezoid pattern). Use this mode if you don't want to apply fine vibration to the load during acceleration/deceleration.



- * The primary delay level is set by parameter No. 55 [Primary filter time constant for position commands]. The setting unit is 0.1 msec, while the setting range is 0.0 to 100.0.
 If 0 is set, the primary delay filter is disabled.
 Note that the setting made here is not reflected in jogging or inching feed performed from a PC or teaching pendant.
 (Note) This setting is not available on ERC2 and PCON controllers. On these controllers, parameter No. 55 is reserved.

(11) Stop mode

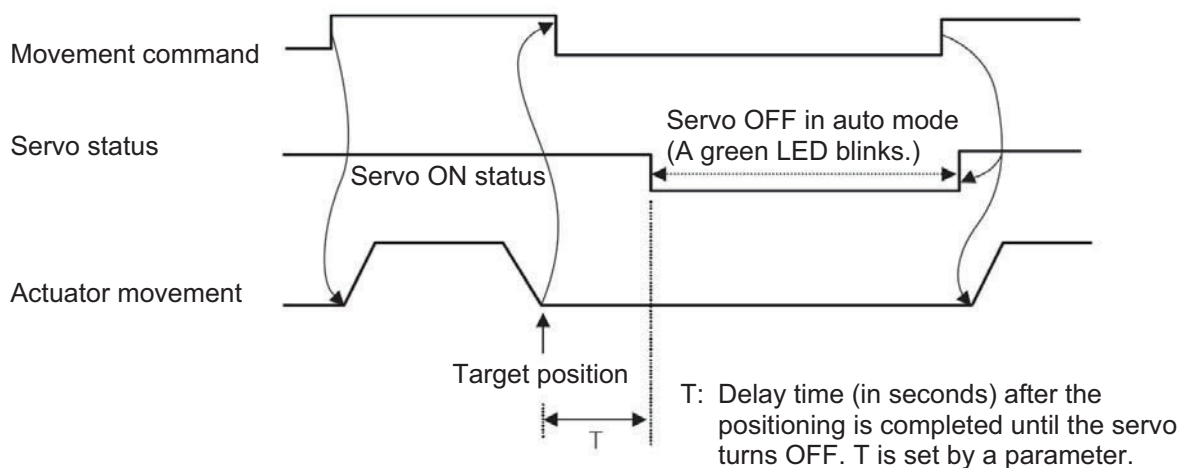
Define the power-saving mode to be used while the actuator is standing by after completion of positioning to the target position set in the "Position" field of the applicable position number.

- 0: Disable power-saving mode * The factory setting is 0 (Disable).
- 1: Auto servo OFF mode, with the delay time defined by parameter No. 36
- 2: Auto servo OFF mode, with the delay time defined by parameter No. 37
- 3: Auto servo OFF mode, with the delay time defined by parameter No. 38
- 4: Full servo control mode

Auto servo OFF mode

The servo is turned OFF automatically upon elapse of a specified time after completion of positioning. (Since holding current does not flow, power consumption is reduced.)

When the PLC issues the next movement command, the servo is turned ON and then the actuator starts moving.



Full servo control mode

The holding current can be decreased by servo-controlling the pulse motor.

Although the rate of decrease in holding current varies depending on the actuator model, loading condition, etc., the holding current decreases to approx. one-half to one-quarter.

Note that the servo remains ON, meaning that unwanted position shift does not occur.

The actual holding current can be checked on the current monitor screen of the PC software.

(12) Command mode (Displayed in Version V1.20 and Earlier)

This field is invalid.

The factory setting is 0.

- (13) Gain settings (This information is displayed on version 1.20 or later.)
(Note) Gains can be set only on SCON-CA controllers.

Six parameters required for servo gain adjustment have been put together into one set.
Four types of settings can be registered, and you can change the servo gain for each positioning operation.

[Parameters constituting each set]

- Servo gain number (position gain)
- Position feed-forward gain
- Speed loop proportional gain
- Speed loop integral gain
- Torque filter time constant
- Current control band number

Setting	Operation after completion of positioning	Parameter numbers
0	Gain set 0	7, 71, 31 ~ 33, 54
1	Gain set 1	120 ~ 125
2	Gain set 2	126 ~ 131
3	Gain set 3	132 ~ 137

- (14) Vibration damping number (This information is displayed on version 1.20 or later.)
(Note) Vibration damping can be set only on SCON-CA controllers.

Vibration (resonance) of the load installed on the actuator is suppressed.

This function works on three types of vibration.

Three parameters are provided for each type of vibration, and they comprise one set.

In the position table, set a desired parameter set for each position number where vibration damping is required.

Setting	Vibration damping frequency (Characteristic frequency)	Parameter numbers
0	Normal position control (no vibration damping)	-
1	Vibration damping parameter set 1	97 ~ 100
2	Vibration damping parameter set 2	101 ~ 104
3	Vibration damping parameter set 3	105 ~ 108



Caution

- (1) Vibration can be suppressed over a frequency range of 0.5 to 30 Hz (target characteristic frequencies).
- (2) This function suppresses vibration of the load induced by the actuator connected to this controller. It does not suppress any other vibration.
- (3) This function suppresses vibration in the same direction as the moving direction of the actuator. It does not suppress vibration in any other direction.
- (4) This function does not work during home return and push-motion operation.
- (5) This function does not support the pulse-train input mode.
- (6) The tact time may increase when a lower vibration frequency is set. If the vibration frequency is approx. 6 Hz or below, the settling time after positioning becomes at least 150 ms.

5.7.2 Entering New Data

You can enter new position data in one of four ways.

- (1) Numerical input --- Enter position data directly as numerical values from the numerical keypad on the teaching pendant. (Example of entry: P. 39)
- (2) Direct teaching --- Turn off the servo control, move the slider by hand to the target position, and then acquire the achieved position (current position) into the position table and specify that position. (Example of entry: P. 47)
- (3) Jogging --- Use [Jog+] or [Jog-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position. (Example of entry: P. 49)
- (4) Inching --- Use [Jog+] or [Jog-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position. (Example of entry: P. 51)
Touching [Jog+] or [Jog-] once moves the actuator by the specified feed pitch (0.01, 0.10, 0.50, 1.00 or 5.00 (mm)). Touching and holding the key for 2 seconds will start jogging movement at 1 mm/sec. Thereafter, the speed increases every second. This way, the actuator can be moved more finely than when jogged.



Warning: To enter position data after the power is turned on, or enter position data beforehand using the method of (2), (3) or (4), you must perform home return first. (Increment specification)
Before home return is completed, jogging/inching is possible only to the mechanical end.
Operate the actuator by visually checking for potential interference.

(1) Basic operation

[Data entry on the position data table screen]

You can set the target position, speed, acceleration and deceleration in the position data table.

Touch [↑] and [↓] to display the table showing the desired position data number.

Or, touch [Specify No] and set the desired position data number to display the table.

Touch.

Edit Position		Axis No. 00		
No.	Position(mm)	Vel(mm/s)	Acc(G)	Dcl(G)
000	0.00	250.00	0.30	0.10
001	*****	*****	***	***
002	*****	*****	***	***
003	*****	*****	***	***
004	*****	*****	***	***
005	*****	*****	***	***
006	*****	*****	***	***
007	*****	*****	***	***

Menu1 ※Touch PosNo, then goto detail edit.

Touch a value in the target position or other field of the desired position data number. When the numeric keypad appears, key in the desired value and touch [ENT], and the value will be entered.

Touching Axis No. switches to the axis selection screen.

Touching [All Clear] clears all position data. (Example of entry: P. 56)

[Data entry on the data display screen of the selected position number]

All items can be set on the data display screen of the selected position number.

Version V1.20 and Earlier

Touch.

Edit Position		Axis No. 00	
Pos No. 001	Clear		
Position (mm)	100.00	Zone+ (mm)	60.00
Vel (mm/s)	120.00	Zone- (mm)	40.00
Acc (G)	0.30	LoTh (%)	0
Dcl (G)	0.10	AccDcl Mode	0
Push (%)	0	Stop Mode	0
Range (mm)	0.10	Cmd Mode	0
Increment	0		
<div> <div>↑</div> <div>Multi Pos</div> <div>Jog</div> <div>↓</div> </div>			
Menu1			

Touch a value in the target position or other desired field.

When the numeric keypad appears, key in the desired value and touch [ENT], and the value will be entered.

Touch [↑] or [↓] to change to the screen of the previous or next position number.

Touching [Multi Pos] returns the screen to the position data table display.

Touching Axis No. switches to the axis selection screen.

Version V1.20 or later

Edit Position		Axis No. **	
Pos No. ***	Clear		
Position (mm)	100.00	Zone+ (mm)	60.00
Vel (mm/s)	120.00	Zone- (mm)	40.00
Acc (G)	0.30	LoTh (%)	0
Dcl (G)	0.10	AccDcl Mode	0
Push (%)	0	Stop Mode	0
Range (mm)	0.10	Gain Set	0
Increment	0	VSup No.	0
<div> <div></div> <div>Multi Pos</div> <div>Jog</div> <div></div> </div>			
Menu1			

Touching [Jog] changes to the jog operation screen where you can acquire position data via jogging operation.

[Jog operation]

You can acquire position data via jogging operation.

Jog Axis No. 00

Position No. 000

Current Pos 0.30 mm

SV ON ☐

HOME ☐

Jog Vel

☒ 1

☐ 10

☐ 30

☐ 50

☐ 100

Jog- Jog+ Chg Vel

Back Acquire Inching

Menu

Operation on the jog screen

- [Jog-], [Jog+]: The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Vel]: The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching]: Touching [Inching] changes to the inching screen.

Position acquisition operation

Touch [Acquire]. A confirmation screen appears.

You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.

Confirm Axis No. 00

Position No. 000

Target Pos 0.00 mm

Current Pos 0.30 mm

Do you want to acquire current position?

Yes No

[Inching operation]

You can acquire position data via inching operation.

Operation on the inching screen

- [Inching-], [Inching+]: Touching each button once moves the axis by inching. [Inching-] moves the axis in the negative direction, while [Inching+] moves the axis in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Dis]: The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog]: Touching [Jog] changes to the jog screen.

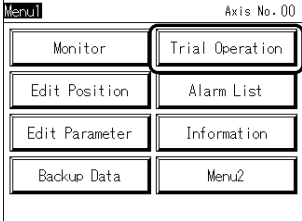
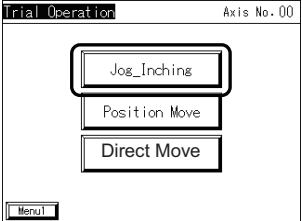
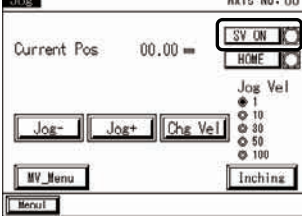
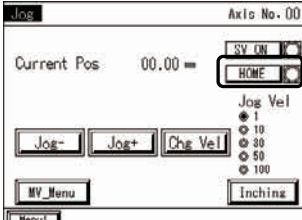
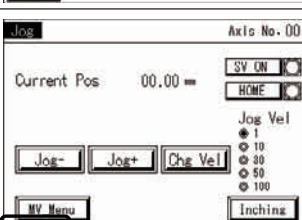
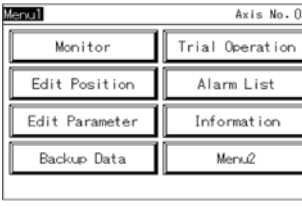
Position acquisition operation

Touch [Acquire]. A confirmation screen appears.

You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.







- (2) Examples of position setting operations
Respective operations are explained by giving specific examples.
1) Home return

No.	Operation	Screen	Remarks
1	Touch [Trial Operation].		
2	Touch [Jog_Inching].		
3	Check the screen and if the servo is off, touch [SV ON].		○ indicating a servo ON status on the screen becomes lit.
4	Touch [HOME].		
5	Touch [Menu1].		
6	The display returns to the Menu 1 screen.		

2) Numerical input







Example 1	Move back and forth between the two points of 30 mm and 250 mm at a speed of 300 mm/sec.
-----------	--







No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Touch the target position of the desired position number. In this example, data is entered for No. 0. When the numerical keypad appears, touch [3], [0] and then touch [ENT].		To reenter the value, touch [ESC].
6			When registering a new position data, the default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.

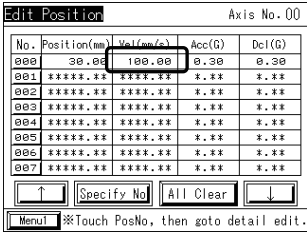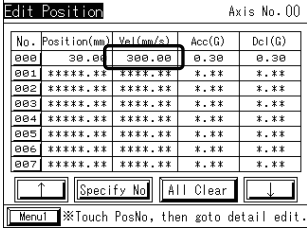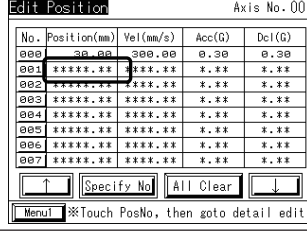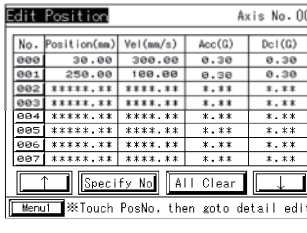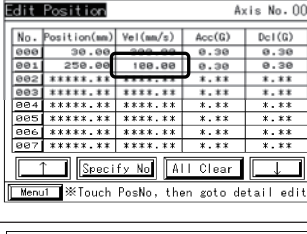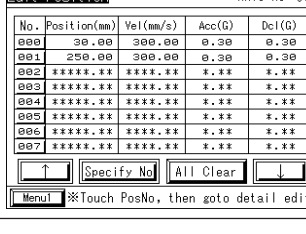
No.	Operation	Screen	Remarks
7	Next, touch the velocity of position No. 0.		
8	When the numerical keypad appears, touch [3], [0], [0] and then touch [ENT].		
9	Next, touch the target position of position No. 1. When the numerical keypad appears, touch [2], [5], [0] and then touch [ENT].		To reenter the value, touch [ESC].
10			When registering a new position data, the default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.
11	Next, touch the velocity of position No. 1.		
12	When the numerical keypad appears, touch [3], [0], [0] and then touch [ENT].		

No.	Operation	Screen	Remarks
13	Touch [Menu1].		
14			

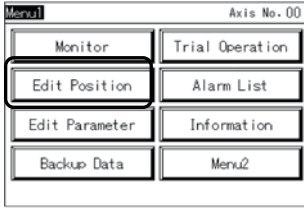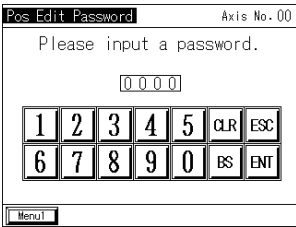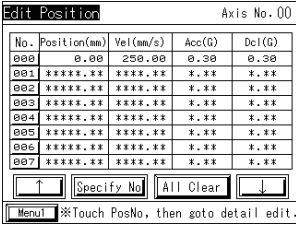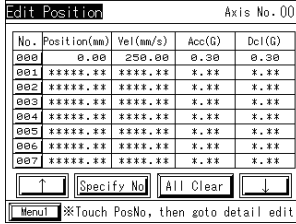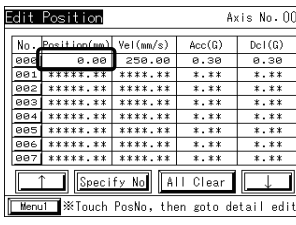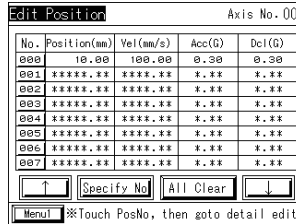Example 2 Move back and forth between the two positions of 10 mm and 80 mm via push-motion operation (push width: 5 mm).

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Touch the target position of the desired position number. In this example, data is entered for No. 0. When the numeric keypad appears, touch [1], [0] and then touch [ENT].		To reenter the value, touch [ESC].
6			When registering a new position data, the default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.

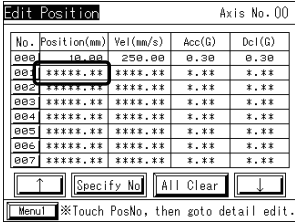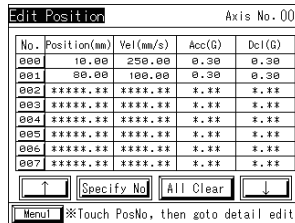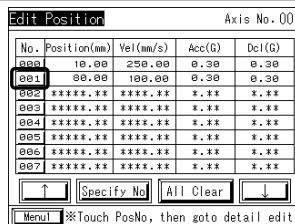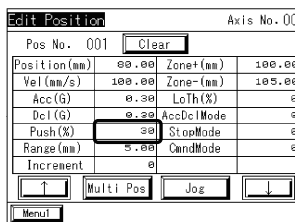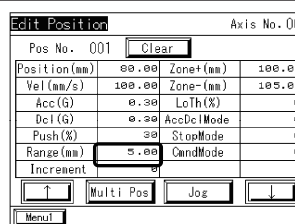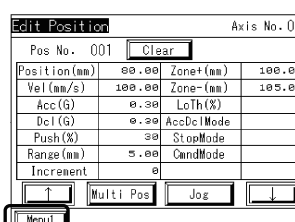No.	Operation	Screen	Remarks
7	Next, touch the target position of position No. 1. When the numeric keypad appears, touch [8], [0] and then touch [ENT].		To reenter the value, touch [ESC].
8			When registering a new position data, the default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.
9	Next, touch No. "001" of position No. 1.		
10	Touch the value in the Push. When the numerical keypad appears, touch [3], [0] and then touch [ENT].		To reenter the value, touch [ESC].
11	Touch the value for the positioning band. When the numerical keypad appears, touch [5] and then touch [ENT].		To reenter the value, touch [ESC].
12	Touch [Menu1].		

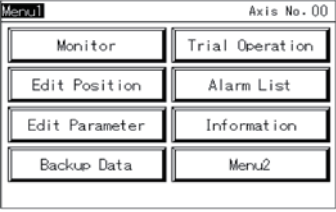No.	Operation	Screen	Remarks
13			







Example 3 Move from 30 mm to 40 mm and to 50 mm by pitch feed based on incremental coordinate specification.






No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Touch the target position of the desired position number. Enter data for No. 0. When the numerical keypad appears, touch [3], [0] and then touch [ENT].		To reenter the value, touch [ESC].
6			When registering a new position data, the default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.

No.	Operation	Screen	Remarks
7	Next, touch the target position of position No. 1. When the numerical keypad appears, touch [1], [0] and then touch [ENT].	<p>Menu1 ※Touch PosNo, then goto detail edit.</p>	To reenter the value, touch [ESC].
8		<p>Menu1 ※Touch PosNo, then goto detail edit.</p>	When registering a new position data, the default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. In this example, the default value is 100 mm/s.
9	Next, touch No. [001] of position No. 1.	<p>Menu1 ※Touch PosNo, then goto detail edit.</p>	
10	Touch the value for the Increment. When the numerical keypad appears, touch [1] and then touch [ENT].	<p>Menu1</p>	
11	Touch [Menu1].	<p>Menu1</p>	
12			

- Direct teaching (move the slider to the target position and then acquire the achieved position (current position) into the position data table and specify that position)

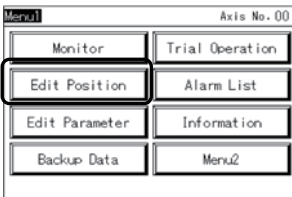
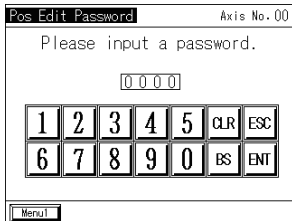
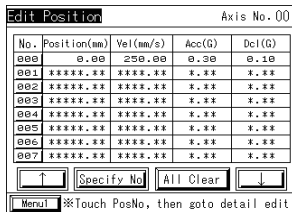
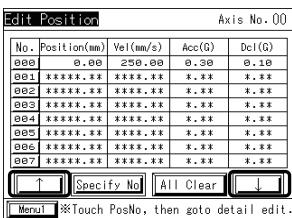
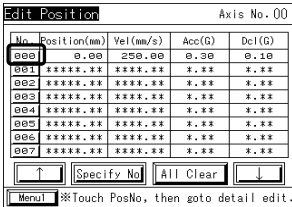
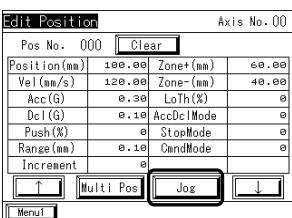
To perform direct teaching immediately after turning on the power, home return must be performed first. (Refer to page 38.) (Incremental specification)






No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		If data is already entered, the current data is overwritten. Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "000" of position No. 0.		
6	Touch [Jog].		

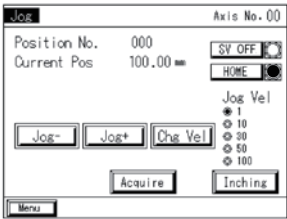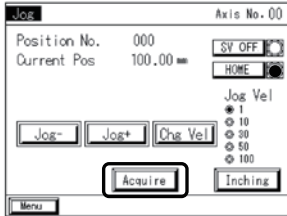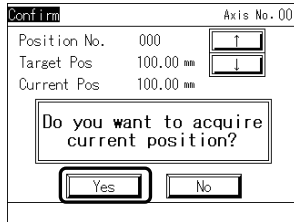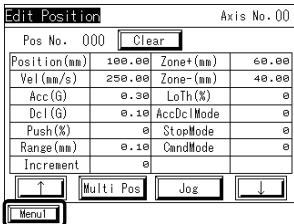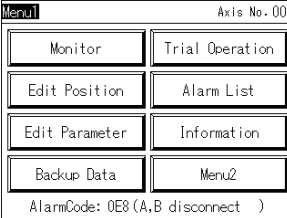No.	Operation	Screen	Remarks
7	Manually move the slider to the target position. If the servo is currently on, touch [SV ON] to turn off the servo.		
8	Touch [Acquire].		
9	Touch [Yes].		The default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. (Note) If a position is acquired before home return, the error message "Home return not yet complete" appears. On the error message screen, touch [Back] to return to the jog screen, and then perform home return.
10	Touch [Menu1].		
11			

- 4) Jogging, Use [Jog+] or [Jog-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
Note that if the maximum speed is smaller than the specified speed, the speed is clamped at the maximum speed.

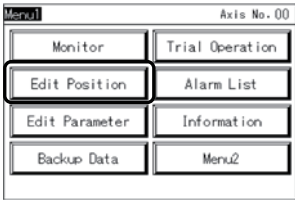
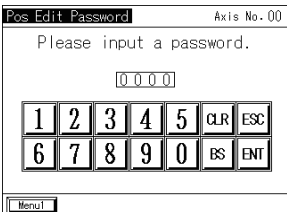
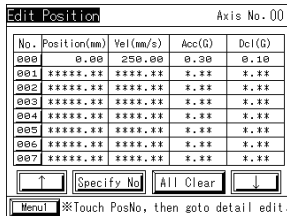
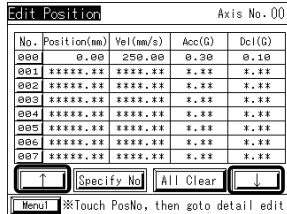
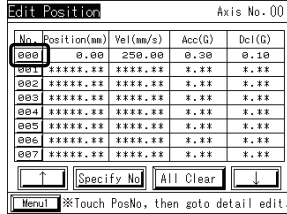
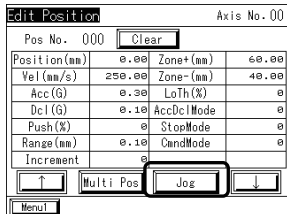
To perform jog operation immediately after turning on the power, home return must be performed first. (Refer to page 38.) (Incremental specification)







No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		If data is already entered, the current data is overwritten. Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "000" of position No. 0.		
6	Touch [Jog].		

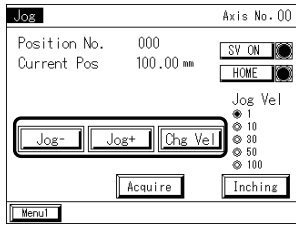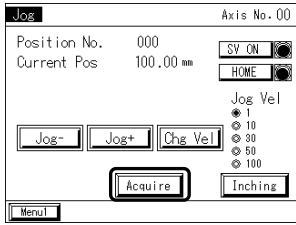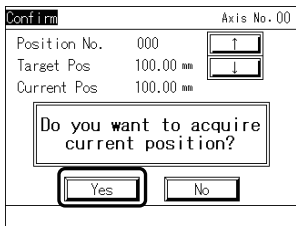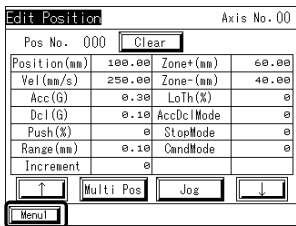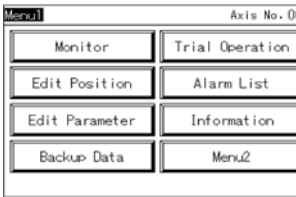No.	Operation	Screen	Remarks
7	Touch [Chg Vel] to select a desired jog speed. Touch [Jog-] and [Jog+] to move the axis to the target position.		
8	Touch [Acquire].		
9	Touch [Yes].		The default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc. (Note) If a position is acquired before home return, the error message "Home return not yet complete" appears. On the error message screen, touch [Back] to return to the jog screen, and then perform home return.
10	Touch [Menu1].		
11			

- Inching, Use [Jog+] or[Jog-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.

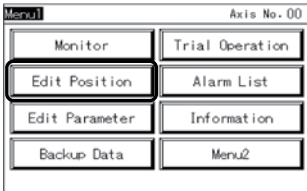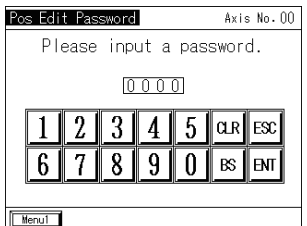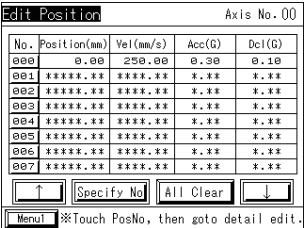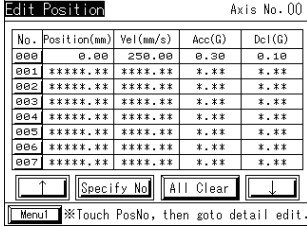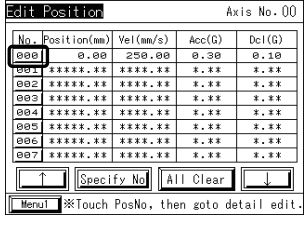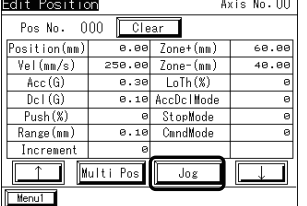To perform inching operation immediately after turning on the power, home return must be performed first. (Refer to page 38.) (Incremental specification)

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		If data is already entered, the current data is overwritten. Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "000" of position No. 0.		
6	Touch [Jog].		

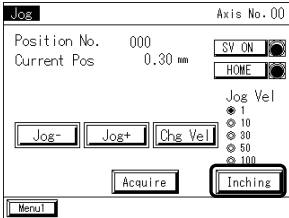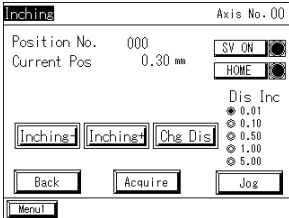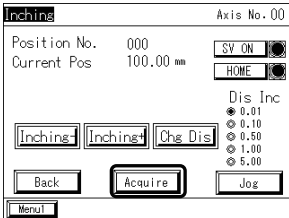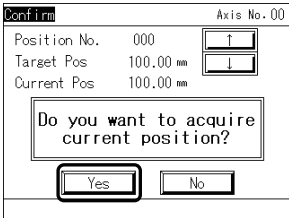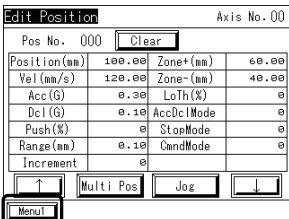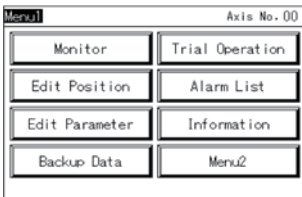No.	Operation	Screen	Remarks
7	Touch [Inching].		
8	Touch [Chg Dis] to select a desired jog speed. Touch [Inching-] and [Inching+] to move the axis to the target position.		
9	Touch [Acquire].		
10	Touch [Yes].		<p>The default values set by user parameters are automatically entered for the velocity, acceleration, deceleration, etc.</p> <p>(Note) If a position is acquired before home return, the error message "Home return not yet complete" appears. On the error message screen, touch [Back] to return to the jog screen, and then perform home return.</p>
11	Touch [Menu1].		
12			

5.7.3 Changing Position Data

You can change all position data by overwriting the current values.
Accordingly, four cases are considered just like when data is entered anew.

- (1) Numerical input --- Enter position data directly as numerical values from the numeric keypad.
- (2) Direct teaching --- Turn off the servo control, move the slider by hand to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (3) Jogging --- Use [Jog+] or[Jog-] to jog the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position.
- (4) Inching --- Use [Jog+] or[Jog-] to inch the actuator to the target position, and then acquire the achieved position (current position) into the position data table and specify that position. The axis moves by the specified pitch (0.01, 0.10, 0.50, 1.00 or 5.00 (mm)) every time an arrow key is touched. Thereafter, the speed increases every second. This way, the actuator can be moved more finely than when jogged.

Take note of the following points when performing a data change operation:

- * In the case of numerical input, only the items overwritten from the numeric keypad will change.
- * In the case of direct teaching, jogging or inching, only the target position will be updated after the current position is acquired. The speed, etc., will remain unchanged.
- * Once the position data is cleared, none of the previously set data will remain. Accordingly, the default data values will be applied, other than positions, the next time you register position data. To clear the position data table specified for push-motion operation and register data again, be sure to check all position data items and enter necessary data.

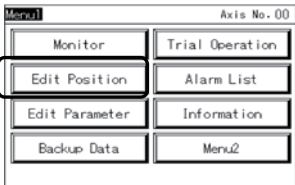
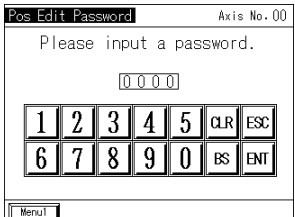
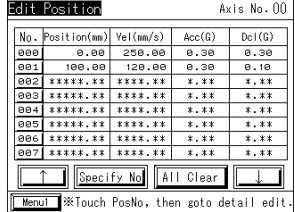
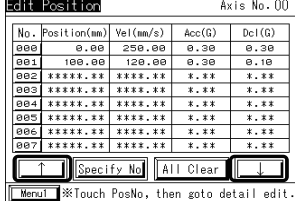
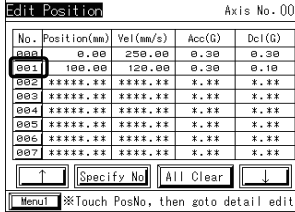
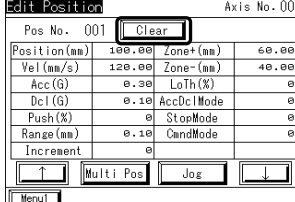
5.7.4 Clearing Position Data, Clearing All Position Data




(1) Clearing position data

Position data of the selected position number can be cleared. The position becomes unregistered and an "*" (asterisk) is shown in the fields.







1) Clear (Operation to return a desired position data number to an unregistered condition.)

Example Clear data of position data No. 1.

No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [↑] and [↓] to display the table showing the position number you want to set.		Position data fields in which no data is registered yet contain an "*" (asterisk).
5	Next, touch No. "001" of position No. 1.		
6	Touch [Clear].		

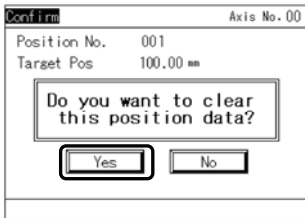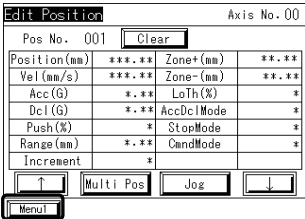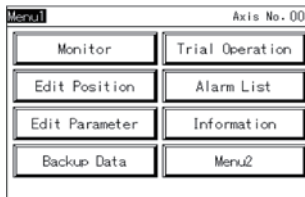No.	Operation	Screen	Remarks
7	Touch [Yes].		Touching [No] cancels the clear.
8	Touch [Menu1].		<p>The position number data is cleared.</p> <p>An "*" (asterisk) is shown in the fields.</p>
9			

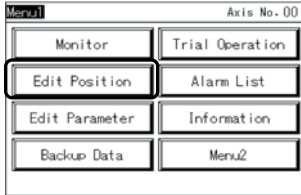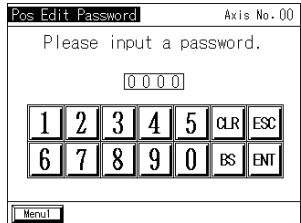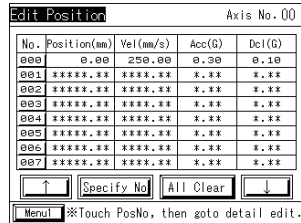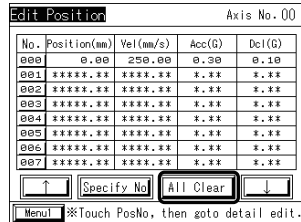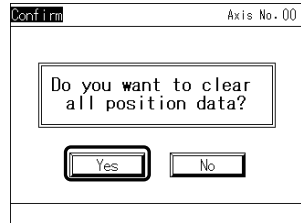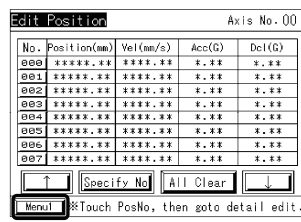2) All clear (Operation to clear all position data)


No.	Operation	Screen	Remarks
1	Touch [Edit Position].		
2	If the password is not "0000," the password screen appears. Input a password.		The default password is "0000."
3	The position data table screen appears.		
4	Touch [All Clear].		
5	Touch [Yes].		Touching [No] cancels the clear.
6	Touch [Menu1].		All position number data is cleared. An "*" (asterisk) is shown in the fields.

Menu1 Axis No. 00

Monitor	Trial Operation
Edit Position	Alarm List
Edit Parameter	Information
Backup Data	Menu2


5.8 Parameter Editing

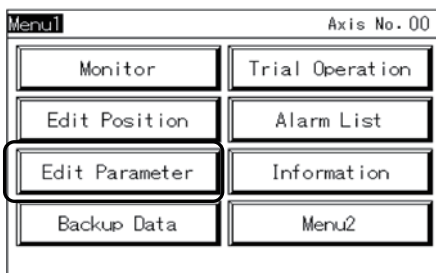Parameters are displayed and edited.



Touch [Edit Parameter] on the Menu 1 screen.

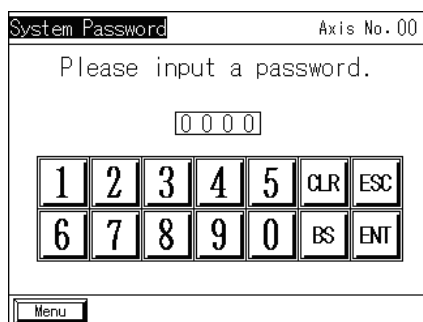
If a system password is set, the password setting screen appears.



Input a system password.

The default password is "5119."
You can set a password on the setting screen.

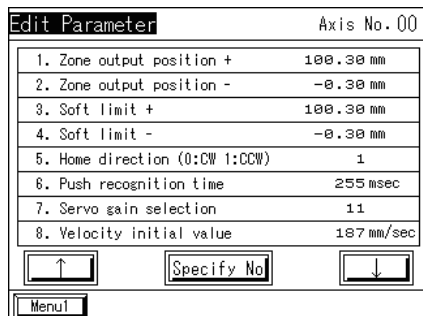A user parameter table is displayed.



* The types of parameters vary from one controller to another. Refer to the operation manual for each controller.

(1) Basic operation

Edit Parameter		Axis No. 00
1. Zone output position +	100.30 mm	
2. Zone output position -	-0.30 mm	
3. Soft limit +	100.30 mm	
4. Soft limit -	-0.30 mm	
5. Home direction (0:CCW 1:CCW)	1	
6. Push recognition time	255 msec	
7. Servo gain selection	11	
8. Velocity initial value	107 mm/sec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu1"/>		

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Touch [Specify No] and enter a desired user parameter number, and the screen showing the user parameter you want to set will appear.

In this example, soft limit+ is set.

Edit Parameter		Axis No. 00
1. Zone output position +	100.30 mm	
2. Zone output position -	-0.30 mm	
3. Soft limit +	100.30 mm	
4. Soft limit -	-0.30 mm	
5. Home direction (0:CCW 1:CCW)	1	
6. Push recognition time	255 msec	
7. Servo gain selection	11	
8. Velocity initial value	107 mm/sec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu1"/>		

Touch Soft limit+, and the numeric keypad will appear. Enter a value and then touch [ENT] on the numeric keypad.

Touching [Menu1] opens a confirmation screen with a message asking if you want to restart the controller.

Soft Reset		Axis No. 00
<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>Do you want to restart the controller?</p> </div>		
<div style="display: flex; justify-content: center; gap: 20px;"> <input type="button" value="Yes"/> <input type="button" value="No"/> </div>		

Touch [Yes].

Touch [No] to return to the user parameter screen without restarting the controller or reflecting the parameter you have set. To reflect the parameter you have set, you must restart the controller.


Caution: If the controller is not restarted, the parameter that has been rewritten does not translate to the intended action.
The parameter will become effective once the controller is restarted or power is reconnected.

The controller is restarted, after which the parameter you have set will be reflected.

Soft Reset		Axis No. 00
<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>During the restart process.</p> <p>Please wait a minute.</p> </div>		


5.9 Trial Operation

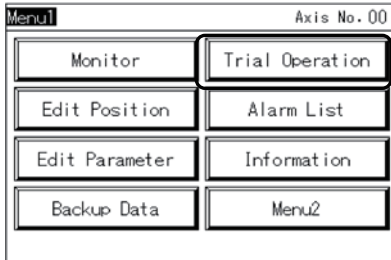You can perform jogging/inching operations, move to a position or continuously to multiple positions registered in the position table, or move to a position by specifying the position directly.




Touch [Trial Operation] on the Menu 1 screen.

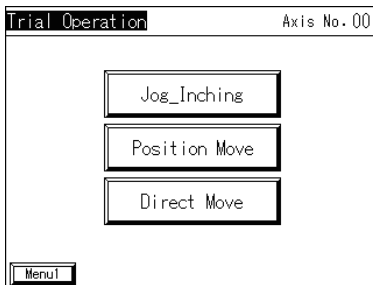The movement menu screen appears.
Version V1.20 and Earlier



Select and touch [Jog_Inching] or other item you want to operate.

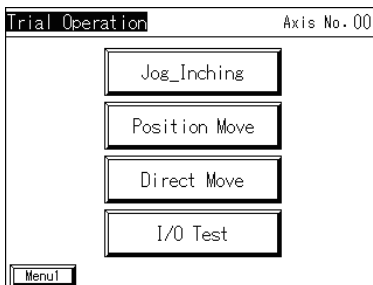Version V1.20 or later



- Position Data** Axis No. 00

No.	Position(mm)	Vel(mm/s)	Acc(G)	Dcl(G)
000	*	*	*	*
001	100.00	20	0.05	0.05
002	200.00	30	0.11	0.11
003	333.33	100	0.22	0.22
004	*	*	*	*
005	555.55	333	0.22	0.22
006	666.66	444	0.11	0.11
007	777.77	777	0.07	0.07

Navigation buttons: ↑ Specify No All Clear ↓

Menu

It does not move from position No. 063 to No. 064.


No.	Target position (mm)	Speed (mm/s)
000	*	*
001	100.00	20
	↓	
060	*	*
061	300.00	30
062	400.00	40
063	500.00	50
064	600.00	60
065	700.00	70
	↓	

- 70

5.9.1 Jog/Inching Operation

[Jog operation]

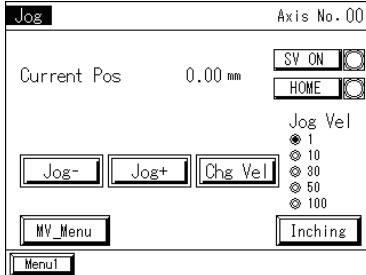You can perform jog operation.




Operation on the jog screen

- [Jog-], [Jog+]: The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Vel]: The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching]: Touching [Inching] changes to the inching screen.
- [Menu1]: Move to the Menu 1 screen.

[Inching operation]

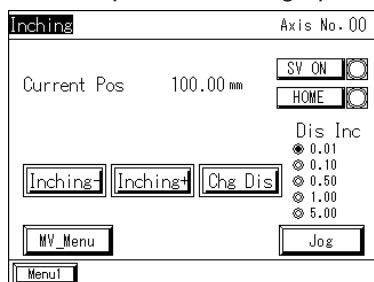You can perform inching operation.



Operation on the jog screen

- [Inching-], [Inching+]: Touching each button once moves the axis by inching.
[Inching-] moves the actuator in the negative direction.
[Inching+] moves the actuator in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] when the servo is on turns off the axis servo and O becomes lit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Dis]: The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog]: Touching [Jog] changes to the jog screen.
- [Menu1]: Move to the Menu 1 screen.

5.9.2 Position Movement Operation

Move to a position or continuously to multiple positions registered in the position table.

The screenshot shows a control interface for a servo motor. At the top, it says 'Position Move' and 'Axis No. 00'. Below this, there are several fields and buttons. The 'Position No.' is set to '001'. The 'Current Pos' is '-0.30 mm'. The 'Target Pos' is '100.00 mm'. The 'Vel Override' is '100 %'. There are three buttons in the top right: 'SV ON', 'HOME', and a button with a circle icon. Below these are three buttons: 'Move', 'Continuous', and 'Stop'. There is also a 'Chg Vel' button. At the bottom, there is a 'Menu1' button.

- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [↑], [↓]: Touch [↑] and [↓] to select a desired position number. The target position of the selected position number appears.
- [Chg Vel]: The speed override changes to 10%, 50% and 100% every time [Chg Vel]] is touched.
- [Move]: Touching [Move] moves the axis to the target position. The current position can be checked by the display in Current Pos.
- [Continuous]: Touching [Continuous] moves the axis continuously until Stop is touched.
- [Stop]: Touching [Stop] stops the axis.
- [Menu1]: Move to the Menu 1 screen.

5.9.3 Direct Movement Operation

A position is specified directly to move the axis.

The screenshot shows a control interface titled "Direct Move" for "Axis No. 00". It displays the following information:

- Current Pos: 100.00 mm
- Target Pos: 50.00 mm
- Velocity: 120.00 mm/sec

On the right side, there are two indicator lights: "SV ON" (which is lit) and "HOME" (which is unlit). At the bottom, there are four buttons: "Move", "Stop", "MV_Menu", and "Menu1".

- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Target Pos]: Touching [Target Pos] displays the numeric keypad. Enter a desired target position and then touch [ENT].
- [Velocity]: Touching [Velocity] displays the numeric keypad. Enter a desired speed and then touch [ENT].
- [Move]: Touching [Move] moves the axis to the target position you have set. The current position can be checked by the display in Current Pos.
- [Stop]: Touching [Stop] stops the axis.
- [Menu1]: Move to the Menu 1 screen.

5.9.4 I/O Test

This mode enables to monitor PIO input and output signals. (Version V1.20 or later)
Also, the output signal can be compulsorily turned on/off by touching OUT1 to OUT15.

I/Otest

※Turn on Output by pushing [OUT] Axis No. ※

IN00	IN08	Input	Output	OUT00	OUT08
IN01	IN09			OUT01	OUT09
IN02	IN10			OUT02	OUT10
IN03	IN11			OUT03	OUT11
IN04	IN12			OUT04	OUT12
IN05	IN13			OUT05	OUT13
IN06	IN14			OUT06	OUT14
IN07	IN15			OUT07	OUT15


Menu1

OFF : IN OUT ON : IN OUT

Touch [Menu 1] and the screen changes to Menu 1.


5.10 TP Operation Mode

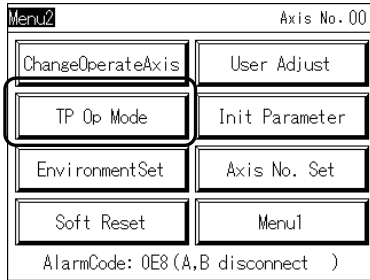An operation mode is set if the manual (MANU) mode is selected.



Touch [TP Op Mode] on the Menu 1 screen.

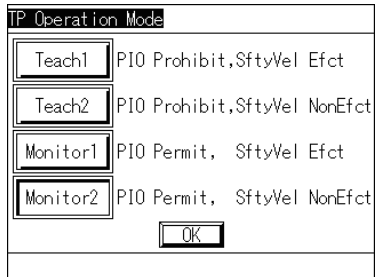The TP operation mode screen appears.




Select and touch [Teach1] or other desired mode.

Select a manual operation mode from the menu containing the following four items:

- **Teach1 (Safety speed enabled/PIO start prohibited)**
 - PIO Prohibit:** You can write position data, parameters, etc., to the controller and issue actuator operation commands.
 - SftyVel Efct:** The maximum speed corresponds to the safety speed set by a parameter, regardless of the speed specified in the position data table.
- **Teach2 (Safety speed disabled/PIO start prohibited)**
 - PIO Prohibit:** You can write position data, parameters, etc., to the controller and issue actuator operation commands.
 - SftyVel NonEfct:** You can move the actuator at the speed (greater than the safety speed) set in the position data table.
- **Monitor1 (Safety speed enabled/PIO start permitted)**
 - PIO Permit:** Only monitoring is permitted. You cannot write position data, parameters, etc., to the controller or issue actuator operation commands. Operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 - SftyVel Efct:** The maximum speed corresponds to the safety speed set by a parameter, regardless of the speed command from the PLC.
- **Monitor2 (Safety speed disabled/PIO start permitted)**
 - PIO Permit:** Only monitoring is permitted. You cannot write position data, parameters, etc., to the controller or issue actuator operation commands. Operation commands (jog, home return, etc.) cannot be issued from the touch panel teaching pendant.
 - Safety speed disabled:** You can move the actuator at the speed (greater than the safety speed) according to the command from the PLC.


5.11 Alarm List

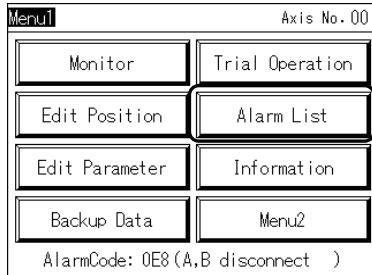A list of alarms that may generate after the controller power is turned on is shown. [For alarm details, refer to 8, "Error Display."]



Touch [Alarm List] on the Menu 1 screen.

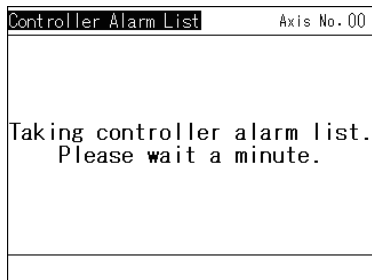A screen appears, indicating the an alarm list being acquired.



The controller's alarm list appears. The alarm list consists of pages 0 to 15. Model other than SCON-CA

Controller Alarm List Axis No. 00				
No	Code	Message	Adrs	Detail Time
00	FFF	PowerUP No Error	*****	0:00:00
01	0A2	Pos data error	1214	0021 0:04:30
02	FFF	PowerUP No Error	*****	0:00:00
03	000		*****	0:00:00
04	000		*****	0:00:00
05	000		*****	0:00:00
06	000		*****	0:00:00
07	000		*****	0:00:00

↓ Erase

Menu

Touching [↑] displays the next page.

Controller Alarm List Axis No. 00				
No	Code	Message	Adrs	Detail Time
08	000		*****	0:00:00
09	000		*****	0:00:00
10	000		*****	0:00:00
11	000		*****	0:00:00
12	000		*****	0:00:00
13	000		*****	0:00:00
14	000		*****	0:00:00
15	000		*****	0:00:00

↑ Erase

Menu

Touching [↑] displays the previous page.

Touching Erase clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on. It does not indicate an error.
The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.

SCON-CA

Controller Alarm List			Axis No. **
No	Alarm Code	Address Detail Code	Time(yy/mm/dd hh:mm:ss) Message
**	***	***	**Z**Z** **Z**Z** *****
**	***	***	**Z**Z** **Z**Z** *****
**	***	***	**Z**Z** **Z**Z** *****
**	***	***	**Z**Z** **Z**Z** *****

↑

↓

Clear

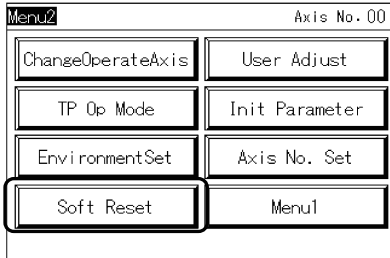
Menu

Touch [↑]/[↓] to move through the list.
Touching [Clear] clears all alarms.


(Note) “Power ON log (no error)” indicates that the controller power was turned off. The occurrence time corresponds to the time each error occurred.

5.12 Controller Restart

The controller is restarted.



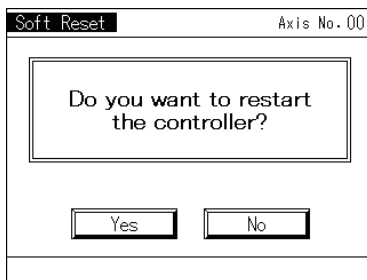Touch [Soft Reset] on the Menu 2 screen.



Touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.



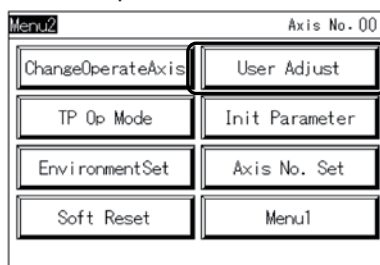
Touch [Yes].

Touch [No] to return to the Menu 1 screen without restarting the controller.

The controller is restarted.


5.13 User Adjustment

You can perform home return, etc.



Touch [User Adjust] on the Menu 2 screen.

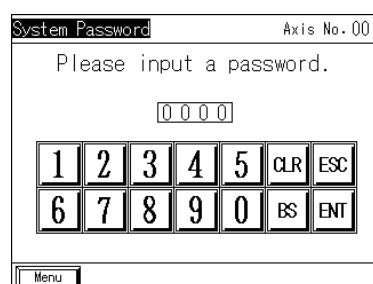
If a system password is set, the password setting screen appears.



Input a system password.

The default password is "5119."
You can set a password on the setting screen.

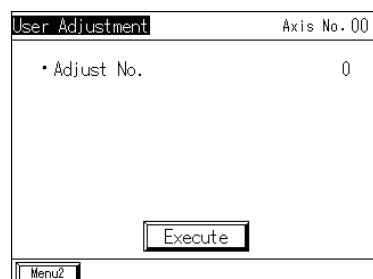The user adjustment screen appears.



Touch [Adjust No.] and ten keys will be displayed.
Set the adjustment number and then touch [Execute].
[Adjust No.]

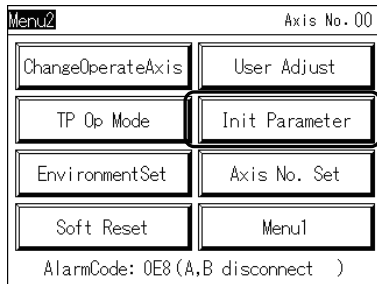
- 1: Home return
Home return can be performed.
- 2: Axis number setting
The operation is the same as what you do on the axis number setting screen.
- 3: Alarm list clear
The operation is the same as what you do on the alarm list screen.
- 4: Controller restart
The operation is the same as what you do when restarting the controller on the Menu 2 screen.
- 6: Calibration
Calibration of the load cell is performed.
- 7: Time setting
You can move to the time setting screen to set time.
(SCON-CA (CON-PT version 1.20 or later))
- 8: Maintenance information
Maintenance information can be displayed.
(SCON-CA (CON-PT version 2.00 or later))

(Note) Adjustment numbers 7 and 8 can be set only on SCON-CA controllers.

5.14 Parameter Initialization


The parameters are reset to their factory default settings (initialized).

Caution: Once the parameters are initialized (to their factory default settings), all parameters the user has set will return to the values set at the factory. Exercise caution.




Touch [Init Parameter] on the Menu 2 screen.

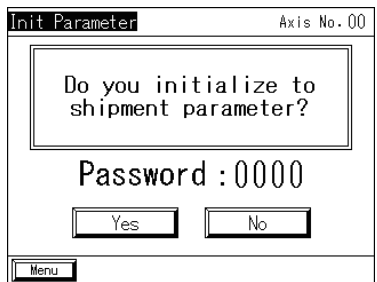If a system password is set, the password setting screen appears.



Touching Password displays the numerical keypad. Input "5119" and touch [ENT].

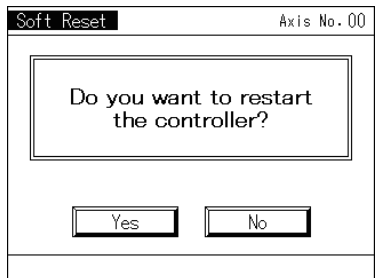Touch [Yes].



Touch [Yes].

Touch [No] to return to the Menu 2 screen without restarting the controller.



Touch [Yes].

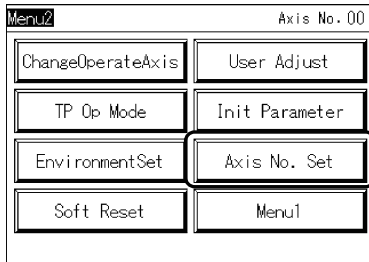
Touch [No] to return to the Menu 1 screen without restarting the controller.

The controller is restarted.

Caution: If the controller is not restarted, the parameters that have been rewritten to their factory settings do not translate to the factory-set operations.
The factory settings will become effective once the controller is restarted or power is reconnected.


5.15 Axis Number Setting

The axis number of the controller is set.



Touch [Axis No. Set] on the Menu 2 screen.

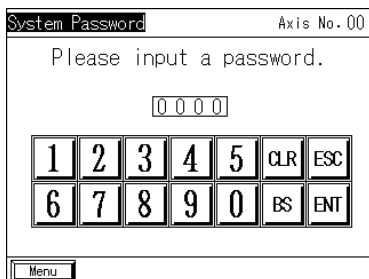If a system password is set, the password setting screen appears.



Input a system password.

The default password is "5119."
You can set a password on the setting screen.

The axis number setting screen appears.

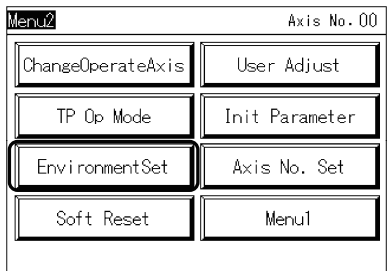


Touching [Axis No.] displays the numerical keypad.
Set a desired axis number and then touch [ENT].

Touch [Execute].


5.16 Information Display

Version and other information of the controller are set.




Touch [EnvironmentSet] on the Menu 2 screen.

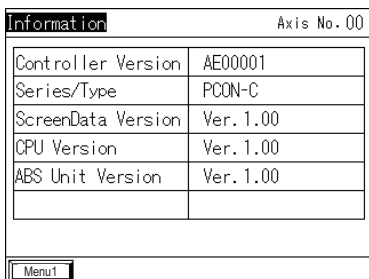The information screen appears.




5.17 Environment Setting

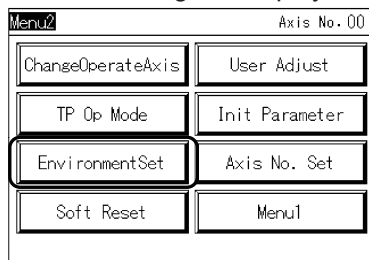You can change or display the language, sound, light off time and system password.



Touch [EnvironmentSet] on the Menu 2 screen.

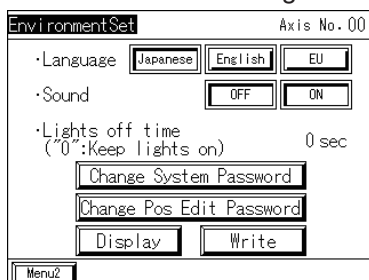
The environment setting screen appears.



[Language]

You can select a desired language to change to that language.

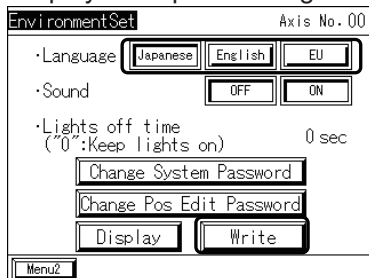Display for Japanese/English/EU languages setting change (Option model code : ENG)




Select and touch [Japanese], etc.

Touch [Write].


(Note) If Write is not performed, the new setting will not become effective after the controller is restarted.

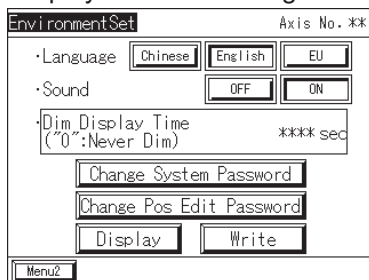Display for Chinese/English/EU languages setting change (Option model code : ECH) Version V1.30 or later



[Sound]

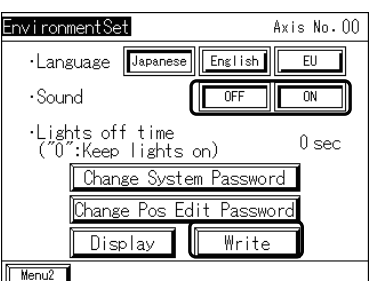You can select whether or not to output a touch tone.




Touch [OFF].A touch tone is not output.

Touch [ON].A touch tone is output.

Touch [Write].

(Note) If Write is not performed, the new setting will not become effective after the controller is restarted.

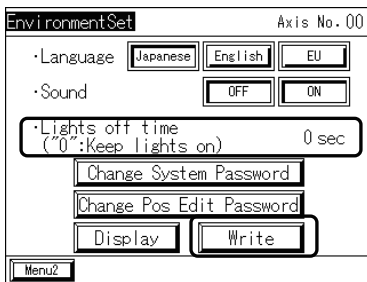[Light off time]




Touching [Light off time] displays the numerical keypad. Enter a desired time after which the screen light turns off when no operation has been performed, and then touch [ENT].

Touch [Write].

(Note) If Write is not performed, the new setting will not become effective after the controller is restarted.


[Change System Password]

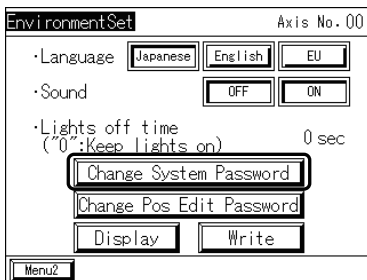You can change the system password.



Touch [Change System Password].

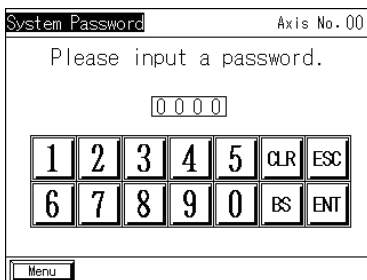If the system password is set, you must enter the password currently set.



Enter the new password to change to. Touch [ENT].



Touch [Change].



Touch [OK].

[Change Pos Edit Password]

EnvironmentSet Axis No. 00

•Language Japanese English EU

•Sound OFF ON

•Lights off time 0 sec
(0:Keep lights on)

Change System Password

Change Pos Edit Password

Display Write

Menu2

Touch [Change Pos Edit Password].

If the system password function is enabled, you must enter the password currently set.

System Password Axis No. 00

Please input a password.

0 0 0 0

1	2	3	4	5	CLR	ESC
6	7	8	9	0	BS	ENT

Menu

Input a password.
Touch [ENT].

The default password is "5119."
You can set a password on the setting screen.

Change Pos Edit Password

New Password : 0 0 0 0

1	2	3	4	5	CLR	ESC
6	7	8	9	0	BS	ENT

Menu

Enter the new password to change to.
Touch [ENT].

Change Pos Edit Password

New Password : 0 0 0 0

Change

Menu

Touch [Change].

Notice

Pos Edit Password
change complete.

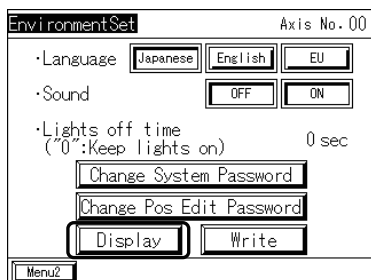
New Password : 0 0 0 0

OK


Touch [OK].

[Display]

You can change the contrast and brightness of the screen.



Touch [Display].

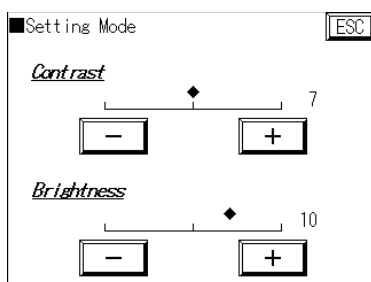

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.

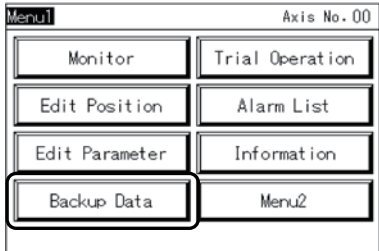
Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.

Touch [ESC] to return to the environment setting screen.


5.18 Data Backup

Data is transferred between the memory of the touch-panel teaching pendant and the controller.



Touch [Backup Data] on the Menu 1 screen.

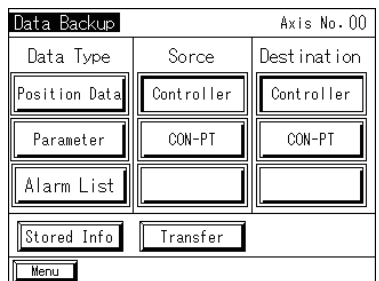The data transfer screen appears.




Select and touch [Position Data] and/or other data you want to transfer.

Select and touch [Controller] or [CON-PT] under Source.

Select and touch [Controller] or [CON-PT] under Destination.

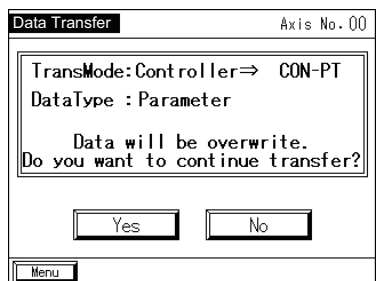Touch [Transfer].



Touch [Yes].

The data is transferred.

6. Operation of SEP Controllers

SEP controllers: ASEP, PSEP

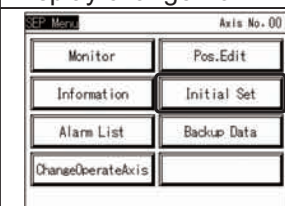
6.1 Displayed Language Change

The language can be changed by following the steps below.


For the operations after the language change, please refer to the instruction manual written in each language.

Model: CON-PT-M-ENG CON-PT-M-JCH


Display change from English to Japanese




Touch [Initial Set] in SEP Menu.

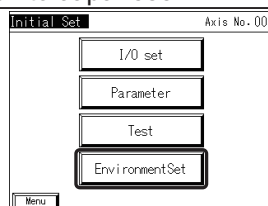

Touch [EnvironmentSet].

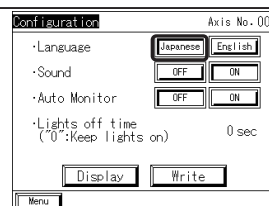


Touch [Japanese].

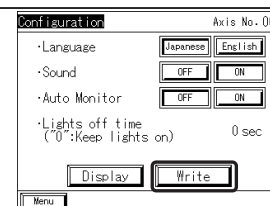


Touch [Write].

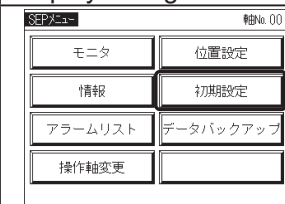
Display change from Japanese to English



Touch [初期設定] in SEP Menu.

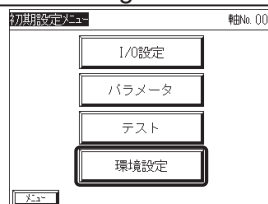

Touch [環境設定].

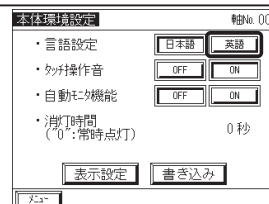


Touch [英語].




Touch [書き込み].

Model: CON-PT-M-ECH CON-PT-M-CHE

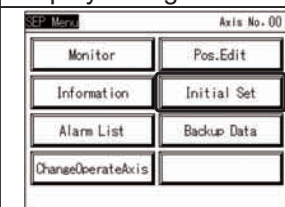
Display change from English to Chinese




Touch [Initial Set] in SEP Menu.

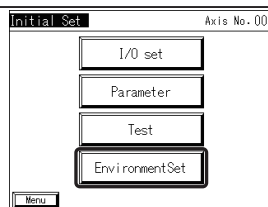

Touch [EnvironmentSet].

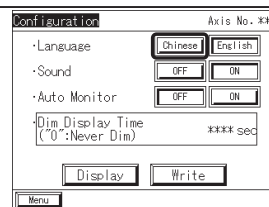


Touch [Chinese].

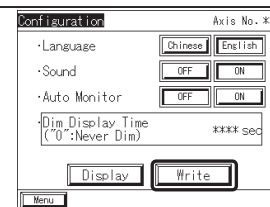


Touch [Write].

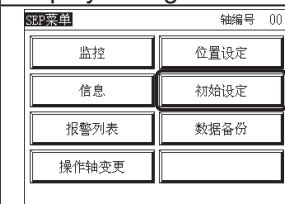Display change from Chinese to English




Touch [初始设定] in SEP 菜单.

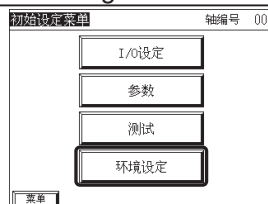

Touch [环境设定].




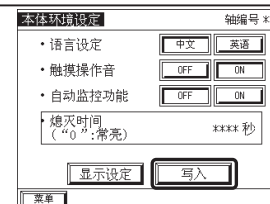Touch [英语].



Touch [写入].




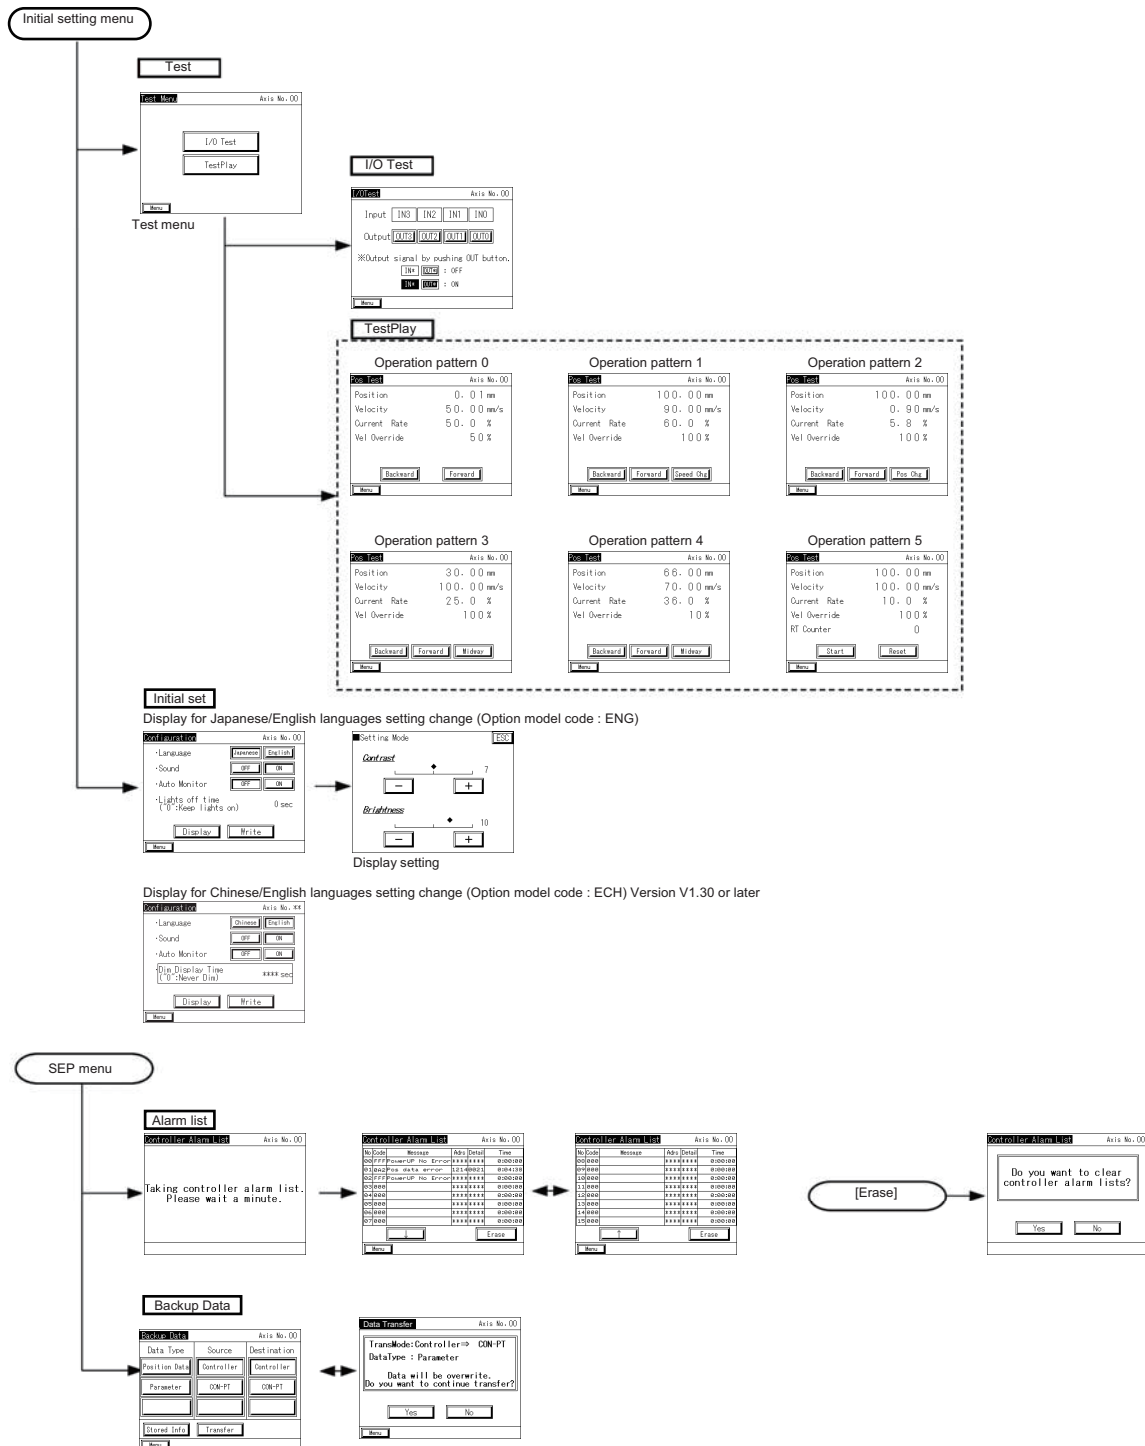

6.3 Initial Screen

Upon connection to the controller, power is supplied to the touch-panel teaching pendant and processing starts.

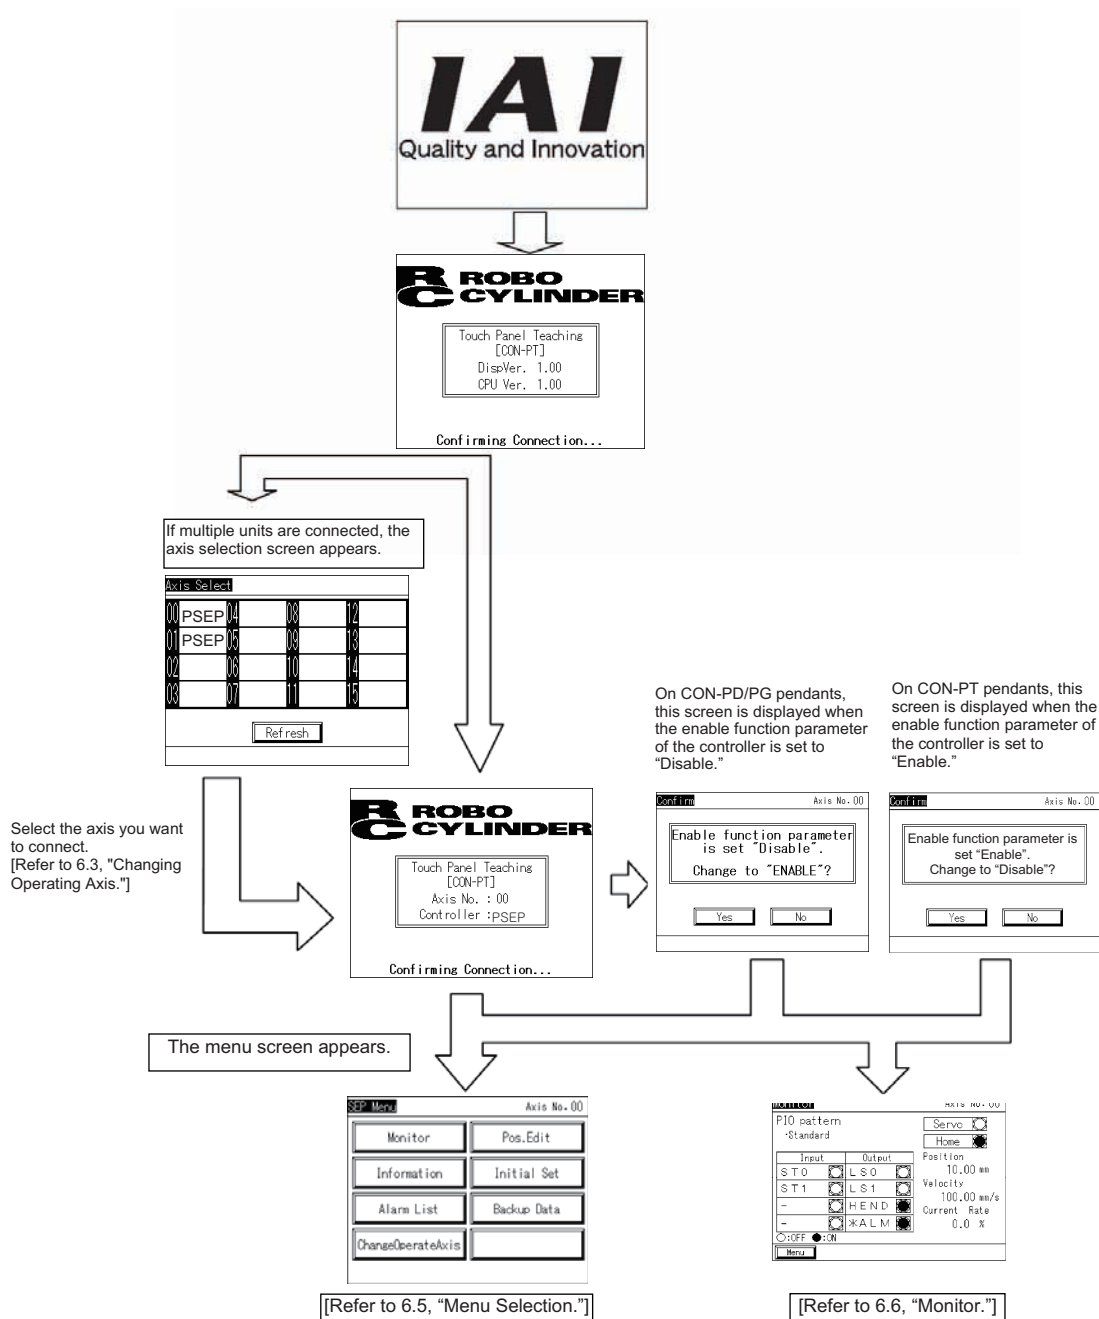When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen (hereinafter referred to as "operation screen") of the touch-panel teaching pendant, after which version information is displayed.




* The same items can be set on the automatic monitor setting screen accessible from the environment setting screen of the controller.

6.4 Initial Setting

When the power is turned on for the first time after the delivery of the controller, the initial setting screen will appear.

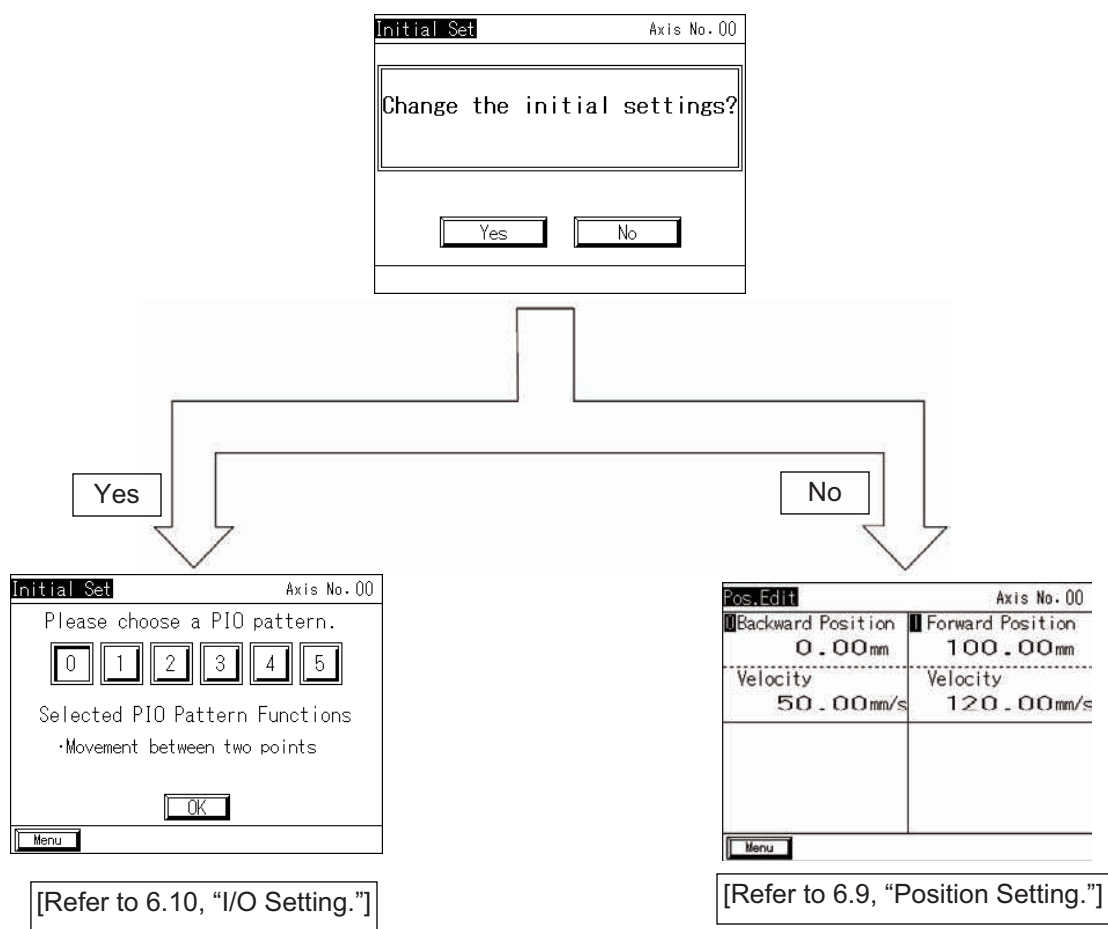- Select [Yes], and the display will change to the I/O setting screen where you can set the operation pattern (PIO pattern). Select a desired operation pattern and, depending on the selected operation pattern, also set the single-solenoid, double-solenoid or other operation mode.
- Select [No], and the factory set operation pattern, or specifically operation pattern 0 of double-solenoid mode, will remain effective.



Factory settings

- Operation pattern 0
- Double-solenoid mode with continuous current flow
- No servo control
- Home return MANU
- Output mode LS

6.5 Changing Operating Axis

If multiple controllers are connected to the communication line, the axis selection screen appears. This screen also appears when [Change Operate Axis] is touched on the menu screen. If only one controller is connected, you need not select an axis.

Axis Select			
00	PSEP	04	08
01	PSEP	05	09
02		06	10
03		07	11
			12
			13
			14
			15
Refresh			

Select and touch the axis you want to connect the touch-panel teaching pendant to.

ROBO CYLINDER

Touch Panel Teaching
[CON-PT]

Axis No. : 00
Controller : PSEP

Confirming Connection...

Connection with the selected controller axis starts.


SEP Menu Axis No. 00

Monitor	Pos.Edit
Information	Initial Set
Alarm List	Backup Data
ChangeOperateAxis	

When connection with the controller is established, the SEP menu screen appears.

6.6 Menu Selection

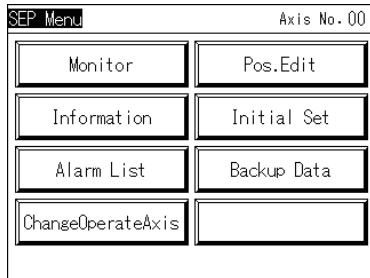SEP menu




The SEP menu has seven items. Select and touch one of them.
The screen changes to the one corresponding to the menu item you have touched.

Menu list

- Monitor Display the controller status. [Refer to 6.7, "Monitor."]
- Information Display the operation pattern, version and other information. [Refer to 6.8, "Information."]
- Alarm List Display alarm details. [Refer to 6.9, "Alarm List."]
- Change Operate Axis Select the controller axis to connect the touch-panel teaching pendant to. [Refer to 6.5, "Changing Operating Axis."]
- Pos. Edit Set the position, push power, push band, etc. Move by jogging. [Refer to 6.10, "Position Setting."]
- Backup Data Transfer data between the touch-panel teaching pendant and controller. [Refer to 6.15, "Data Backup."]
- Initial Set

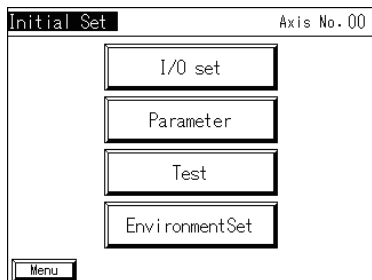Touching [Initial Set] switches to the next selection screen, which is the initial setting screen.




The initial setting screen shows a menu consisting of four items. Select and touch one of them.
The screen changes to the one corresponding to the menu item you have touched.
Touch Menu to return to the previous SEP menu screen.

Initial setting menu list

- I/O Set Select an operation pattern (PIO pattern 0 to 5), set an operation mode (single solenoid, double solenoid), etc. [Refer to 6.11, "I/O Setting."]
- Parameter Set parameters such as the default positioning band. [Refer to 6.12, "Parameters."]
- Test Perform I/O tests and operation tests for axis movement. [Refer to 6.13, "Test."]
- EnvironmentSet Set the environment such as touch tone. [Refer to 6.14, "Environment Setting."]

6.7 Monitor

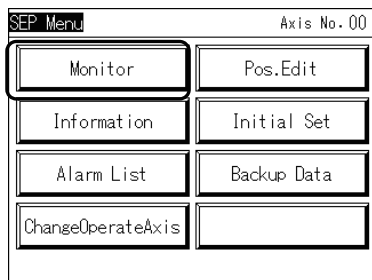
The current position, speed, electrical current and system I/O statuses of the controller are displayed.



Touch [Monitor] on the SEP menu screen.

The operation pattern is indicated.

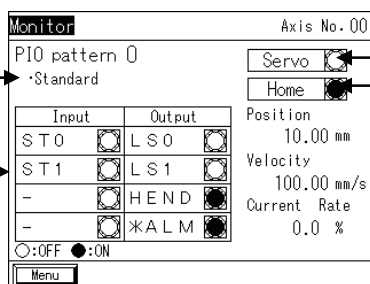The I/O statuses of the axis are indicated.
The display varies depending on the operation pattern.



The servo status is indicated.

The home return status is indicated.

The axis position is indicated.

The axis speed is indicated.

The electrical current of the axis is indicated.

Touch [Menu] to return to the SEP menu screen.

I/O display on monitor screen

PIO pattern operation mode	Displayed item				
		IN3 (input)/OUT3 (output)	IN2 (input)/OUT2 (output)	IN1 (input)/OUT1 (output)	IN0 (input)/OUT0 (output)
Standard movement between 2 points: 0 Single solenoid	Input	-/ SON (servo ON signal) *1	-/ (RES (reset signal))	-/ *STP (pause signal)	ST0 (move signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Standard movement between 2 points: 0 Double solenoid	Input	-/ SON (servo ON signal) *1	-/ (RES (reset signal))	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Change travel speed: 1 Single solenoid	Input	-/ SON (servo ON signal) *1	SPDC (travel speed switching signal) (RES (reset signal))	-/ *STP (pause signal)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Change travel speed: 1 Double solenoid	Input	-/ SON (servo ON signal) *1	SPDC (travel speed switching signal) (RES (reset signal))	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Position data change: 2 Single solenoid	Input	-/ SON (servo ON signal) *1	CN1 (target position switching signal) (RES (reset signal))	-/ *STP (pause signal)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Position data change: 2 Double solenoid	Input	-/ SON (servo ON signal) *1	CN1 (target position switching signal) (RES (reset signal))	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Movement by 2 inputs among 3 points: 3	Input	-/ SON (servo ON signal) *1	-/ (RES (reset signal))	ST1 (forward end movement signal)	ST0 (movement signal 1)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	LS2 (intermediate position detection signal)/ PE2 (intermediate positioning complete signal)*2	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Movement by 3 inputs among 3 points: 4 Double solenoid	Input	-/ SON (servo ON signal) *1	ST2 (position movement 2) (RES (reset signal))	ST1 (forward end movement signal) (-)	ST0 (backward end movement signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	LS2 (intermediate position detection signal)/ PE2 (intermediate positioning complete signal)*2	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2
Continuous back-and-forth operation: 5	Input	-/ SON (servo ON signal) *1	-/ (RES (reset signal))	-/ *STP (pause signal)	ASTR (continuous back-and-forth operation signal)
	Output	*ALM (alarm output signal)/ SV (servo ON output signal) *3	HEND (home return complete signal)/ SV (servo ON output signal) *3	LS1 (forward end position detection signal)/ PE1 (forward end positioning complete signal)*2	LS0 (backward end position detection signal)/ PE0 (backward positioning complete signal)*2

The signal name in parentheses indicates the signal state before home return.

- *1 If the default I/O setting for servo control is set to "Control", the SON signal applies.
- *2 If the default I/O setting for output signal type is set to "Limit Switch", LS is applied. If it is set to "Position End", PE is applied.
- *3 When "SV" is selected by the default I/O setting for output selection. In this case, the SV signal applies. Either OUT2 or OUT3 can be set depending on the operation parameter and operation mode.

6.8 Information

The operation pattern, version and other information is displayed.

SEP Menu		Axis No. 00
Monitor	Pos.Edit	
Information	Initial Set	
Alarm List	Backup Data	
ChangeOperateAxis		

Touch [Information] on the SEP menu screen.

The information selection screen appears.

Info Menu		Axis No. 00
Confirm		
Version		
Product		
Inquiry		
Menu		

Touch the screen you want to display.

Touch [Menu] to return to the SEP menu screen.

[Confirm]

You can confirm the operation pattern, operation mode and other information currently set.

Confirm		Axis No. 00
IO pattern	0 (Standard)	
Solenoid type	Double solenoid	
Input signal	Level	
Control Servo	Control	
Homing	MANU	
Output signal	Limit Switch	
OUT2	HEND	
OUT3	*ALM	
Menu		

[Version]

You can check the version information, etc.

VersionInfo		Axis No. 00
Controller Version	AE200001	
Series/Type	PSEP-NP	
ScreenData Version	Ver. 1.00	
CPU Version	Ver. 1.00	
ABS Board Version	Ver. 1.00	
Menu		

[Product]

You can check the serial number and other manufacturing information.

Product	Axis No. 00
Controller Serial No.	
0 1 2 3 4 5 6 7 8 9 A B C D E F	
Controller PCB Revision	
M.REV: 1	
F.REV: 1	
Actuator Serial No.	
F E D C B A 9 8 7 6 5 4 3 2 1 0	
Menu	

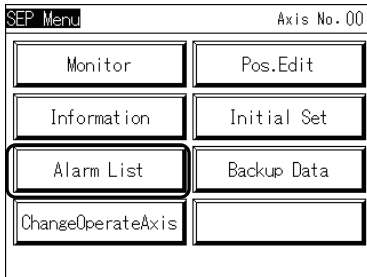
[Inquiry]

You can check how to contact IAI.

Inquiry
IAI Customer center
"EIGHT"
☎ 0800-888-0088
OPEN 24 HOURS A DAY.
Weekend open 9:00AM to 5:00PM
http://www.iai-robot.co.jp/


6.9 Alarm List

A list of alarms that may generate after the controller power is turned on is shown. [For alarm details, refer to 8, "Error Display."]



Touch [Alarm List] on the SEP menu screen.

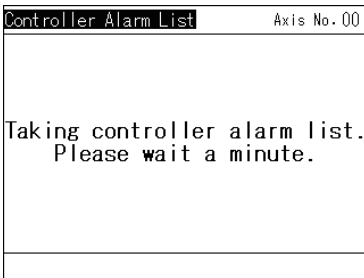A screen appears, indicating that an alarm list being acquired.



The controller's alarm list appears. The error list consists of pages 0 to 15.

Controller Alarm List					Axis No. 00
No	Code	Message	Adrs	Detail	Time
00	FFF	PowerUP No Error	*****		0:00:00
01	0A2	Pos data error	1214	0021	0:04:30
02	FFF	PowerUP No Error	*****		0:00:00
03	000		*****		0:00:00
04	000		*****		0:00:00
05	000		*****		0:00:00
06	000		*****		0:00:00
07	000		*****		0:00:00

Navigation buttons: [↓] and [Erase]

Touching [↓] displays the next page.

Controller Alarm List					Axis No. 00
No	Code	Message	Adrs	Detail	Time
08	000		*****		0:00:00
09	000		*****		0:00:00
10	000		*****		0:00:00
11	000		*****		0:00:00
12	000		*****		0:00:00
13	000		*****		0:00:00
14	000		*****		0:00:00
15	000		*****		0:00:00

Navigation buttons: [↑] and [Erase]

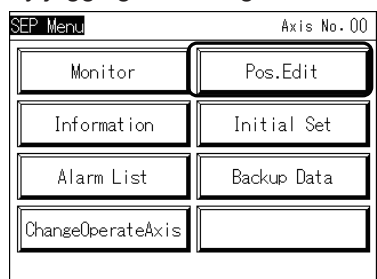
Touching [↑] displays the previous page.

Touching [Erase] clears all alarm details.

(Note) PowerUP No Error indicates that the controller power was turned on. It does not indicate an error.
The time of occurrence of each alarm is indicated by an elapsed time from this PowerUP No Error.


6.10 Position Setting (Setting of Position-related Data, Jog/Inching Operation)

Position-related data, such as position, push power and push band, are set. You can move the axis by jogging or inching.



Touch [Pos. Edit] on the SEP menu screen.

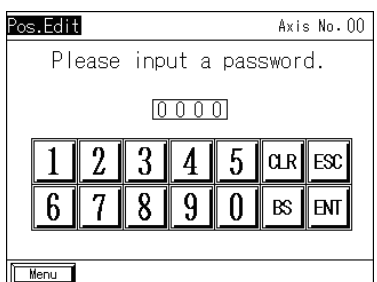If the password is not "0000," the password entry screen appears before changing to the position setting screen.




Enter a password value from the numeric keypad, and then touch [ENT].

You can set a password from "Position edit password" on the parameter edit screen.

If the correct password has been entered, the display changes to the screen showing a position setting list.

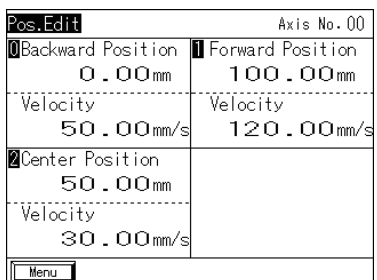The display varies depending on the operation pattern.



Touch the position you want to set.

Touch [Menu] to return to the SEP menu screen.

The screen shown to the left is an example of operation pattern 3.

The settings of various positions are shown.

Number of positions set

Operation pattern	Move	Number of positions set
Standard movement between 2 points: 0	Movement between two points	2
Change travel speed: 1	Movement between two points	2
Change position: 2	Movement between two points	4
Movement by 2 inputs among 3 points: 3	Movement among two points	3
Movement by 3 inputs among 3 points: 4	Movement among two points	3
Continuous back-and-forth operation: 5	Movement between two points	2

Touching a desired position displays the screen for setting the target position/speed for the position you have touched.

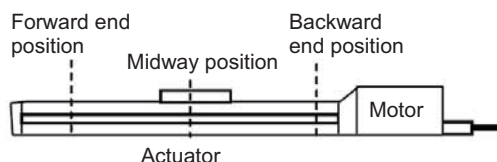
Set the position, speed, push power, push band, acceleration and deceleration.

Touch [Menu] to return to the SEP menu screen.

You can perform jog operation on this setting screen.

[1] Position data

Set position data with which to operate the actuator.



Position data

Position Data		[1]	[2]	[3]	[4]	[5]	[6]	[7]
		Position [mm]	Velocity [mm/s]	Accelerate [G]	Decelerate [G]	PushPower [%]	PushBand [mm]	Ecology
[1]	Forward Position	200.00	50.00	0.1	0.1	70	1.00	Valid
[2]	Backward Position	0.00	50.00	0.1	0.1	0	0	Valid
[3]	Midway Position	100.00	50.00	0.1	0.1	0	0	Valid

[1] Position (mm)--- Set the position to move the actuator to.

The positions must satisfy the following relationships: Backward position < Midway position < Forward position

Operation pattern	Move	Setting position		
		Forward Position	Backward Position	Intermediate Position
Standard movement between 2 points: 0	Movement between two points	○	○	
Change travel speed: 1	Movement between two points	○	○	
Position data change: 2	Movement between two points	○	○	
Movement by 2 inputs among 3 points: 3	Movement among three points	○	○	○
Movement by 3 inputs among 3 points: 4	Movement among three points	○	○	○
Continuous back-and-forth operation: 5	Movement between two points	○	○	

[2] Velocity [mm/s]--- Set the actuator speed.

[3] Accelerate [G] --- Set the actuator acceleration.

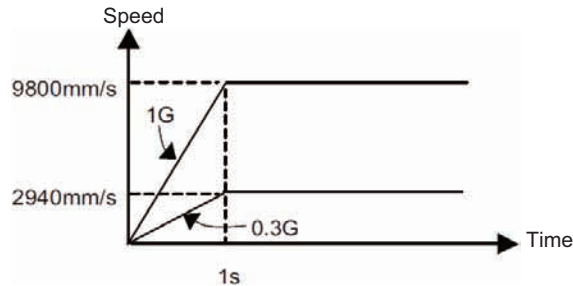
The input range permits entry of values greater than what is specified in the catalog. Refer to the catalog or operation manual of your actuator.

[4] Decelerate [G]--- Set the actuator deceleration. [G]

(Reference) Acceleration is explained. The same concept applies to deceleration.

1 G = 9800 mm/s²: Acceleration at which the actuator can increase its speed up to 9800 mm/s per second.

0.3 G: Acceleration at which the actuator can increase its speed up to 2940 mm/s (9800 mm/s x 0.3) per second.



Caution

Acceleration/deceleration setting

- (1) Set accelerations/decelerations not exceeding the rated acceleration/deceleration specified in the catalog or this operation manual. If any acceleration/deceleration is set that exceeds the rated acceleration/deceleration, the life of the actuator may be significantly reduced.
- (2) If the actuator or load receives impact or generates vibration, lower the acceleration/deceleration. If the system is used continuously with the actuator or load receiving impact or generating vibration, the life of the actuator may be significantly reduced.
- (3) If the load transferred by the actuator is significantly lighter than the rated loading capacity, you may be able to set accelerations/decelerations exceeding the rating. If this is the case, the tact time can be reduced, so contact IAI. When contacting IAI, tell us the weight, shape and installation method of your load and installation condition (horizontal/vertical) of your actuator.

[5] Push force [%] ...

Set the push torque (current-limiting value) to be used in push-motion operation as a percent (%) value.

Increasing the current-limiting value increases the push force.

If "0" is set, positioning operation is performed.

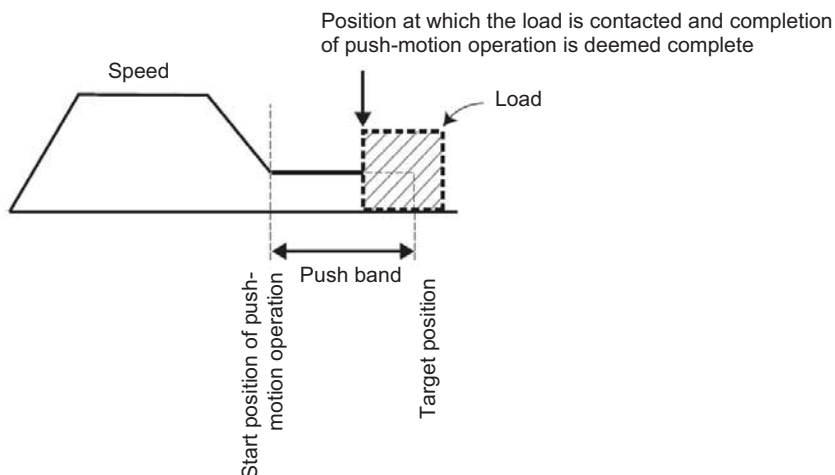
[For the relationship of push force and current-limiting value, refer to the catalog or the operation manual.

[6] Push band [mm] ...

Set the travel during push-motion operation.

When push-motion operation is performed, the actuator moves at the speed and rated torque set as part of positioning information, just like normal positioning, until the remaining travel enters the range set here. Once the remaining travel enters this range, the actuator moves to the position set in [1] while pushing the load.

The speed during push motion operation is 20 mm/s (when parameter number 7 is set as default). Do not specify the setting exceeding 20 mm/s. When the setting in [2] is less than the push-motion speed, push-motion will be performed at the speed of the setting value.




[7] Ecology...

When Ecology is enabled, you can have the motor power (servo) turned off automatically upon elapse of a specified period to save power after completion of positioning. Set the applicable period beforehand using a parameter.

Parameter No.	Parameter name	Initial value	Setting range
10	Auto servo OFF delay time [sec]	1	0 ~ 9999

[Auto servo OFF]

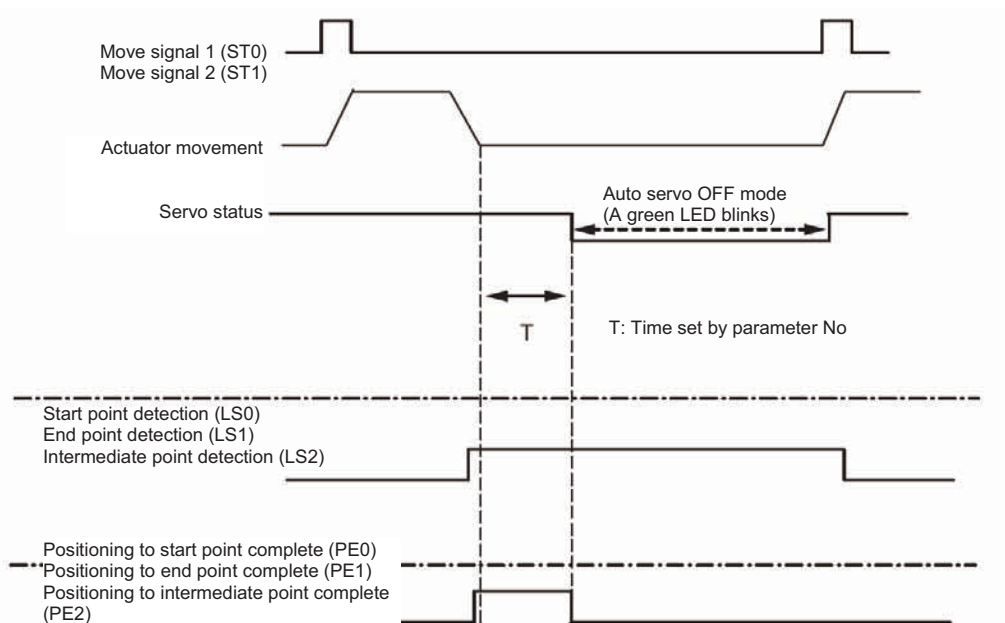The servo will turn off automatically upon elapse of a specified period after completion of positioning. When the next positioning command is issued, the servo turns on automatically and positioning is performed. Since no holding current flows while the motor is at standstill, power consumption can be reduced.



[Statuses of position detection output signals when the push function is not used]

Even when the servo is turned off, as long as the actuator is positioned within the positioning band (parameter No. 1) the start point detection signal (LS0), end point detection signal (LS1) or intermediate point detection signal (LS2) will turn ON according to the applicable position, just like when a sensor is used. Accordingly, the position detection signal that has turned ON will remain ON after completion of positioning unless the actuator moves.

[Status of position complete signals when the push function is used]

In push-motion operation, the servo does not turn off automatically while the actuator is pushing the load.

If the actuator has missed the load, the servo turns off automatically.

Once the servo turns off, a position complete status is lost. Accordingly, the push complete signal 0 (PE0), push complete signal 1 (PE1) and push complete signal 2 (PE2) will all turn OFF regardless of the stop position.



Caution

No holding torque is applied in the auto servo OFF mode. Since the actuator will move in this condition if an external force is applied, pay due attention to contact and safety when setting any operation involving auto servo OFF.

To change the travel speed for operation pattern (PIO pattern) 1, set the position at which to change the speed, and the new speed, in addition to the position data.

Position setting screen	Speed Chg Pos	
Position Data	[8] Change position [mm]	[9] Change speed [mm]
[0] Forward Position	60.00	30.00
[1] Backward Position	40.00	30.00

[8] Speed Chg Pos --- Set the position at which to switch the speed while the actuator is moving to the forward end position or backward end position.

[9] Speed Chg Vel --- Set the speed to change to.

To change the position data for operation pattern (PIO pattern) 2, set the new position data for forward end or backward end, in addition to the current position data for forward end position or backward end position.

- If CN1 (operation switching signal) is OFF, the position data for forward end position becomes [1]: Forward end position.
If the signal is ON, the position data becomes [3]: Forward end position.
- If CN1 (operation switching signal) is OFF, the position data for backward end position becomes [0]: Backward end position.
If the signal is ON, the position data becomes [2]: Backward end position.

Position Data	Position	Velocity	Accelerate	Decelerate	PushPower	PushBand	Ecology
[0]: Backward Position	0.00	50.00	0.1	0.1	0	0	Valid
[1]: Forward Position	200.00	50.00	0.1	0.1	70	1.00	Valid
[2]: Backward Position	10.00	50.00	0.1	0.1	0	0	Valid
[3]: Forward Position	100.00	50.00	0.1	0.1	60	1.00	Valid

[2] Basic operation

Pos.Edit		Axis No. 00	
0 Backward Position [0] [1] [2]			
Position	0.00 mm		
Velocity	50.00 mm/s		
PushPower	0%		
PushBand	0.10 mm		
Accelerate	0.30 G		
Decelerate	0.30 G		
Ecology	ON OFF		
		[Clear]	[Jog]
[Menu]			

Touch the value of the position or other setting item.
When the numeric keypad appears, enter a desired value and then touch [ENT].

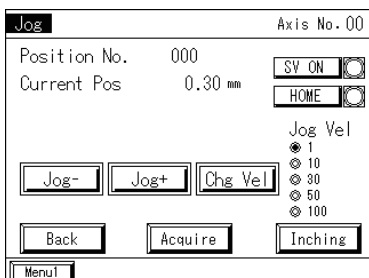
Touching [0], [1] or [2] switches to the corresponding setting screen for 0 (backward end position), 1 (forward end position) or 2 (intermediate position).

(Note) For the position, set a value meeting the condition "Home ≤ Backward end position ≤ Intermediate position ≤ Forward end position."

Touching [Jog] switches to jog operation.

[Jog operation]

You can acquire position data via jogging operation.



Operation on the jog screen

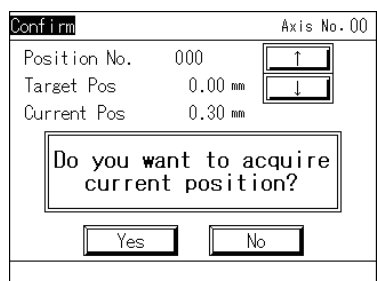
- [Jog-], [Jog+]: The axis jogs while each button is touched. [Jog-] moves the axis in the negative direction, while [Jog+] moves the axis in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] while the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Vel]: The jog speed changes in the order of 1, 10, 30, 50 and 100 mm/s every time [Chg Vel] is touched.
- [Inching]: Touching [Inching] changes to the inching screen.

Position acquisition operation

Touch [Acquire]. A confirmation screen appears.


You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.



[Inching operation]

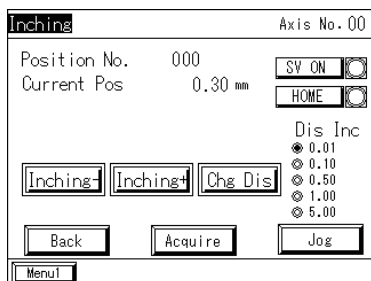You can acquire position data via inching operation.



Operation on the jog screen

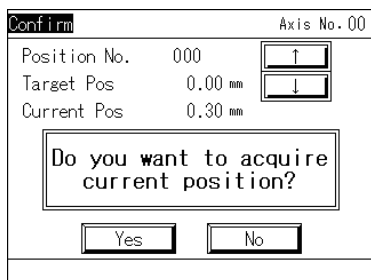
- [Inching-], [Inching+]: Touching each button once moves the axis by inching. [Inching-] moves the actuator in the negative direction. [Inching+] moves the actuator in the positive direction.
- [SV ON]: Touching [SV ON] while the servo is off turns on the axis servo and O becomes lit. Touching [SV OFF] when the servo is on turns off the axis servo and O becomes unlit.
- [HOME]: Touching [HOME] while home return is not yet completed causes the axis to return home and O becomes lit.
- [Chg Dis]: The inching distance changes in the order of 0.01, 0.10, 0.50, 1.00 and 5.00 mm every time [Chg Dis] is touched.
- [Jog]: Touching [Jog] changes to the jog screen.

Position acquisition operation

Touch [Acquire]. A confirmation screen appears.

You can touch [↑] or [↓] to change the position number.

Touching [Yes] acquires the current position.








[3] Examples of position setting operations
Respective operations are explained by giving specific examples.







1) Setting of position, speed, acceleration and deceleration








An example of operation mode 0 (standard) is explained.







Set positions to move the actuator back and forth between 10.0 mm and 100.0 mm.

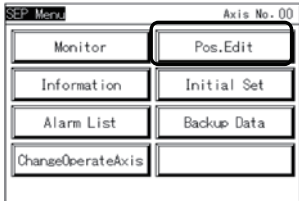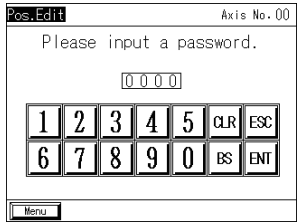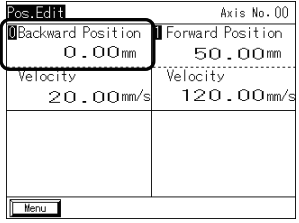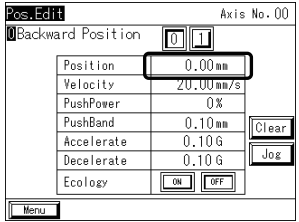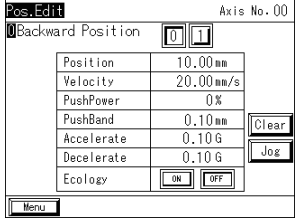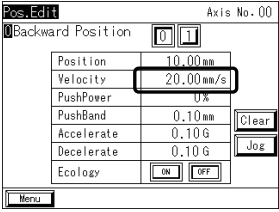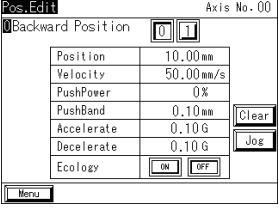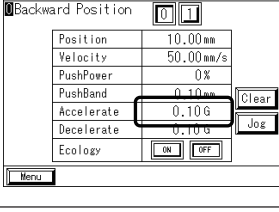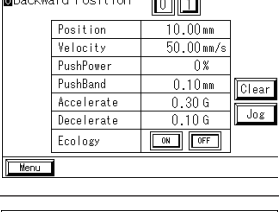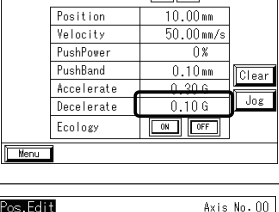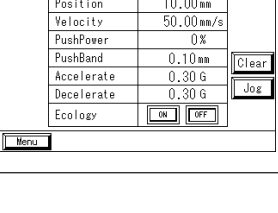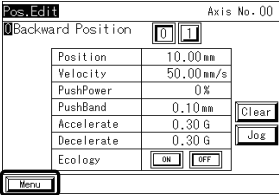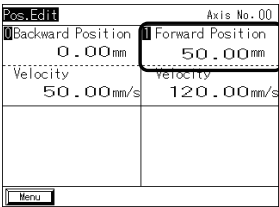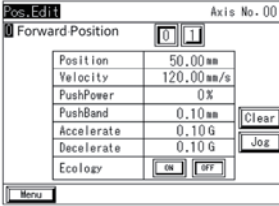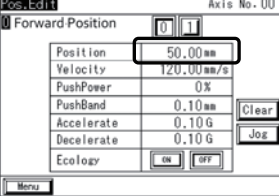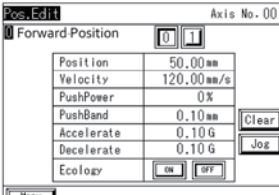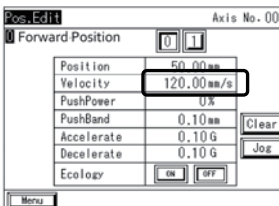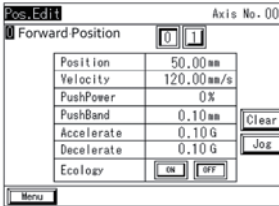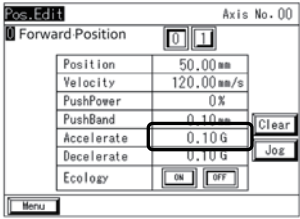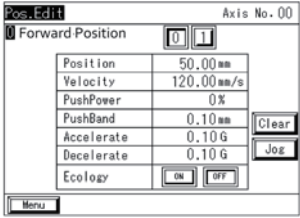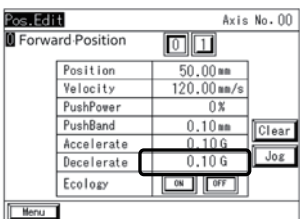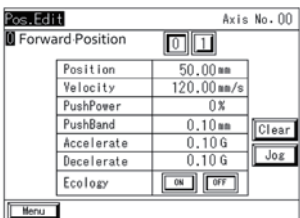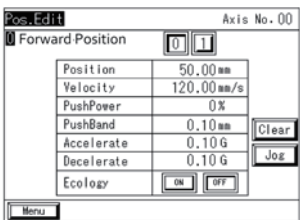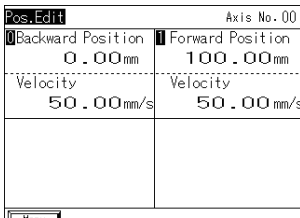Forward end position: 100.0 mm, backward end position: 10.0 mm, back-and-forth speed: 50 mm/sec, back-and-forth acceleration: 0.3 G, back-and-forth deceleration: 0.3 G


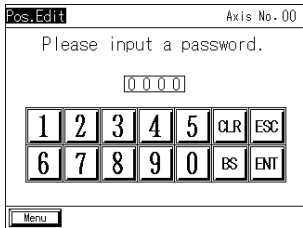
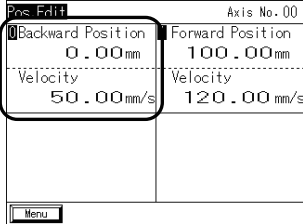
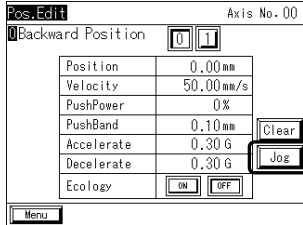
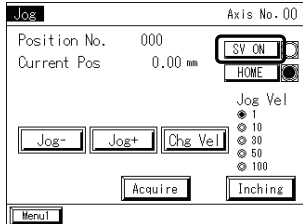
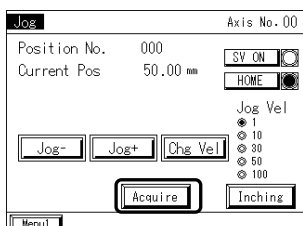
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the password is other than "0000," the password input screen appears. Input a password.		You can set a password for position specification from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch the value in Position. The numeric keypad appears. Touch [1] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
5	10.00 is shown in Position.		Touch [Menu] to return to the position setting screen.






No.	Operation	Screen	Remarks
6	Touch the value in Velocity. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
7	50.00 is shown in Velocity.		Touch [Menu] to return to the position setting screen.
8	Touch the value in Accelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
9	0.30 is shown in Accelerate.		Touch [Menu] to return to the position setting screen.
10	Touch the value in Decelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
11	0.30 is shown in Decelerate.		Touch [Menu] to return to the position setting screen.

No.	Operation	Screen	Remarks
12	Touch [Menu].		
13	Set the position, acceleration and deceleration relating to the forward end position. Touch [Forward Position].		Touch [Menu] to return to the SEP menu screen.
14	The display switches to the forward end screen. Set the position, acceleration and deceleration relating to the forward end position.		Touch [Menu] to return to the position setting screen.
15	Touch the value in Position. The numeric keypad appears. Touch [1], [0] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
16	100.00 is shown in Position.		Touch [Menu] to return to the position setting screen.
17	Touch the value in Velocity. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
18	50.00 is shown in Velocity.		Touch [Menu] to return to the position setting screen.







No.	Operation	Screen	Remarks
19	Touch the value in Accelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
20	0.30 is shown in Accelerate.		Touch [Menu] to return to the position setting screen.
21	Touch the value in Decelerate. The numeric keypad appears. Touch [0], [.] and [3], and touch [ENT].		Touch [Menu] to return to the position setting screen.
22	0.30 is shown in Decelerate.		Touch [Menu] to return to the position setting screen.
23	Touch [Menu].		Touch [Menu] to return to the position setting screen.
24			Touch [Menu] to return to the SEP menu screen.








- 2) Direct teaching (Manually move the slider to the target position and then acquire the achieved position (current position) as the forward end position or backward end position)
An example of operation mode 0 (standard movement between 2 points) is explained.
How to acquire the current position, or 50.0 mm, as the backward end position is explained.

No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the password is other than "0000," the password input screen appears. Input a password.		You can set a password for position setting from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is ON, touch [SV OFF] to turn off the servo.		
6	Manually move the slider or rod to the target position of 50.0 mm. Touch [Acquire].		

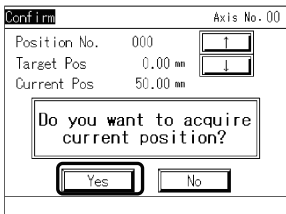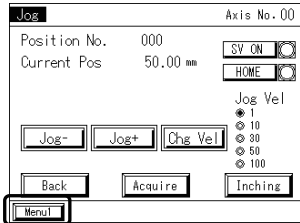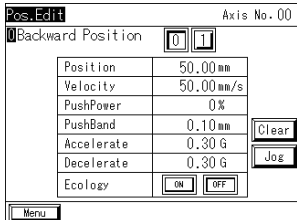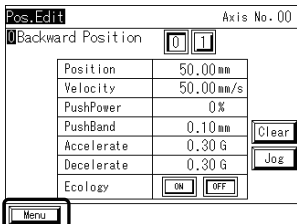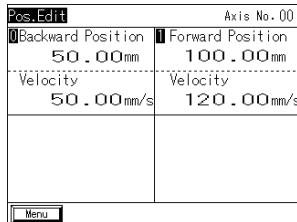No.	Operation	Screen	Remarks
7	Touch [Yes].		
8	Touch [Menu].		
9	50.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
10	Touch [Menu].		Touch [Menu] to return to the position setting screen.
11			Touch [Menu] to return to the SEP menu screen.

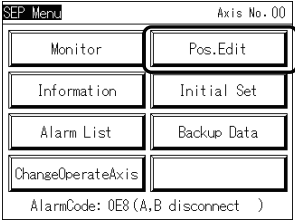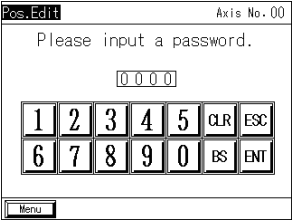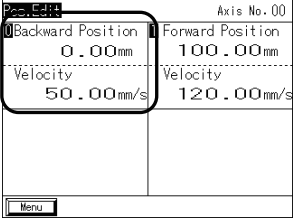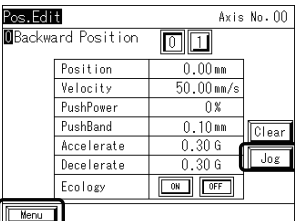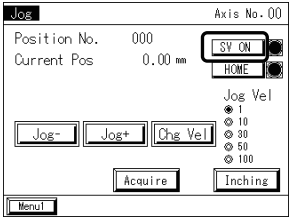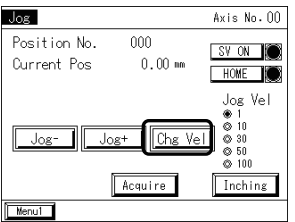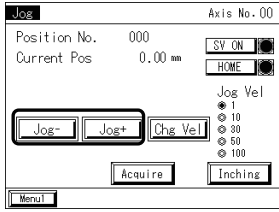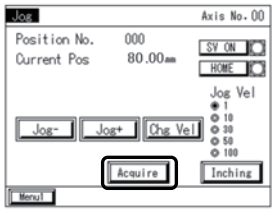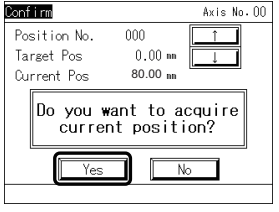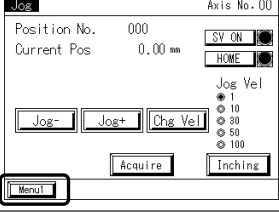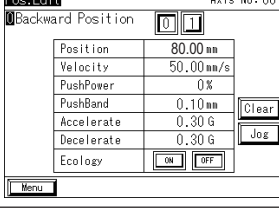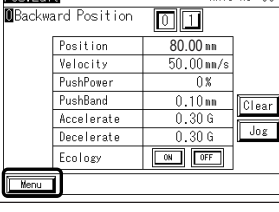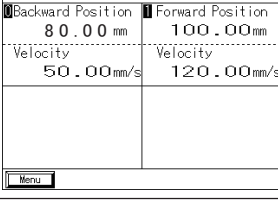- 3) Jog (Use the arrow keys [Jog-] and [Jog+] to jog the actuator to the target position and then acquire the achieved position (current position) as the forward end position or backward end position).
An example of operation mode 0 (standard movement between 2 points) is explained.
How to acquire the current position, or 80.0 mm, as the backward end position is explained.


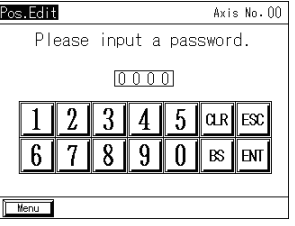
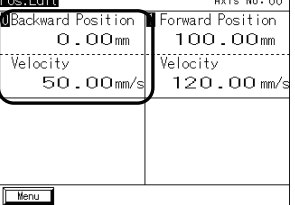
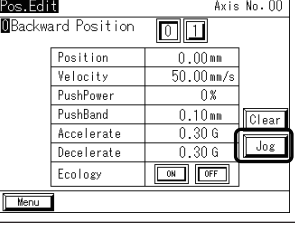
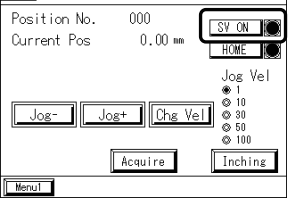
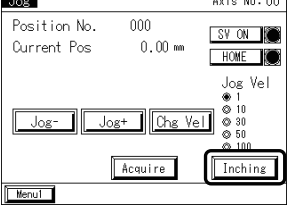
No.	Operation	Screen	Remarks
1	Touch [Pos. Edit] on the SEP menu screen.		
2	If the password is other than "0000," the password input screen appears. Input a password.		You can set a password for position setting from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is off, touch [SV ON] to turn on the servo.		
6	Touch [Chg Vel] to set a desired jog speed.		

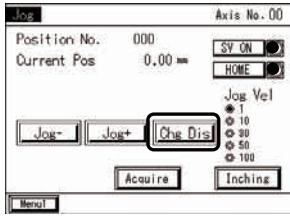
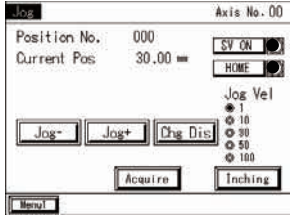

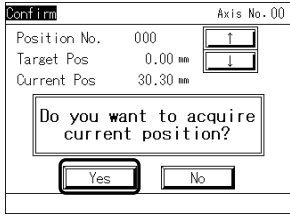
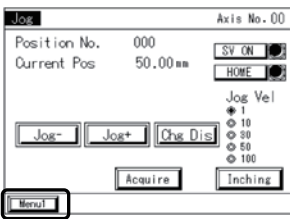
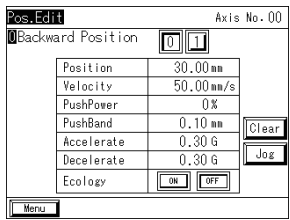
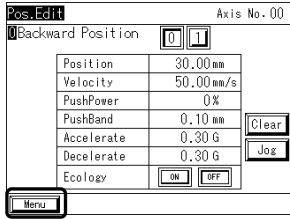
No.	Operation	Screen	Remarks
7	Use [Jog-] and [Jog+] to move the slider or rod to the target position of 80.0 mm.		
8	Touch [Acquire].		
9	Touch [Yes].		
10	Touch [Menu].		
11	80.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
12	Touch [Menu].		Touch [Menu] to return to the position setting screen.
13			Touch [Menu] to return to the SEP menu screen.


- 4) Inching (Use the arrow keys [Inching-] and [Inching+] to inch the actuator to the target position and then acquire the achieved position (current position) as the forward end position or backward end position).

An example of operation mode 0 (standard movement between 2 points) is explained.

How to acquire the current position, or 30.0 mm, as the backward end position is explained.

No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the password is other than "0000," the password input screen appears. Input a password.		You can set a password for position setting from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch [Jog].		Touch [Menu] to return to the position setting screen. * Perform home return if not already completed.
5	If the servo is off, touch [SV ON] to turn on the servo.		
6	Touch [Inching]. The display switches to the inching screen.		Touch [Menu] to return to the itemized position setting screen.

No.	Operation	Screen	Remarks
7	Touch [Chg Dis] and set a desired inching distance.		
8	Use [Inching+] and [Inching-] to move the slider or rod to the target position of 30.0 mm.		
9	Touch [Acquire].		
10	Touch [Yes].		
11	Touch [Menu].		
12	30.00 is shown in Position. It is now confirmed that the position data has been acquired.		Touch [Menu] to return to the position setting screen.
13	Touch [Menu].		Touch [Menu] to return to the position setting screen.

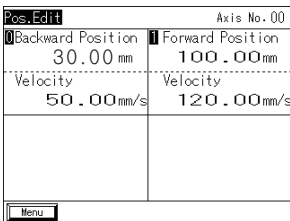
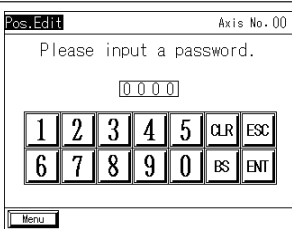
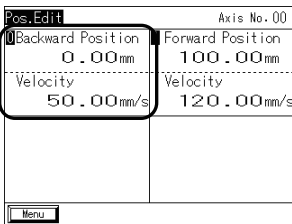
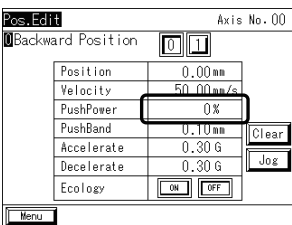
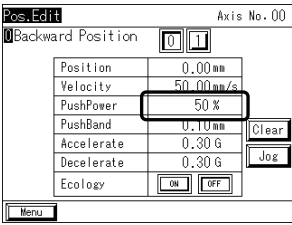
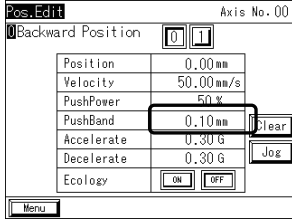
No.	Operation	Screen	Remarks
14			Touch [Menu] to return to the SEP menu screen.




5) Setting of push-motion operation (push power, push band)

An example of operation mode 0 (standard movement between 2 points) is explained.

An example of push-motion operation at the backward end is explained.

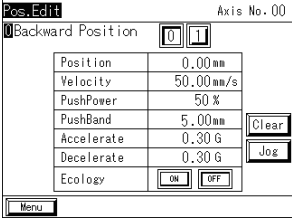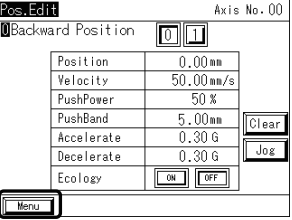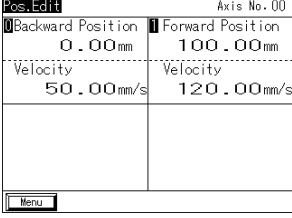Push power: 50%, push band: 5.0 mm


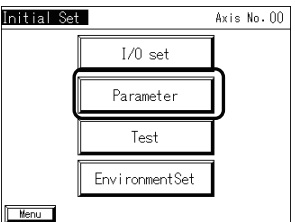
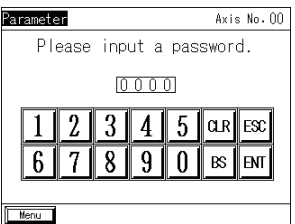
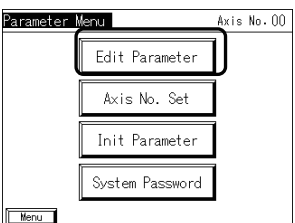
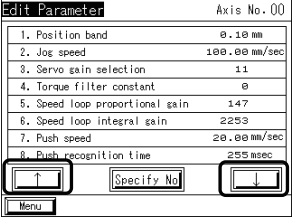
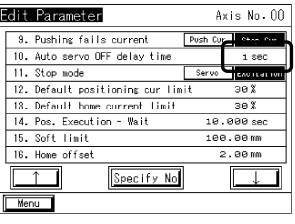
No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Pos.Edit].		
2	If the password is other than "0000," the password input screen appears. Input a password.		You can set a password for position setting from "Position edit password" on the parameter edit screen.
3	Set the position, acceleration and deceleration relating to the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.
4	Touch the value in [PushPower]. The numeric keypad appears. Touch [5] and [0], and touch [ENT].		Touch [Menu] to return to the position setting screen.
5	50 is shown in PushPower.		Touch [Menu] to return to the position setting screen.
6	Touch the value in [PushBand]. The numeric keypad appears. Touch [5], and touch [ENT].		Touch [Menu] to return to the position setting screen.

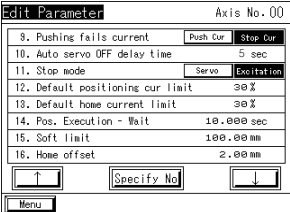
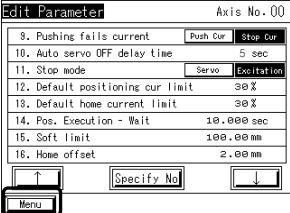
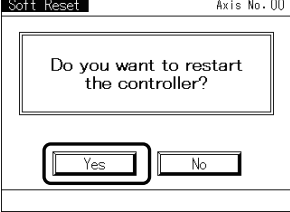
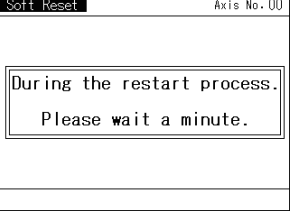

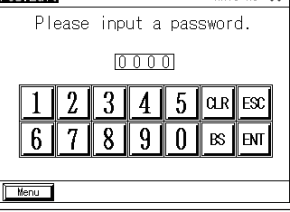
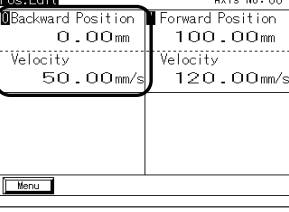
No.	Operation	Screen	Remarks
7	5.00 is shown in Push Band.		Touch [Menu] to return to the position setting screen.
8	Touch [Menu].		Touch [Menu] to return to the position setting screen.
9			Touch [Menu] to return to the SEP menu screen.

6) Setting of ecology function (automatic servo OFF function)

An example of operation mode 0 (standard) is explained.

How to turn off the servo automatically 5.0 seconds after stopping is explained.


No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Initial Set].		
2	Set a desired automatic servo OFF delay time. Touch [Parameter].		
3	Input a password.		The password is "5119" (default setting).
4	Touch [Edit Parameter].		
5	Touch [↑] and [↓] to navigate through the screens until the one for setting the automatic servo OFF delay time is displayed.		
6	Touch the value of automatic servo OFF delay time. The numeric keypad appears. Touch [5], and touch [ENT].		

No.	Operation	Screen	Remarks
7	5 is shown.		
8	Touch [Menu].		
9	Touch [Yes].		Touch [No], and the new setting will not be reflected in the controller until the power is reconnected.
10			
11	The controller is restarted and the SEP menu screen will appear. Touch [Pos.Edit].		
12	If the password is other than "0000," the password input screen appears. Input a password.		You can set a password for position setting with the "Position edit password" parameter on the parameter edit screen.
13	Set the ecology function at the backward end position. Touch [Backward Position].		Touch [Menu] to return to the SEP menu screen.


No.	Operation	Screen	Remarks
14	Touch [ON].		Touch [Menu] to return to the position setting screen.
15	Touch [Menu].		Touch [Menu] to return to the position setting screen.
16	Set the ecology function at the forward end position. Touch [Forward Position].		Touch [Menu] to return to the SEP menu screen.
17	The display switches to the forward end screen. Set the ecology function related to the forward end position.		Touch [Menu] to return to the position setting screen.
18	Touch [ON].		Touch [Menu] to return to the position setting screen.
19	Touch [Menu].		Touch [Menu] to return to the position setting screen.
20			Touch [Menu] to return to the SEP menu screen.

6.11 I/O Setting (Setting of Operation Parameters, Etc.)

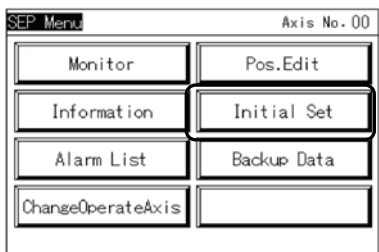You can select an operation pattern (PIO pattern) (0 to 5), set an operation mode (single solenoid, double solenoid), etc.



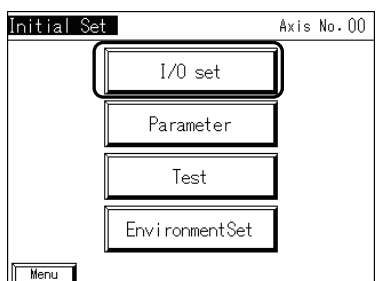
Touch [Initial Set] on the SEP menu screen.



Touch [I/O set]

Touch [Menu] to return to the SEP menu screen.

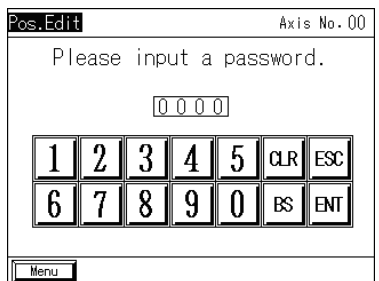
The password entry screen appears before the initial setting screen.



Enter a password value from the numeric keypad, and then touch [ENT].

The password is "5119" (default setting).

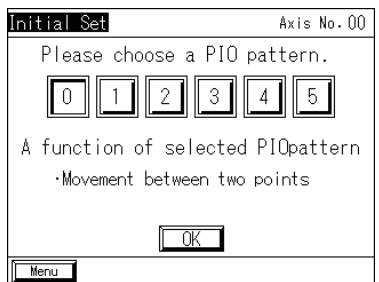If the correct password has been entered, the display changes to the screen for setting the operation pattern.



Select and touch one of operation patterns 0 to 5, and then touch [OK].

The screen corresponding to the selected operation pattern appears.

Operation pattern 0 (standard movement between 2 points), operation pattern 1 (change travel speed), operation pattern 2 (change position data)

Initial Set Axis No. 00

Solenoid type: Single Double

Control Servo: Non-use Control

Stop signal: Not used Use

Input signal: Level Edge

Back Next

Menu

➔

Initial Set Axis No. 00

Homing: MANU AUTO

Output signal: LimitSwitch PositionEnd

DO signal: OUT2 OUT3 HEND HEND SV SV *ALM *ALM

Back Complete

Menu

Next

Operation pattern 3 (movement by 2 inputs among 3 points), operation pattern 4 (movement by 3 inputs among 3 points)

Initial Set Axis No. 00

Control Servo: Non-use Control

Input signal: Level Edge

Midway move: Both OFF Both ON

Back Next

Menu

➔

Initial Set Axis No. 00

Homing: MANU AUTO

Output signal: LimitSwitch PositionEnd

DO signal: OUT3 *ALM SV

Back Complete

Menu

Next

Operation pattern 5 (continuous back-and-forth operation)

Initial Set Axis No. 00

Control Servo: Non-use Control

Stop signal: Not used Use

Back Next

Menu

➔

Initial Set Axis No. 00

Homing: MANU AUTO

Output signal: LimitSwitch PositionEnd

DO signal: OUT2 OUT3 HEND HEND SV SV *ALM *ALM

Back Complete

Menu

Next

The items that can be set vary with each operation mode.

Touch [Back] to return to the operation pattern screen.

Setting item

Operation pattern	Operation mode	Intermediate position Movement method	Double solenoid type	Pause Signal *STP	Control Servo SON	OUT2, OUT3	OUT3	Home return	DO signal
	Single solenoid/ double solenoid	Both OFF/ Both ON	Level Edge	Not used Use	Non-use Control	HEND,*ALM/ SV,*ALM/ HEND,SV	*ALM/ SV	MANU/ AUTO	Limit switch LS/ Positioning PE
PIO pattern 0 Standard movement between 2 points	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 1 Change travel speed	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 2 Position data change	<input type="radio"/>		Double solenoid is selected <input type="radio"/>	Single solenoid is selected <input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
PIO pattern 3 Movement by 2 inputs among 3 points		<input type="radio"/>			<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PIO pattern 4 Movement by 3 inputs among 3 points			<input type="radio"/>		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
PIO pattern 5 Continuous back-and- forth operation				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>

For details on each setting item, refer to the operation manual for your ASEP/PSEP controller.

Operation pattern

Equivalent air cylinder circuits are shown for your reference.

Operation pattern	Description	Motorized cylinder connection method	Air cylinder circuit (reference)
PIO pattern 0 Single solenoid type (Standard movement between 2 points)	The actuator can be moved between two points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 0 Double solenoid type (Standard movement between 2 points)			
PIO pattern 1 Single solenoid type (Movement between two points) (Change travel speed)	The actuator can be moved between two points using the same control you normally use with an air cylinder. The speed can be changed during movement. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 1 Double solenoid type (Movement between two points) (Change travel speed)			

(Note) The air cylinder circuits are drawn with signal symbols corresponding to those used by ASEP/PSEP controllers.

For details on signal symbols, refer to your "ASEP/PSEP Operation Manual."

Operation pattern

Equivalent air cylinder circuits are shown for your reference.

Operation pattern	Description	Motorized cylinder connection method	Air cylinder circuit (reference)
PIO pattern 2 Single solenoid type (Movement between two points) (Position data change)	The actuator can be moved between two points using the same control you normally use with an air cylinder. You can switch between positioning operation and push-motion operation during operation. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified.		
PIO pattern 2 Double solenoid type (Movement between two points) (Position data change)	Push-motion operation can also be performed.		
PIO pattern 3 Single solenoid type (Movement by 2 inputs among 3 points)	The actuator can be moved among three points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 4 Double solenoid type (Movement by 3 inputs among 3 points)	The actuator can be moved among three points using the same control you normally use with an air cylinder. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		
PIO pattern 5 (Continuous back-and-forth operation)	The actuator moves back and forth between the two points of forward end and backward end. The target position (forward end, backward end) can be set. The travel speed and acceleration/deceleration can be specified. Push-motion operation can also be performed.		

(Note) The air cylinder circuits are drawn with signal symbols corresponding to those used by ASEP/PSEP controllers.

For details on signal symbols, refer to your "ASEP/PSEP Operation Manual."

[1] Types of I/O setting (setting of operation parameters, etc.)

[Operation mode]

Select either the single-solenoid operation mode or double-solenoid operation mode.

[Intermediate move method]

Select whether to move to the intermediate position with both ST0 and ST1 turned ON, or OFF, when operation pattern 3 is set.

[Double solenoid type]

Select either Level or Edge as the condition for turning the double solenoids ON when the double-solenoid type operation mode and operation pattern 4 are set.

[Pause signal *STP]

Select whether to use or not use the pause signal *STP (input to IN2) when the single-solenoid type operation mode and operation pattern 5 are set.

[Servo control SON]

Select whether to use or not use the servo control (IN3 input signal SON (servo ON/OFF control)).

[Output signal selection, Operation pattern 0, 1, 2, 5]

When operation pattern 0, 1, 2 or 5 is set, set the OUT2 and OUT3 output signals if you have selected to use the servo control.

Select from the three patterns shown in the table.

	Selection 1	Selection 2	Selection 3
OUT2	HEND (home return complete signal)	SV (servo ON output signal)	HEND (home return complete signal)
OUT3	*ALM (alarm output signal)	*ALM (alarm output signal)	SV (servo ON output signal)

[Output signal selection Operation pattern 3, 4]

When operation pattern 3 or 4 is set, set the OUT3 output signal if you have selected to use the servo control.

* Select either ALM (alarm status signal) or SV (servo ON status signal).

[Home return operation]

Select a home return method.

- AUTO: Home return starts when the power is turned on.
- MANU: Home return starts when the first ST0 signal is input following the power on.

[Output signal]

Select the output signal to turn ON when the actuator moves and positioning is completed.

Select either Limit Switch (LS) or Position End (PE).

[2] Basic operation

The setting method is explained using an example of operation pattern 0.

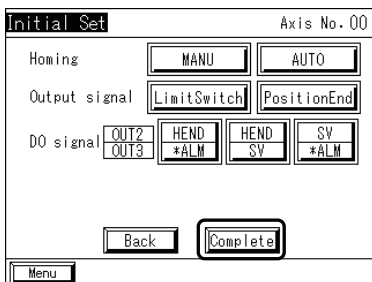
Touch [0] and touch [OK].

Touch [Menu] to return to the initial setting menu screen.

Touch [Menu] to return to the initial setting menu screen.


Select and touch either [Single] or [Double].

Hereafter, set one by one the items denoted by a O in the table of setting items (P. 117).
When all items on this screen have been set, touch [Next].




When the setting is complete, touch [Complete].

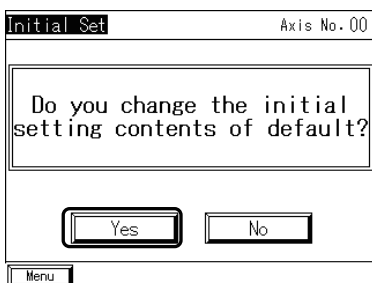Touch [Back] to return to the operation pattern selection screen. All settings you have made under the selected operation pattern become invalid.



Touch [Yes].

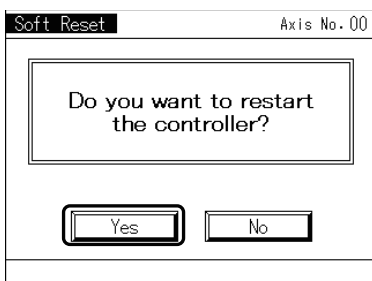Touch [No] to return to the initial setting screen. All settings you have made under the selected operation pattern become invalid.




Touch [Yes].

The controller is restarted.

The controller operates according to the operation pattern settings you have made.

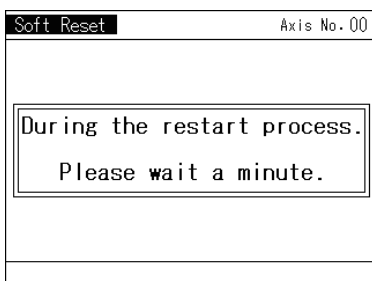The display returns to the SEP menu screen.















Touch [No], and the controller will not operate according to the operation pattern settings you have made until restarted.






- [3] Examples of I/O setting operations
Respective operations are explained by giving specific examples.

Example of operation mode 0 (standard movement between 2 points) Set as follows:

Operation mode	Single solenoid
Use of pause command (*STP)	Not used
Control Servo	Control
OUT2, OUT3 output signals	OUT2 HEND, OUT3 *ALM
Home	AUTO (start home return upon power on)
DO signal	LS0 (backward end position detection), LS1 (forward end position detection)

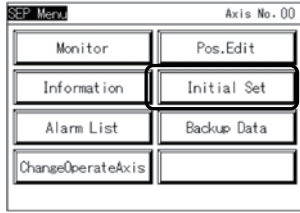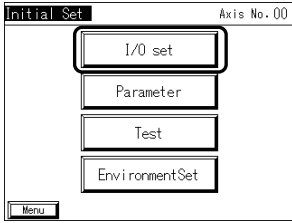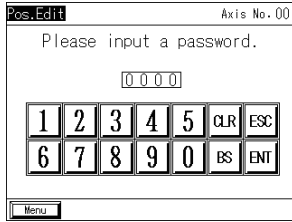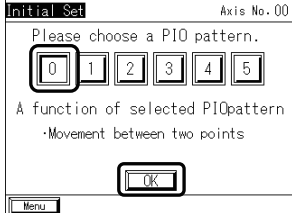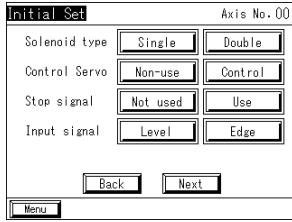No.	Operation	Screen	Remarks
1	On the SEP menu screen: Touch [Initial Set]		
2	Touch [I/O set].		Touch [Menu] to return to the SEP menu screen.
3	Input a password.		The password is "5119" (default setting).
4	Touch [0] and touch [OK]. Operation pattern 0 is selected.		Touch [Menu] to return to the initial setting menu screen.
5			Touch [Menu] to return to the initial setting menu screen.

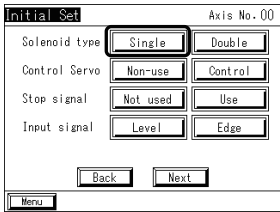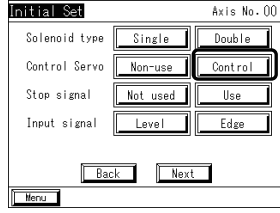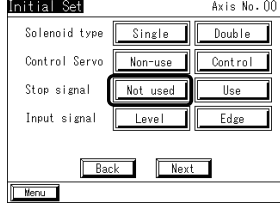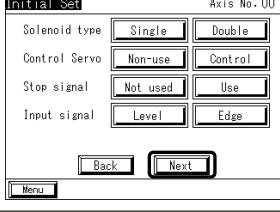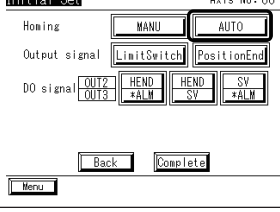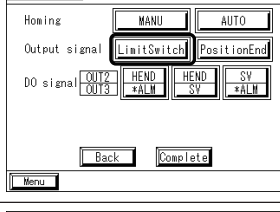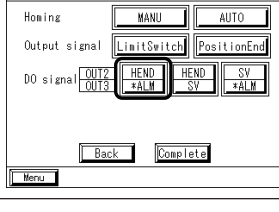No.	Operation	Screen	Remarks
6	Touch [Single]. The single-solenoid operation mode is selected.		Touch [Menu] to return to the initial setting menu screen.
7	Touch [Control]. Servo control is selected.		Touch [Menu] to return to the initial setting menu screen.
8	Touch [Not used]. Non-use of pause command (*STP) is selected.		Touch [Menu] to return to the initial setting menu screen.
9	Touch [Next].		
10	Touch [AUTO]. AUTO home return is selected.		Touch [Menu] to return to the initial setting menu screen.
11	Touch [LimitSwitch]. LS0 (backward end position detection) and LS1 (forward end position detection) are selected as the output signals.		Touch [Menu] to return to the initial setting menu screen.
12	Touch [HEND*ALM]. HEND and *ALM are selected as the OUT2 and OUT3 outputs.		Touch [Menu] to return to the initial setting menu screen.

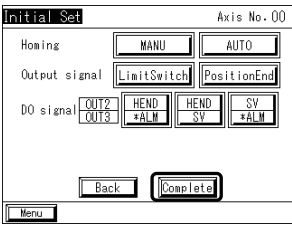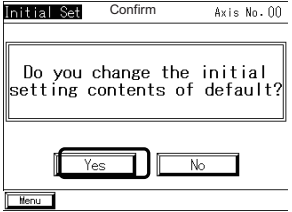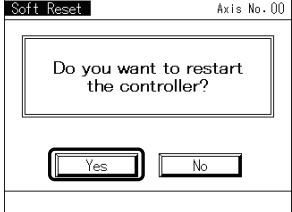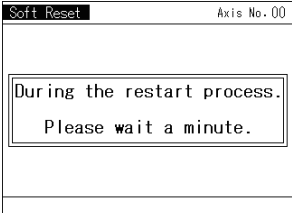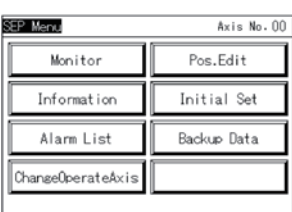
No.	Operation	Screen	Remarks
13	Touch [Complete].		<p>Touch [Back] to return to the operation pattern selection screen.</p> <p>Touch [Menu] to return to the initial setting menu screen.</p>
14	Touch [Yes].		
15	Touch [Yes].		The controller does not operate according to the operation pattern settings you have made until restarted.
16			
17			After the controller has restarted, the display switches to the SEP menu screen.

6.12 Parameters (Parameter Editing, Axis Number Setting, Parameter Initialization to Factory Default Settings, System Password)


Parameters and axis number are set. You can change the system password or reset the parameters to their factory default settings.



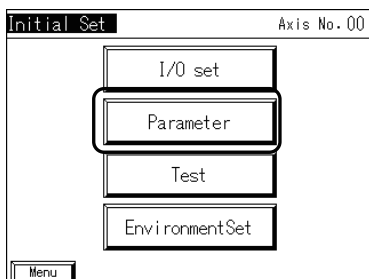Touch [Initial Set] on the SEP menu screen.




Touch [Parameter].

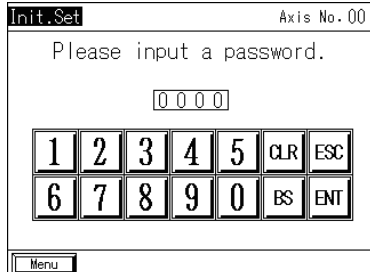

Enter a password value from the numeric keypad, and then touch [ENT].

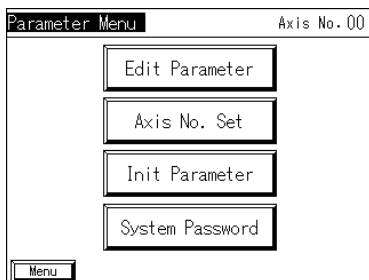The password is "5119" (default setting).



Select and touch [Edit Parameter], [Axis No. Set], [Init. Parameter] or [System Password].

The screen corresponding to the selected menu item appears.

- Edit Parameter: Set 20 types of parameters.

Edit Parameter		Axis No. 00
1. Position band	0.10 mm	
2. Jog speed	100.00 mm/sec	
3. Servo gain selection	11	
4. Torque filter constant	0	
5. Speed loop proportional gain	147	
6. Speed loop integral gain	2253	
7. Push speed	20.00 mm/sec	
8. Push recognition time	255 msec	

Buttons: [Up Arrow] [Specify No] [Down Arrow]

Menu

- Axis No. Set: Set the axis number.

AxisNo. Set

Axis No. 00

• Axis No. 0

Execute

Menu

- Init Parameter: You can reset the parameters to their factory settings (initialize the parameters).

Init Parameter

Axis No. 00

Do you initialize to shipment parameter?

Yes No

Menu

- Change System Password: You can change the password for parameter editing.

Change System Password

New Password : 5119

Change

Menu

[1] Types of parameter editing

For details on each parameter, refer to the operation manual for your ASEP/PSEP controller.

(Default positioning band)

Set the default positioning band.

(Jog speed)

Set the speed of jog operation.

(Servo gain number)

Set the servo gain number that determines the response of position control loops in servo control.

(Torque filter constant)

Set the torque filter time constant that determines the filter time constant for torque commands in servo control.

(Speed loop proportional gain)

Set the speed loop proportional gain that determines the response of speed control loops in servo control.

(Speed loop integral gain)

Set the speed loop integral gain that determines the response of speed control loops in servo control.

(Push speed)

Set the speed of push-motion operation.

(Push recognition time)

Set the push recognition time to recognize completion of operation after the load was contacted in push-motion operation.

(Pushing fails current)

Set whether to use the push current or stop current as the current limiting value when the load was missed in push-motion operation.

For ASEP, if the stop current is selected when the load was missed in push-motion operation, the torque limit at the travel current limiting value is set.

(Auto servo OFF delay time)

Set the time until the servo turns off automatically when the ecology function is enabled.

(Stop mode) Displayed for PSEP controllers

Set whether to implement servo stop based on the full servo control method or complete stop without servo control when the actuator stops.

(Note) When this parameter is changed, the new setting will not be reflected until the position data is written to the controller again.

(Current limiting value while stopped after positioning) Displayed for PSEP controller

Set the current limiting value to be applied while the actuator is stopped after positioning.

(Current limiting value during home return)

Set the current limiting value to be applied during home return operation.

(Position execution wait time during continuous operation)

Set the stop time after the current movement is completed until the next movement is performed when operation pattern 5 (continuous operation) is set.

(Soft limit)

Set the positive soft limit.

(Home return offset)

Set the offset for home return.

(Home return direction)

Set whether to perform home return in the motor direction or counter-motor direction.

The home return direction cannot be changed for some actuators, such as rod-type actuators.

(Absolute board) Displayed for absolute specification controllers

Set whether to enable or disable this function when the controller is of absolute specification.

(Battery maintenance) Displayed for absolute specification controllers

Set how long the data will be maintained by the absolute battery when the controller is of absolute specification.

(Position edit password)

Set the password for editing position data.

- [2] Basic operation
Set parameters.

[Parameter]

Edit Parameter		Axis No. 00
1. Position band	0.10 mm	
2. Jog speed	100.00 mm/sec	
3. Servo gain selection	11	
4. Torque filter constant	0	
5. Speed loop proportional gain	147	
6. Speed loop integral gain	2253	
7. Push speed	20.00 mm/sec	
8. Push recognition time	255 msec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Three screens are available, including one showing the default positioning band and others used to edit position data and password.

Touch [Menu] to return to the parameter menu screen.

An example of setting a soft limit is explained.

Touch [↑] and [↓] on the displayed screen until the soft limit setting screen appears.


Edit Parameter		Axis No. 00
9. Pushing fails current	<input type="button" value="Push Cur"/> <input type="button" value="Stop Cur"/>	
10. Auto servo OFF delay time	0 sec	
11. Stop mode	<input type="button" value="Servo"/> <input type="button" value="Excitation"/>	
12. Default positioning cur limit	30 %	
13. Default home current limit	30 %	
14. Pos. Execution - Wait	10.000 sec	
15. Soft limit	100.00 mm	
16. Home offset	2.00 mm	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

Touch the current value.


When the numeric keypad appears, enter a desired value and then touch [ENT].

Edit Parameter		Axis No. 00
9. Pushing fails current	<input type="button" value="Push Cur"/> <input type="button" value="Stop Cur"/>	
10. Auto servo OFF delay time	0 sec	
11. Stop mode	<input type="button" value="Servo"/> <input type="button" value="Excitation"/>	
12. Default positioning cur limit	30 %	
13. Default home current limit	30 %	
14. Pos. Execution - Wait	10.000 sec	
15. Soft limit	100.00 mm	
16. Home offset	2.00 mm	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

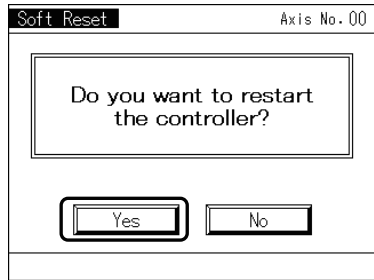Change parameters and touch [Menu] to return to the controller restart screen.



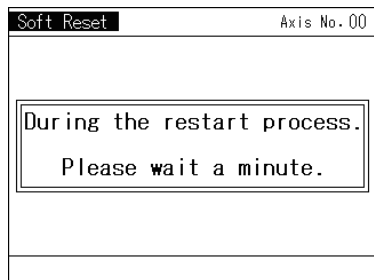Touch [Yes].
The controller is restarted.
The controller operates according to the operation pattern settings you have made.
The display returns to the initial setting screen.



Touch [No], and the controller will not operate according to the operation pattern parameters you have set until restarted.

[Axis No. Set] Set the axis number.

Touch Axis No.
When the numeric keypad appears, enter a desired value and then touch [ENT].

Touch [Execute].
In this example, 15 is set.

[Init Parameter]

The parameters are reset to their factory default settings.

Touch [Yes].

Touch [No] to return to the parameter menu screen without resetting the parameters to their factory default settings.

Touch [Yes].

The controller is restarted.
The controller operate according to the factory-set parameters.
The display returns to the initial setting screen.

Touch [No], and the controller will not operate according to the factory-set parameters until restarted.

[Change System Password]

Change the password for parameter editing.

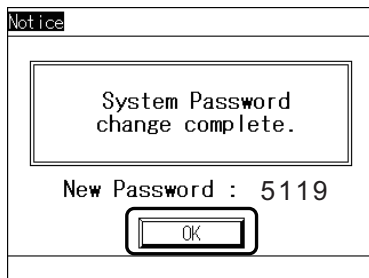


Touch New Password.

When the numeric keypad appears, enter a desired value and then touch [ENT].




Touch [Change].




The system password changes.

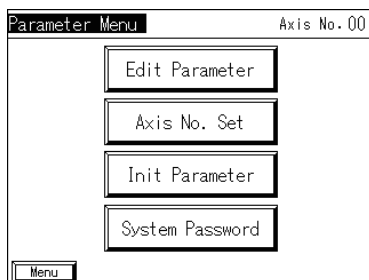Touch [OK] to return to the parameter menu screen.




6.13 Test (I/O Tests, Operation Tests for Axis Movement)

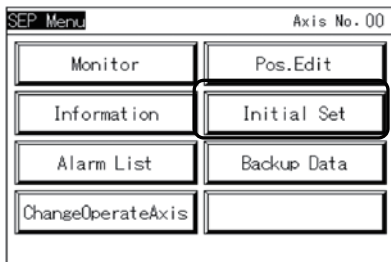You can perform I/O tests and operation tests for axis movement.




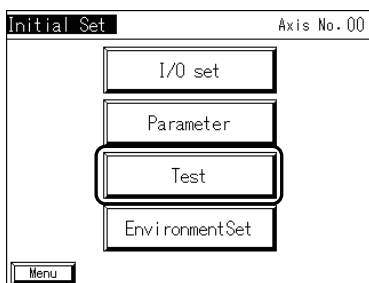Touch [Initial Set] on the SEP menu screen.




Touch [Test].

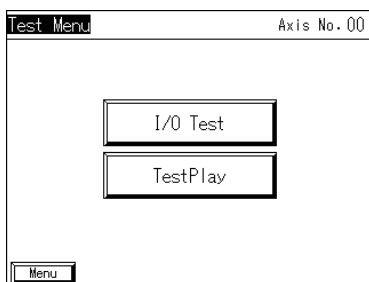Touch [Menu] to return to the SEP menu screen.



Select and touch either [I/O Test] or [TestPlay].

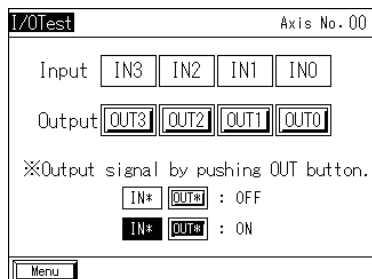- I/O Test: PIO input signals can be monitored.
Also, the output signals can be forcibly turned ON or OFF by touching OUT0, OUT1, OUT2 and OUT3.



- Pos Test: Operation tests for axis movement can be performed.
The screen corresponding to the selected operation pattern appears.

Operation pattern 0
(standard movement between 2 points)

Pos Test	Axis No. 00
Position	0.01 mm
Velocity	50.00 mm/s
Current Rate	50.0 %
Vel Override	50 %
<div>Backward Forward</div>	
Menu	

Operation 1 (change travel speed)

Pos Test	Axis No. 00
Position	100.00 mm
Velocity	90.00 mm/s
Current Rate	60.0 %
Vel Override	100 %
<div>Backward Forward Speed Chg</div>	
Menu	

Operation pattern 2 (change position data)

Pos Test	Axis No. 00
Position	100.00 mm
Velocity	0.90 mm/s
Current Rate	5.8 %
Vel Override	100 %
<div>Backward Forward Pos Chg</div>	
Menu	

Operation pattern 3
(movement by 2 inputs among 3 points)

Pos Test	Axis No. 00
Position	30.00 mm
Velocity	100.00 mm/s
Current Rate	25.0 %
Vel Override	100 %
<div>Backward Forward Midway</div>	
Menu	


Operation pattern 4
(movement by 3 inputs among 3 points)

Pos Test	Axis No. 00
Position	66.00 mm
Velocity	70.00 mm/s
Current Rate	36.0 %
Vel Override	10 %
<div>Backward Forward Midway</div>	
Menu	

Operation pattern 5
(continuous back-and-forth operation)

Pos Test	Axis No. 00
Position	100.00 mm
Velocity	100.00 mm/s
Current Rate	10.00 %
Vel Override	100 %
RT Counter	0
<div>Start Reset</div>	
Menu	

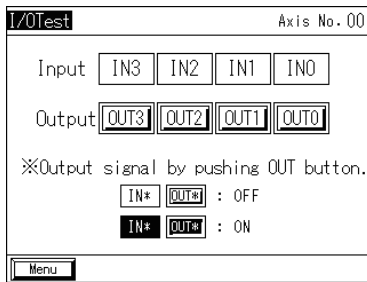[1] Basic operation [I/O test]



ON/OFF of input signals can be monitored.

The output signals OUT0 to OUT3 can be forcibly output by touching each signal.

Touch [Menu] to return to the test menu screen.

[Pos Test]

The operating method is explained using an example of operation pattern 0.

Pos Test		Axis No. 00
Position	0. 0 1 mm	
Velocity	5 0. 0 0 mm/s	
Current Rate	5 0. 0 0 %	
Vel Override	5 0 %	
<div>Backward</div> <div>Forward</div>		
Menu		

- ← The current axis position is indicated.
- ← The axis speed is indicated.
- ← The electric current of the axis is indicated by a percentage of the rating.

Touch [Menu] to return to the test menu screen.

- Backward: Touching [Backward] moves the actuator backward.
- Forward: Touching [Forward] moves the actuator backward.
- Vel Override: The speed override changes to 10%, 50% and 100% every time [Vel Override] is touched.

The settings of operation pattern 5 (continuous back-and-forth operation) vary partially from other operation patterns.

Pos Test		Axis No. 00
Position	100.00 mm	
Velocity	100.00 mm/s	
Current Rate	10.00 %	
Vel Override	100 %	
RT Counter	0	
<div>Start</div> <div>Reset</div>		
Menu		

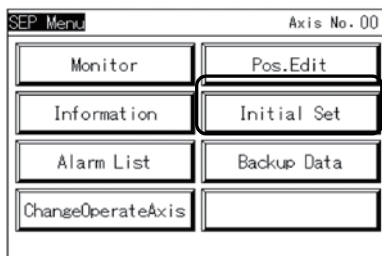
- ← The current axis position is indicated.
- ← The axis speed is indicated.
- ← The electric current of the axis is indicated by a percentage of the rating.
- ← The number of back-and-forth movements of the axis is indicated.

- Start, Stop: Continuous operation stops once the operation test screen appears. Touching [Start] causes the actuator to move back and forth continuously at the speed set by the override parameter. The text on the switch changes to [Stop]. Touching [Stop] stops the actuator.
- Reset: Touching [Reset] resets the back-and-forth counter to 0.


Continuous operation resumes once the operation test screen closes.

6.14 Environment set (Sound, Language, Auto Monitor, Display (Screen Adjustment))

You can set the sound, language and auto monitor and adjust the screen.



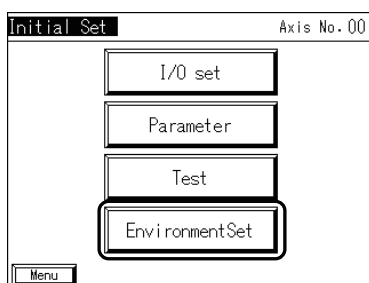
Touch [Initial Set] on the SEP menu screen.



Touch [EnvironmentSet].

Touch [Menu] to return to the SEP menu screen.

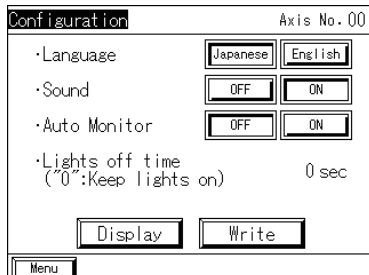
The environment setting screen appears.



[1] Basic operation

- Language: Select the Japanese, English or EU display mode.

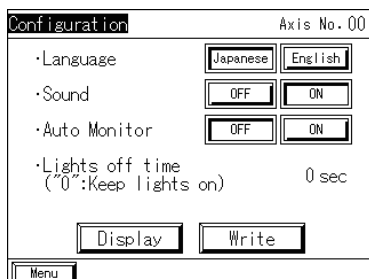Display for Japanese/English languages setting change (Option model code : ENG)



Select and touch [Japanese] or other desired language.

Touch [Write].

(Note) If Write is not performed, the new setting will not become effective after the controller is restarted.

Select Chinese or English as the display language.

Display for Chinese/English languages setting change (Option model code : ECH) Version V1.30 or later

Configuration Axis No. **

- Language:
- Sound:
- Auto Monitor:
- Dim Display Time ("0":Never Dim) **** sec

- Sound: Set whether to output or not output a touch tone.

Configuration Axis No. 00

- Language:
- Sound:
- Auto Monitor:
- Lights off time ("0":Keep lights on) 0 sec

Touch [OFF]. A touch tone is not output.
Touch [ON]. A touch tone is output.

Touch [Write].
(Note) If Write is not performed, the new setting will not become effective after the controller is restarted.

- Auto Monitor: You can have the monitor screen appear first after the touch-panel teaching pendant is connected.

Configuration Axis No. 00

- Language:
- Sound:
- Auto Monitor:
- Lights off time ("0":Keep lights on) 0 sec

Touch [ON] to enable the auto monitor setting.

- Lights off time: You can set a desired time after which the display of the touch-panel teaching pendant will turn off. If "0 sec" is set, the display will remain lit at all times.

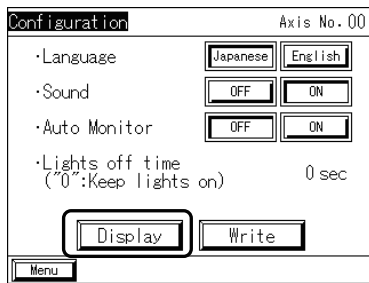
Configuration Axis No. 00

- Language:
- Sound:
- Auto Monitor:
- Lights off time ("0":Keep lights on) 0 sec


Touch .

When the numeric keypad is displayed, use the keypad to enter the light off time.
A desired value between 1 and 9999 sec can be set.

- Display: Adjust the contrast and brightness of the screen.



Touch [Display].

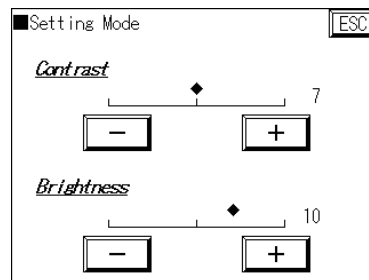

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.

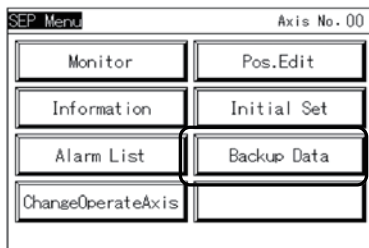
Brightness adjustment

Touch [-] and [+] under Brightness to adjust the brightness of the screen.

Touch [ESC] to return to the environment setting screen.


6.15 Data Backup

Data is transferred between the memory of the touch-panel teaching pendant and the controller.



Touch [Backup Data] on the SEP menu screen.

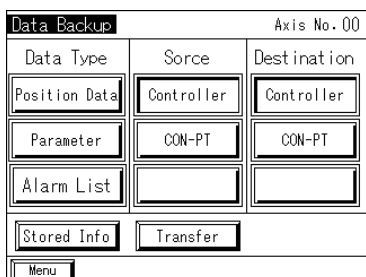The data transfer screen appears.




Select and touch [Position Data] and/or other data you want to transfer.

Select and touch [Controller] or [CON-PT] under Source.

Select and touch [Controller] or [CON-PT] under Destination.

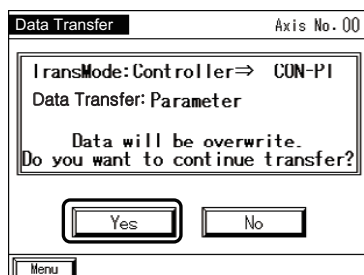Touch [Transfer].



Touch [Yes].

The data is transferred.

7. Operation of EMC Controllers

MEC controllers: P MEC, A MEC

7.1 Displayed Language Change

The language can be changed by following the steps below.

For the operations after the language change, please refer to the instruction manual written in each language.

Model: CON-PT-M-ENG CON-PT-M-JCH

Display change from English to Japanese

<p>Touch [] in MEC Menu.</p>	<p>Touch [EnvironmentSet].</p>	<p>Touch [Japanese].</p>	<p>Touch [Write].</p>
--------------------------------	--------------------------------	--------------------------	-----------------------

Display change from Japanese to English

<p>Touch [] in MEC メニュー.</p>	<p>Touch [環境設定].</p>	<p>Touch [英語].</p>	<p>Touch [書き込み].</p>
--------------------------------	----------------------	--------------------	----------------------

Model: CON-PT-M-ECH CON-PT-M-CHE

Display change from English to Chinese


<p>Touch [] in MEC Menu.</p>	<p>Touch [EnvironmentSet].</p>	<p>Touch [Chinese].</p>	<p>Touch [Write].</p>
--------------------------------	--------------------------------	-------------------------	-----------------------


Display change from Chinese to English


<p>Touch [] in MEC 菜单.</p>	<p>Touch [环境设定].</p>	<p>Touch [英语].</p>	<p>Touch [写入].</p>
------------------------------	----------------------	--------------------	--------------------


7.2 Transition of Operating States

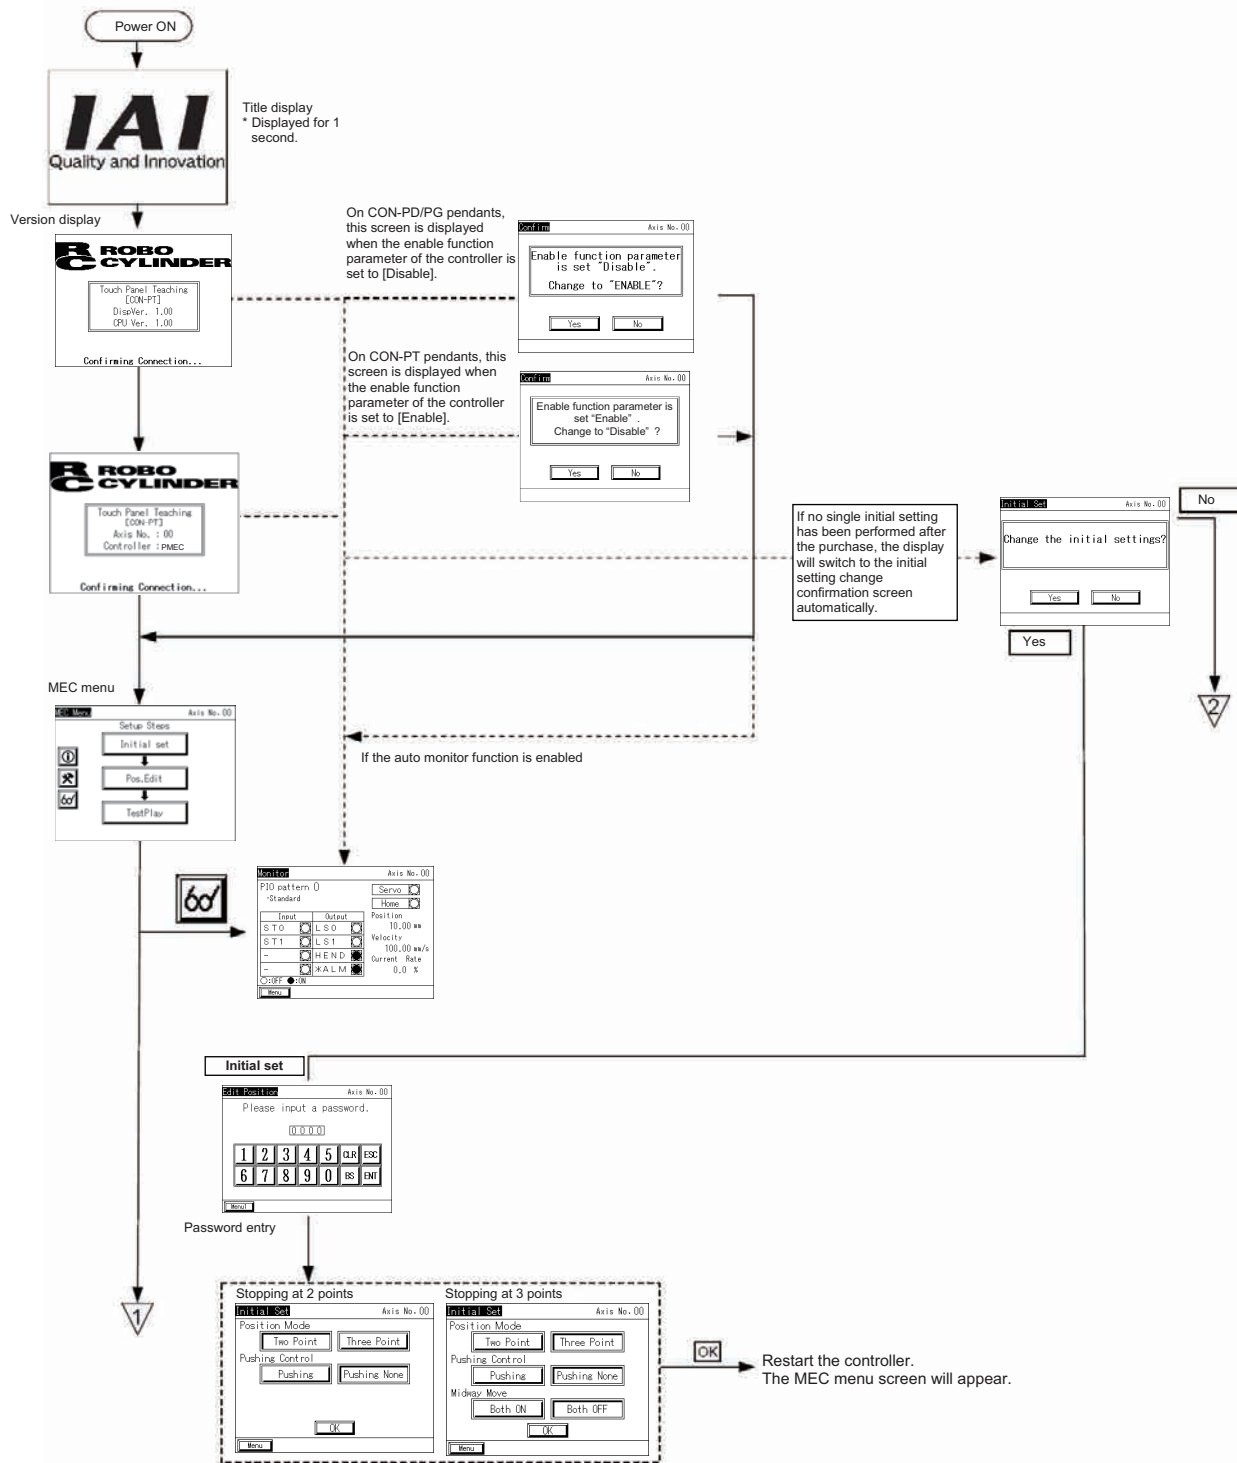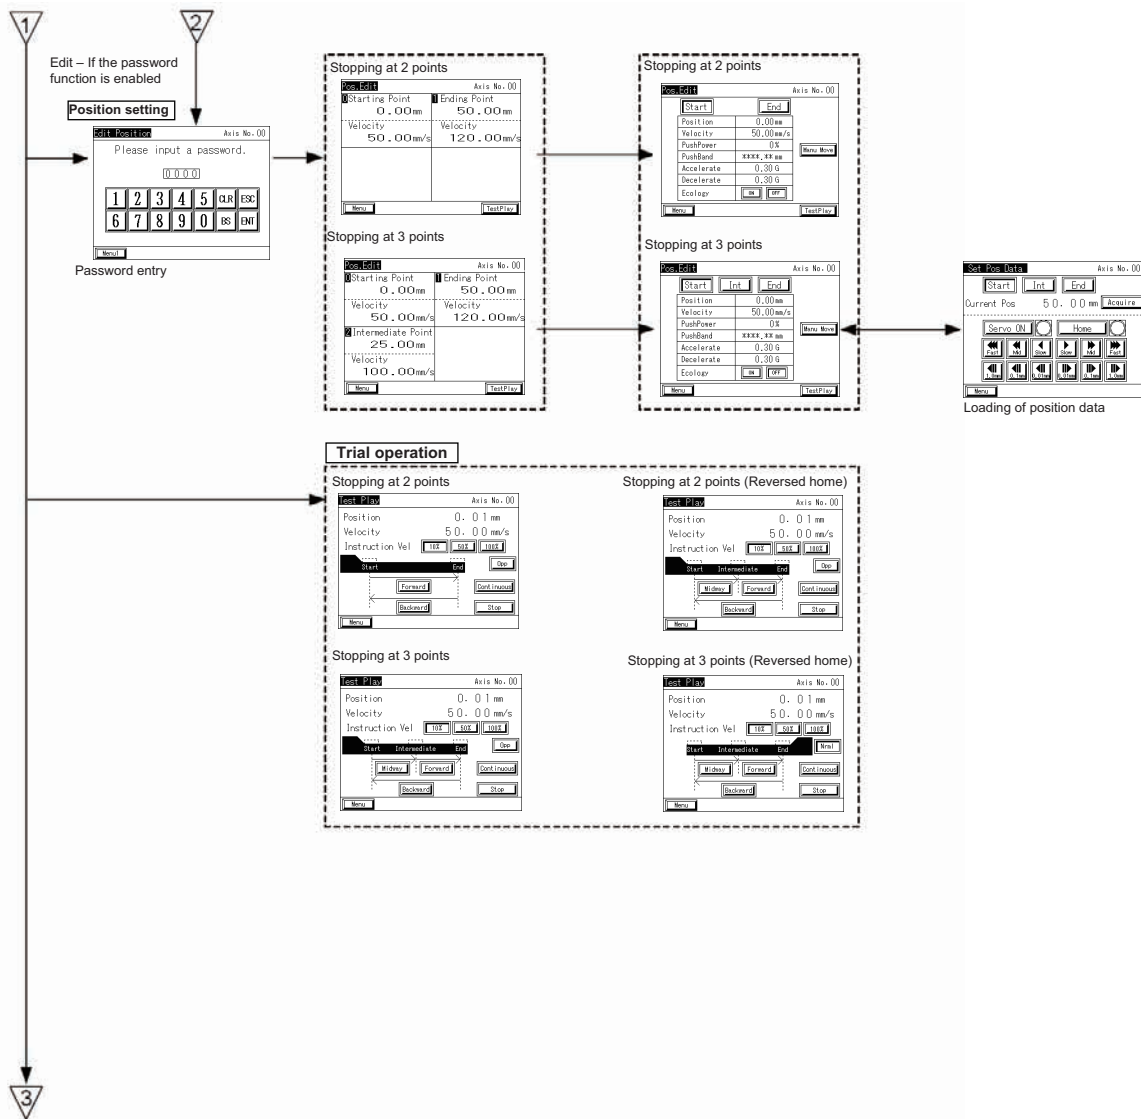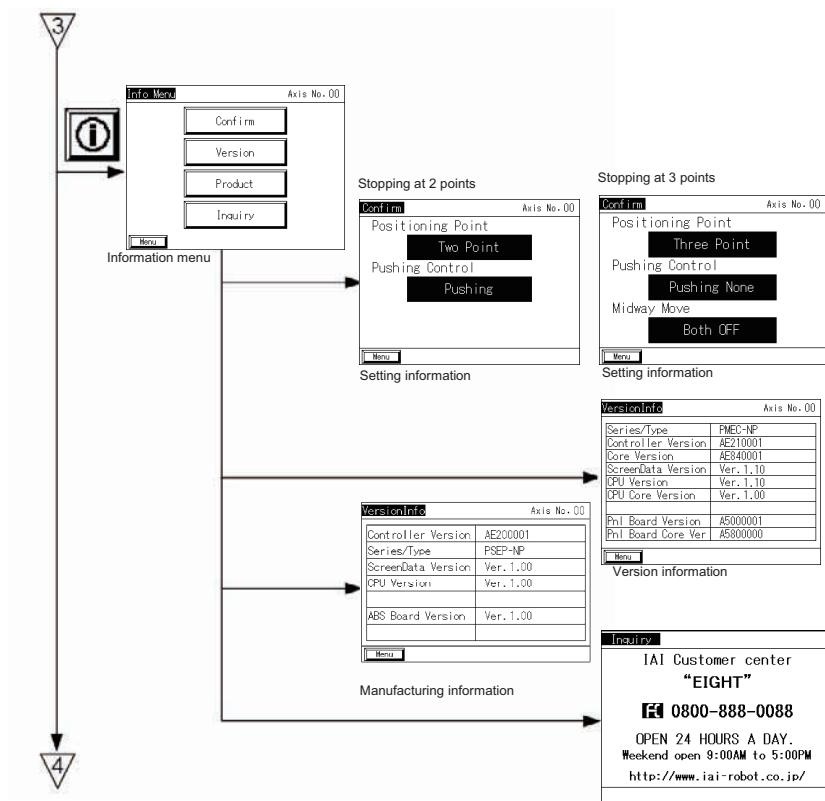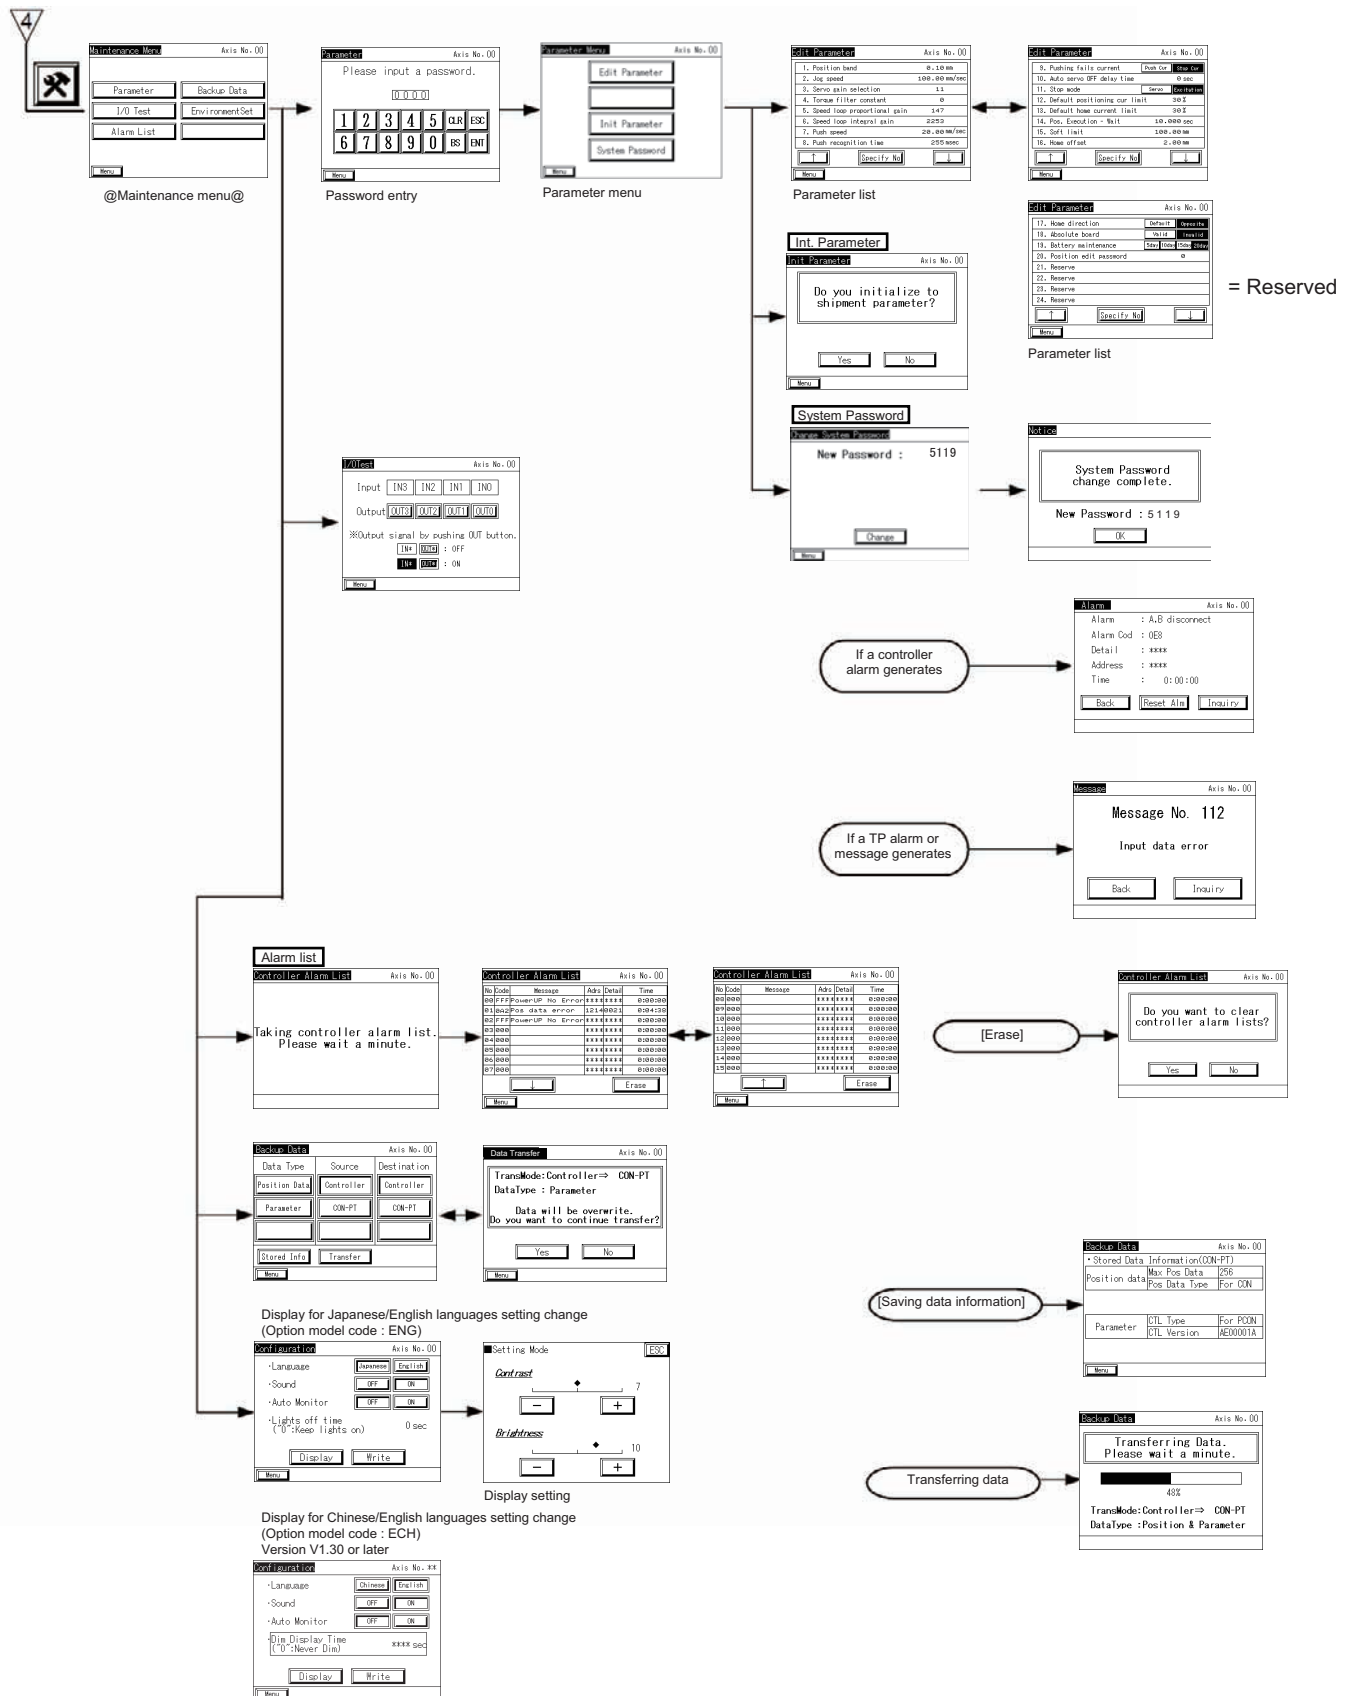Transition of operating states when the touch-panel teaching pendant CON-PT is connected to a MEC controller is shown.










7.3 Initial Screen

Upon connection to the controller, power is supplied to the touch-panel teaching pendant and processing starts.

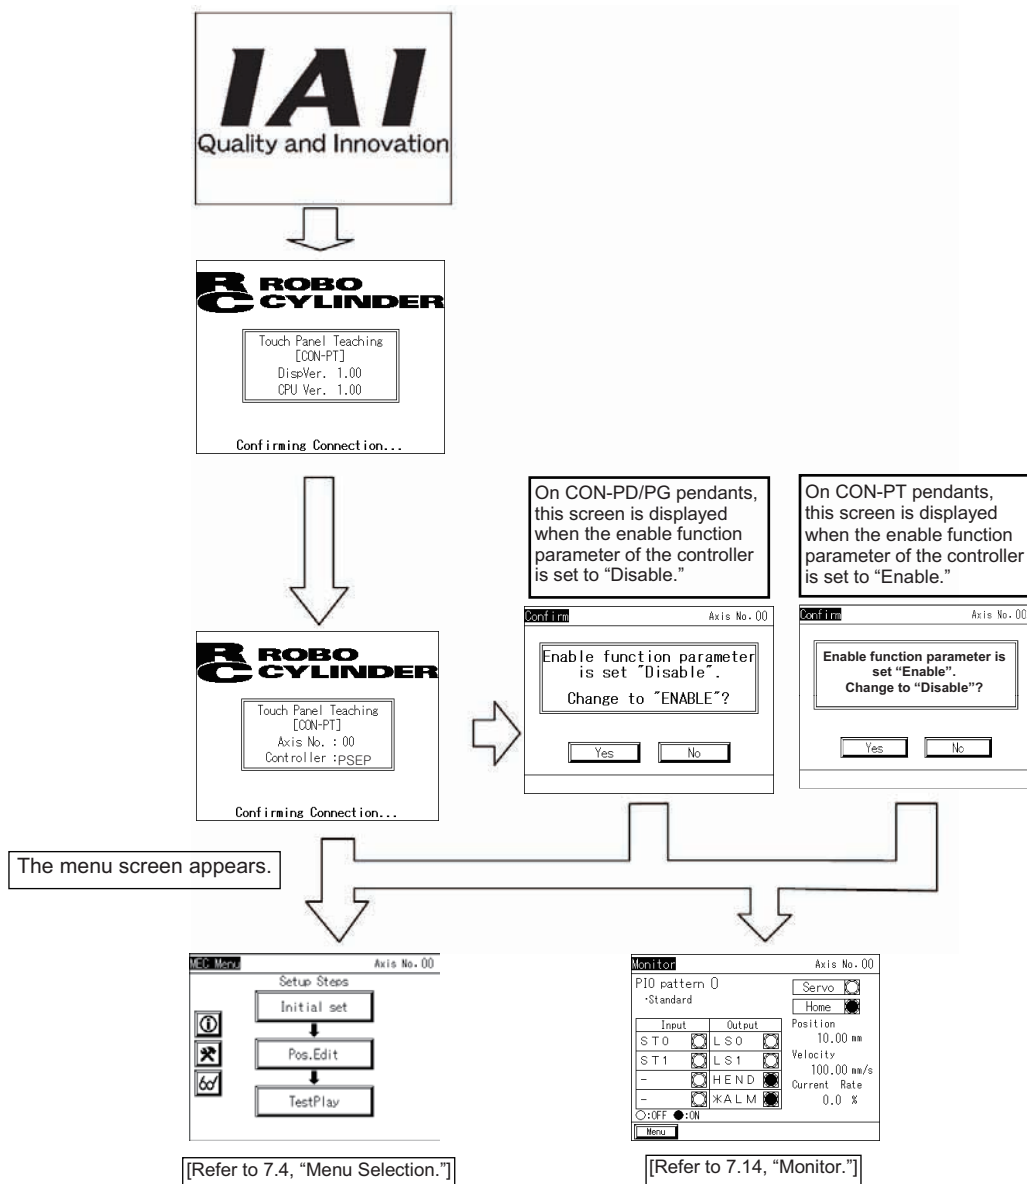When the power is turned on, the IAI logo is displayed for approx. 1 second on the operation display screen (hereinafter referred to as "operation screen") of the touch-panel teaching pendant, after which version information is displayed.




* The same items can be set on the automatic monitor setting screen accessible from the environment setting screen of the controller.

7.4 Initial Setting

When the power is turned on for the first time after the delivery of the controller, the initial setting screen will appear.

- Select [Yes], and the display will change to the initial setting screen where you can set the operation pattern.
- Select [No], and the factory set operation pattern, or specifically the 2-point stopping operation mode, will remain effective.

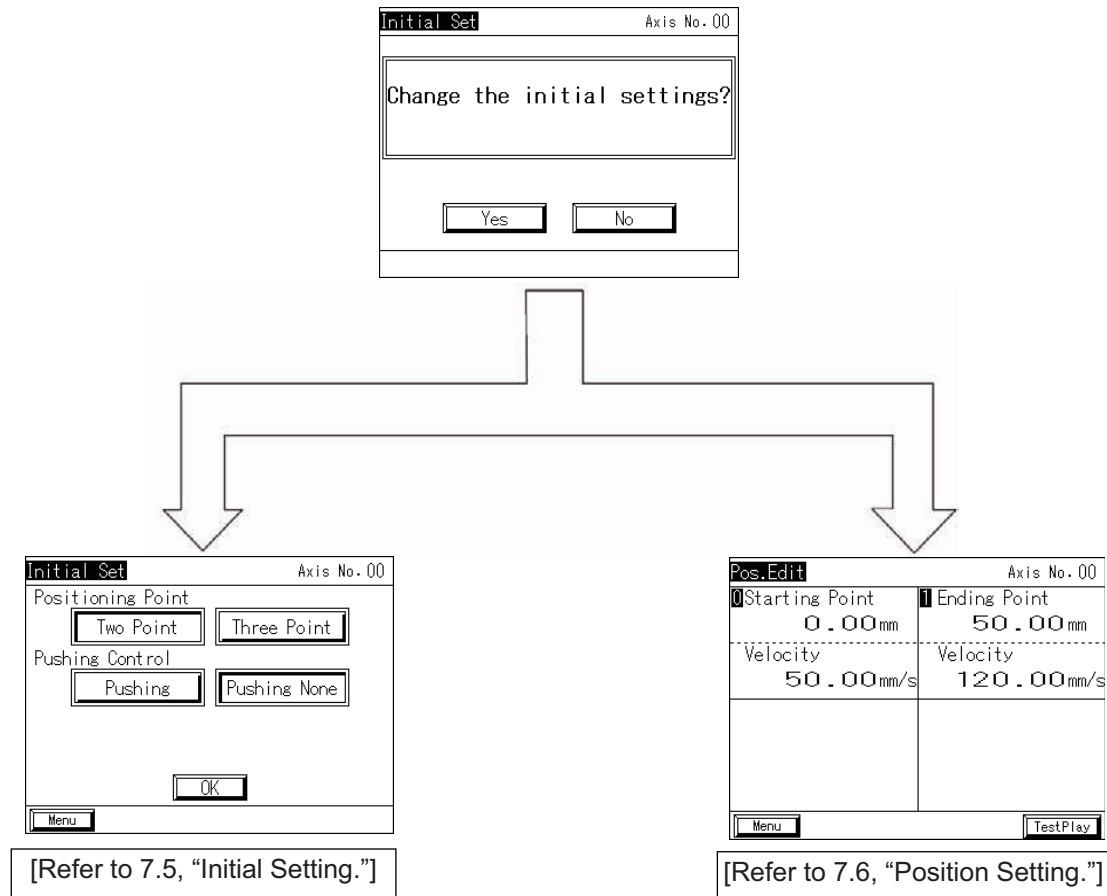
The display will switch to the position setting screen.



Factory settings

- Operation pattern: Stopping at 2 points

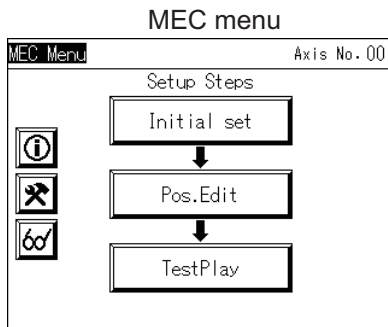
7.5 MEC Menu Selection



The MEC menu has six items. Select and touch one of them.
The screen changes to the one corresponding to the menu item you have touched.

Menu list

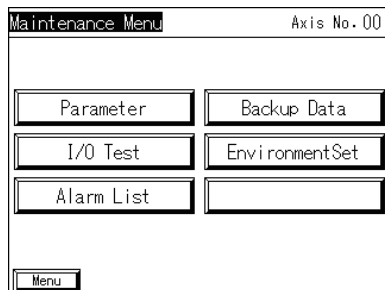- Initial Set Set the operation pattern (stopping at 2 points or 3 points).
[Refer to 7.6, "Initial Setting."]
- Pos. Set Set the position, push force, push band, etc. The axis can be operated manually.
[Refer to 7.7, "Position Setting."]
- Trial Operation Conduct axis movement operation tests. [Refer to 7.8, "Trial Operation."]
- Information The operation pattern, version and other information are displayed. [Refer to 7.9, "Information."]
- Maintenance Touching switches the display to the maintenance menu screen, which is the next selection screen.




The maintenance screen shows five menus, so select and touch a desired menu.
The display will change to the menu screen corresponding to the menu you have touched.
Touch [Menu] to return to the previous MEC menu screen.

Maintenance menu list

- Parameter Set the default positioning band and other parameters. [Refer to 7.10, "Maintenance – Parameters."]
- I/O Test Conduct I/O Tests. [Refer to 7.11, "Maintenance – I/O Tests."]
- Alarm List Detail internal information of alarms are displayed. [Refer to 7.12, "Maintenance – Alarm List."]
- Backup Data Transfer data between the touch-panel teaching pendant and controller. [Refer to 7.13, "Maintenance – Data Backup."]
- Environment Set Set the touch sound and other environment specifications. [Refer to 7.14, "Environment Setting."]
- Monitor The controller status is displayed. [Refer to 7.15, "Monitor."]

7.6 Initial Setting

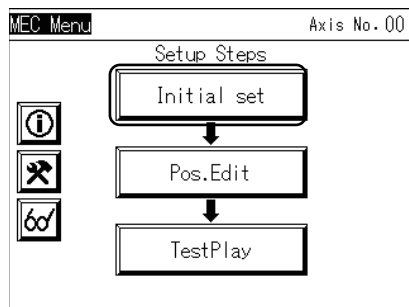Select whether to stop at 2 points or 3 points.



Touch [Initial Set] on the MEC menu screen.

Before the display switches to the initial setting screen, the password entry screen appears if the password is other than "0000."

The 'Init.Set' screen shows 'Axis No. 00' and the text 'Please input a password.' Below this is a numeric keypad with digits 1-9, 0, CLR, ESC, BS, and ENT. A 'Menu' button is at the bottom left.

Enter the password using the numeric keypad, and then touch [ENT].

The password is "5119" (factory setting).

You can set a desired password using the "system password" parameter accessible from the maintenance menu.

If the valid password has been set, the display switches to the initial setting screen.

Stopping at 2 points

The 'Initial Set' screen shows 'Axis No. 00'. Under 'Position Mode', 'Two Point' is selected. Under 'Pushing Control', 'Pushing' is selected. An 'OK' button is at the bottom center.

Select and touch either [Two Point] or [Three Point]. To perform positioning operation, select and touch [Pushing None]. To perform push-motion operation, select and touch [Pushing].

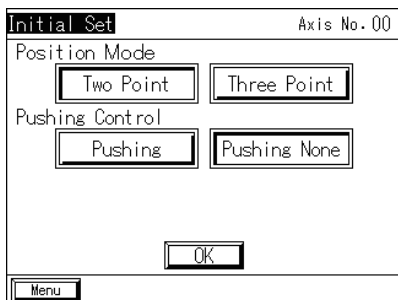
To stop at 3 points, select [Both OFF] or [Both ON] as the position specification method.

(Note) Take note that if push-motion operation is performed and therefore [Pushing None] is selected, the completion signal will not be output.


* If [Pushing None] is selected, LS0 and LS1 (LS2) will be used as output signals. If [Pushing] is selected, PE0 and PE1 (PE2) will be used as output signals.

Stopping at 3 points


The 'Initial Set' screen shows 'Axis No. 00'. Under 'Position Mode', 'Three Point' is selected. Under 'Pushing Control', 'Pushing None' is selected. Under 'Midway Move', 'Both ON' is selected. An 'OK' button is at the bottom center.



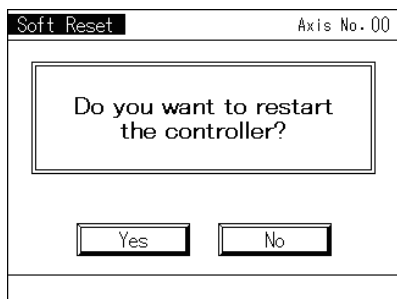Touch [OK].
Touch [Menu] to return to the MEC menu screen.
All initial settings you have made will be discarded.



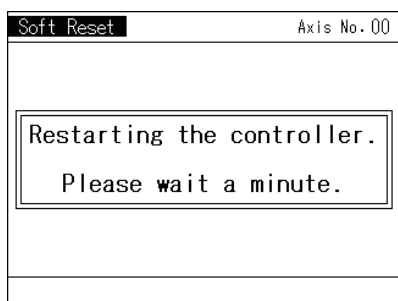The controller will restart.
After the restart, the controller will operate according to the initial settings you have made.
Return to the SEP menu screen.



If you touch [No], the initial settings you have made will not be reflected until the controller is restarted.

Operation Pattern

PMEC and AMEC controllers offer two operation patterns.

The table below gives an overview of the operation specification of each pattern. [For the setting methods, refer to the sections on initial setting and stop position setting.]

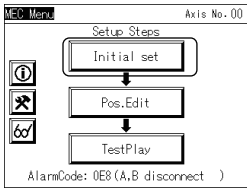
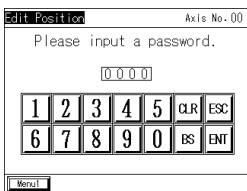
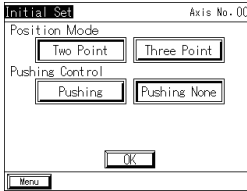
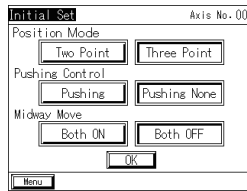

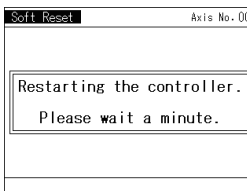
Operation pattern	Description	Air cylinder circuit (Reference)	How to connect motorized cylinder
Stopping at 2 points (2-point positioning)	<p>Movement by 1 input between 2 points [Single-solenoid mode]</p> <p>You can move the actuator between 2 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion operation. The actuator moves to the end point when the ST0 turns ON, and returns to the start point when the signal turns OFF.</p>		
Stopping at 3 points (3-point positioning)	<p>Movement by 2 input between 2 points [Double-solenoid mode]</p> <p>You can move the actuator between 2 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can set the position of an intermediate point and perform positioning to the intermediate point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion operation. The actuator moves to the end point when the ST1 turns ON, and moves to the start point when the ST0 turns ON. [Intermediate movement mode, both ON] When both the ST0 and ST1 are turned ON, the actuator will position to and stop at an intermediate point. When both the ST0 and ST1 are turned OFF, the actuator will stop in the middle of movement. [Intermediate movement mode, both OFF] When both the ST0 and ST1 are turned OFF, the actuator will position to and stop at an intermediate point. When both the ST0 and ST1 are turned ON, the actuator will stop in the middle of movement.</p>		
	<p>Movement by 2 input between 3 points [3-point positioning]</p> <p>You can move the actuator between 3 points using the same control you would normally use with an air cylinder. You can set the positions of the end point and start point. You can set the position of an intermediate point and perform positioning to the intermediate point. You can specify the moving speed and acceleration/deceleration. You can also specify push-motion operation. The actuator moves to the end point when the ST1 turns ON, and moves to the start point when the ST0 turns ON. [Intermediate movement mode, both ON] When both the ST0 and ST1 are turned ON, the actuator will position to and stop at an intermediate point. When both the ST0 and ST1 are turned OFF, the actuator will stop in the middle of movement. [Intermediate movement mode, both OFF] When both the ST0 and ST1 are turned OFF, the actuator will position to and stop at an intermediate point. When both the ST0 and ST1 are turned ON, the actuator will stop in the middle of movement.</p>		


(Note) The air cylinder circuits are drawn with symbols of signals corresponding to those used by PMEC/AMEC controllers. For details on signals, refer to the “PMEC/AMEC Operation Manual.”

- [1] Example of initial setting operation
The operation is explained using specific examples.

Example of stopping at 2 points


Set as follows.

No.	Operation	Screen	Remarks
1	Touch [Initial set] on the MEC menu screen.		
2	If the password is not "0000," the password entry screen appears. Enter the password, and then touch [↵].		The password is "5119" (factory setting). A desired password can be set using the "system password" parameter accessible from the maintenance menu.
3	<ul style="list-style-type: none"> Touch and select either [Two Point] or [Three Point] based on the number of positioning points. To perform positioning operation, select [Pushing None]. To perform push-motion operation, select [Pushing]. In the case of positioning to the intermediate position in the 3-point stop pattern, select [Both OFF] or [Both ON] for the ST0 and ST1 input signals, and then touch [OK]. 	<p>Stopping at 2 points</p>  <p>Stopping at 3 points</p> 	<p>Touch [Menu] to return to the first MEC menu screen.</p> <p>(Reference) Factory setting Stop position: [Two Point] Push function: [Pushing None] Intermediate point specification method: [Both ON]</p>
4	Touch [Yes]		To make the specified items effective, you must restart the controller. The settings you have made will not be reflected until the controller is restarted. Touch [No] to return to the previous screen.
5			

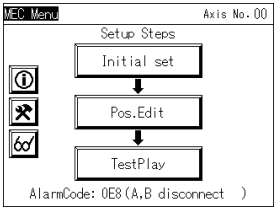No.	Operation	Screen	Remarks
6		 <p>The screenshot shows the 'MEC Menu' screen for 'Axis No. 00'. It features a 'Setup Steps' section with three steps: 'Initial set', 'Pos.Edit', and 'TestPlay', connected by downward arrows. On the left side, there are three icons: a circle with an 'i', a square with an 'x', and a square with a checkmark. At the bottom, it displays 'AlarmCode: 0E8 (A,B disconnect)'.</p>	Once the controller has restarted, the MEC menu screen appears.

7.7 Position Setting (Position Data Setting and Manual Axis Operation (Jogging, Inching))

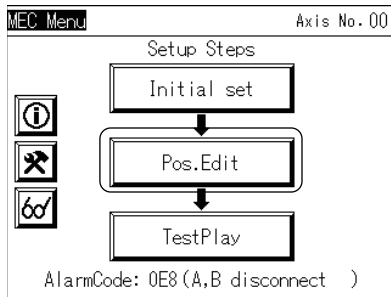The position, push force, push band and other position data are set. You can move the actuator by jogging or inching.



Touch [Pos. Set] on the MEC menu screen.

Before the display switches to the position setting screen, the password entry screen appears if the password is other than "0000."

The 'Edit Position' screen for Axis No. 00 prompts the user to 'Please input a password.' Below the prompt is a four-digit display showing '0 0 0 0'. A numeric keypad is displayed with digits 1-9, 0, CLR, ESC, BS, and ENT. A 'Menu' button is at the bottom left.

Enter the password using the numeric keypad, and then touch [ENT].

A desired password can be set in the "position data edit password" field of the parameter edit screen.

If the valid password has been set, the display switches to the position setting list screen. The displayed items vary depending on the operation pattern.

The 'Pos.Edit' screen for Axis No. 00 shows position data for three points. Point 0 (Starting Point) is at 0.00 mm with a velocity of 50.00 mm/s. Point 1 (Ending Point) is at 50.00 mm with a velocity of 120.00 mm/s. Point 2 (Intermediate Point) is at 25.00 mm with a velocity of 100.00 mm/s. Buttons for 'Menu' and 'TestPlay' are at the bottom.

Touch the position you want to set.
Touch [Menu] to return to the MEC menu screen.
The screen shown to the left is an example of Stopping at 2 points.
The set value of each position is shown.

Number of positions to be set

Operation pattern	Movement	Number of positions to be set
Stopping at 2 points	Move between 2 points	
Stopping at 3 points	Move between 3 points	

Touch the position you want to set, and the target position/speed setting screen of the touched position will appear.

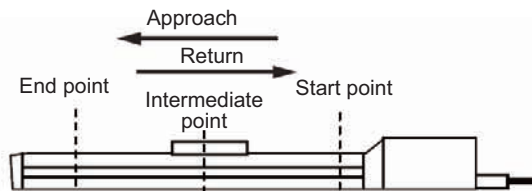
Set the position, speed, push force, push band, acceleration and deceleration.

Touch [Menu] to return to the MEC menu screen.

You can select jog operation from this setting screen.

[1] Position data

Set the position data used to operate the actuator.



* In the figure, the home is located on the motor side.

Position data

Position data	[1]	[2]	[3]	[4]	[5]	[6]	[7]
	Position [mm]	Speed [mm/s]	Acceleration [G]	Deceleration [G]	Push force [%]	Push band [mm]	Ecology
[1] End point	200.00	50.00	0.1	0.1	70	1.00	Enabled
[0] Start point	0.00	50.00	0.1	0.1	0	0	Enabled
[2] Intermediate point	100.00	50.00	0.1	0.1	0	0	Enabled

[1] Position [mm] --- Set the position to move the actuator to.

The positions must satisfy the following relationships: Start point < Intermediate point < End point

Operation pattern	Move	Positions to be set		
		End point	Start point	Intermediate point
Stopping at 2 points	Move between 2 points	○	○	
Stopping at 3 points	Move between 3 points	○	○	○

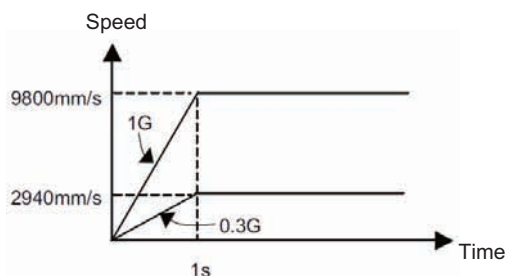
[2] Speed [mm/s] --- Set the speed of the actuator.

[3] Acceleration [G] --- Set the acceleration of the actuator.

The input range permits entry of values greater than what is specified in the catalog. Refer to the catalog or operation manual of your actuator.

[4] Deceleration [G] ... Set the deceleration (G) at which the actuator stops.

(Reference) Acceleration is explained. The same concept applies to deceleration.
 1 G = 9800 mm/s²: Acceleration at which the actuator can accelerate to up to 9800 mm/s per second
 0.3 G: Acceleration at which the actuator can accelerate to up to 9800 mm/s x 0.3 = 2940 mm/s



Caution

Setting the acceleration/deceleration

- (1) Make sure the acceleration/deceleration you set does not exceed the rated acceleration/deceleration stated in the catalog or this operation manual. If the rated acceleration/deceleration is exceeded, the life of the actuator may drop significantly.
- (2) If the actuator or load receives impact or vibrates, lower the acceleration/deceleration. If the actuator is used continuously in such condition, the life of the actuator will drop significantly.
- (3) If the transferable weight is significantly smaller than the rated loading capacity, accelerations/decelerations greater than the rating may be set. You can shorten the tact time this way, so contact IAI if you are interested. When contacting IAI, let us know the weight, shape and installation method of the load as well as installation condition of the actuator (horizontal/vertical).

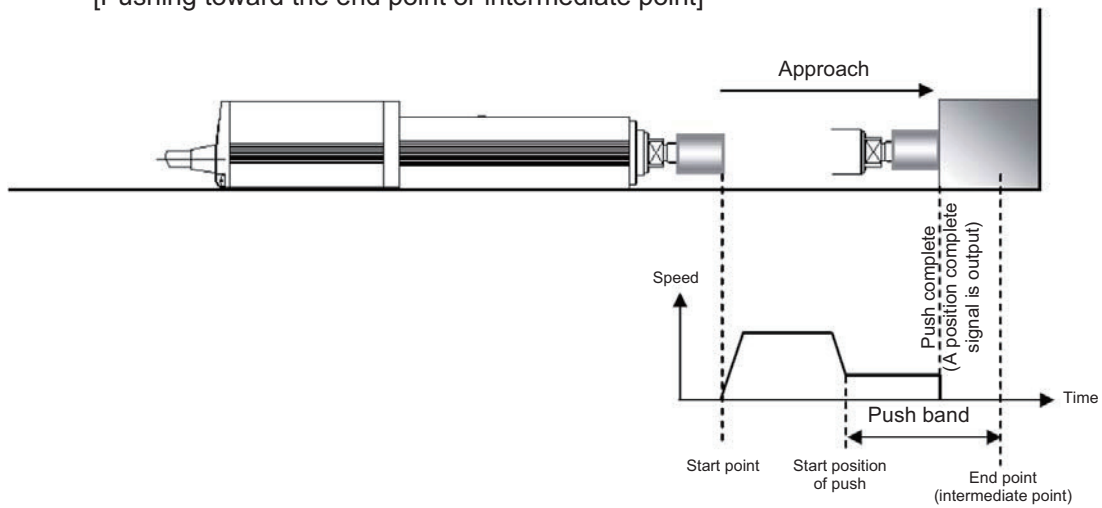
[5] Push force [%] ...

Set the push torque (current-limiting value) to be used in push-motion operation as a percent (%) value.
 Increasing the current-limiting value increases the push force.
 If "0" is set, positioning operation is performed.
 [For the relationship of push force and current-limiting value, refer to the catalog or the operation manual.]


[6] Push band [mm] ...

Set the travel during push-motion operation.
 When push-motion operation is performed, the actuator moves at the speed and rated torque set as part of positioning information, just like normal positioning, until the remaining travel enters the range set here. Once the remaining travel enters this range, the actuator moves to the position set in [1] while pushing the load.
 The speed of push-motion operation is set in parameter No. 7. Do not use any setting that causes this speed to be exceeded.
 If the setting in [2] is less than the push speed, the actuator pushes the load at the set speed.
 How the actuator operates as it pushes the work toward the end point, start point and intermediate point is illustrated below.

[Pushing toward the end point or intermediate point]



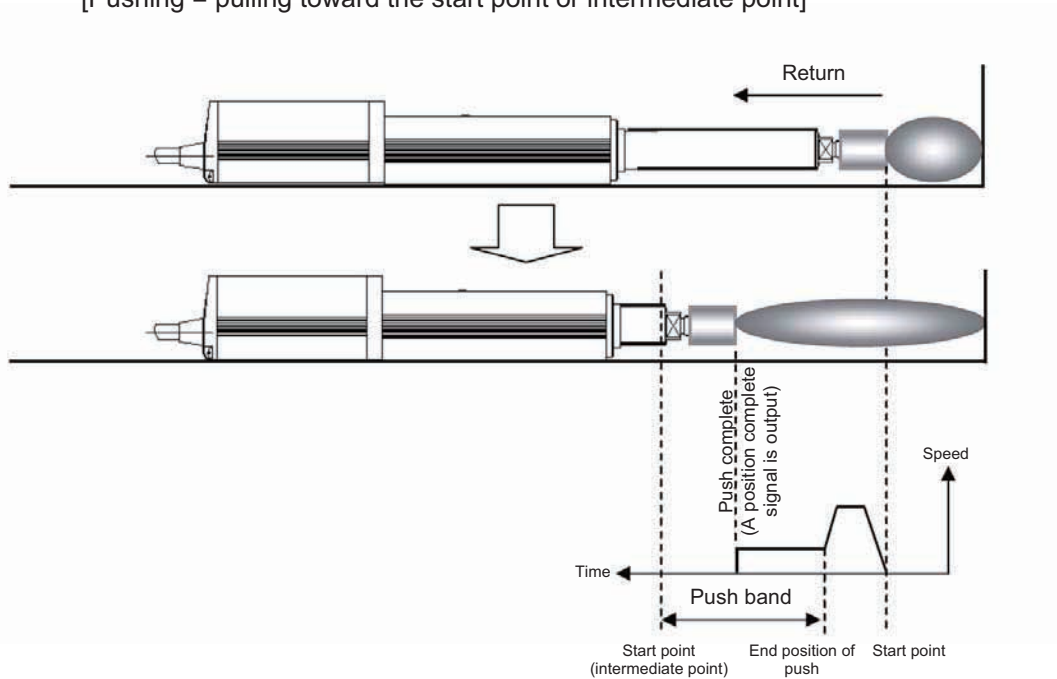[Pushing = pulling toward the start point or intermediate point]




[7] Ecology ...

When Ecology is enabled, you can have the motor power (servo) turned off automatically upon elapse of a specified period to save power after completion of positioning. Set the applicable period beforehand using a parameter.

Parameter No.	Parameter name	Initial value	Setting range
10	Auto servo OFF delay time [sec]	1	0 ~ 9999

[Auto motor power (servo) OFF]

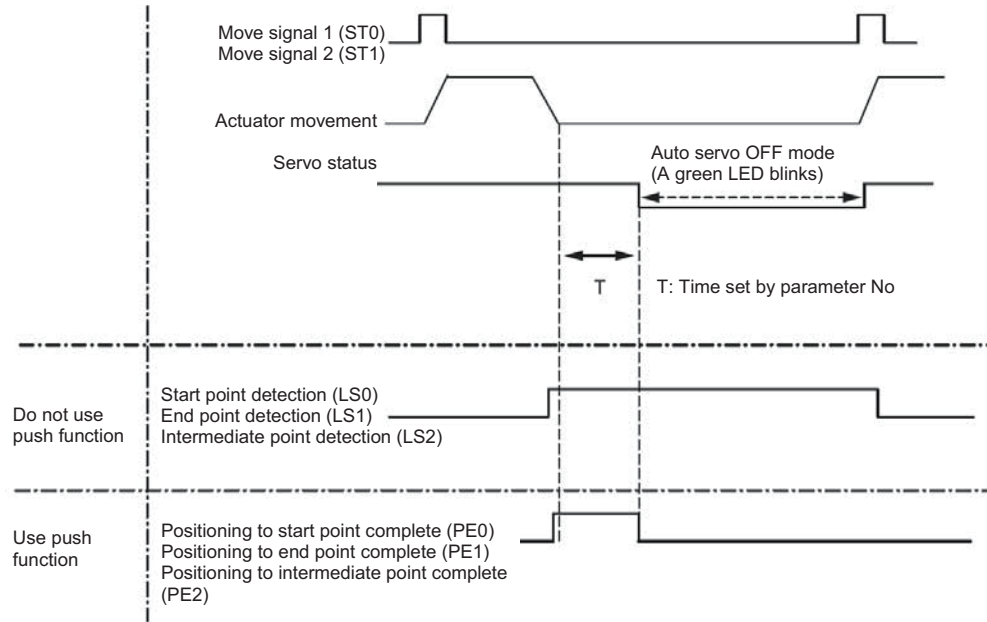The motor power (servo) will turn off automatically upon elapse of a specified period after completion of positioning. When the next positioning command is issued, the motor power (servo) turns on automatically and positioning is performed. Since no holding current flows while the motor is at standstill, power consumption can be reduced.



[Statuses of position detection output signals when the push function is not used]

Even when the motor power (servo) is turned off, as long as the actuator is positioned within the positioning band (parameter No. 1) the start point detection signal (LS0), end point detection signal (LS1) or intermediate point detection signal (LS2) will turn ON according to the applicable position, just like when a sensor is used. Accordingly, the position detection signal that has turned ON will remain ON after completion of positioning unless the actuator moves.

[Status of position complete signals when the push function is used]

In push-motion operation, the motor power (servo) does not turn off automatically while the actuator is pushing the load.

If the actuator has missed the load, the motor power (servo) turns off automatically.

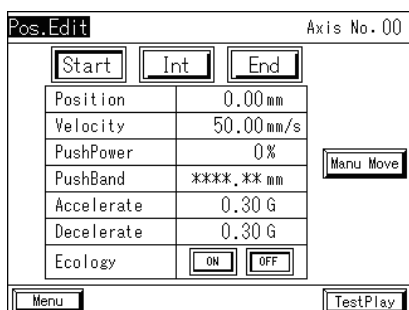
Once the motor power (servo) turns off, a position complete status is lost. Accordingly, the push complete signal 0 (PE0), push complete signal 1 (PE1) and push complete signal 2 (PE2) will all turn OFF regardless of the stop position.



Caution

No holding torque is applied in the auto servo OFF mode. Since the actuator will move in this condition if an external force is applied, pay due attention to contact and safety when setting any operation involving auto motor power (servo) OFF.

[2] Basic operation




Touch the value field of each setting item such as position. When the numeric keypad is displayed, enter a desired value and then touch [ENT].

Touch either of [Start], [Int] or [End] and the display moves to the setting screen corresponding to start position, end position or intermediate position.

(Note) The positions must satisfy the following relationships: Home ≤ Start position ≤ Midway position ≤ End position
Touching [Jog] switches to jog operation.

[Manual axis operation (jogging/inching)]

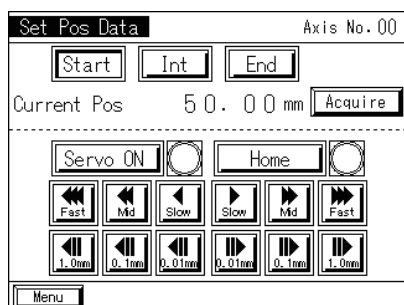You can load position data via manual axis operation (jogging/inching).



Operations on the manual axis operation (jogging/inching) screen

-
-
- [Servo ON]
- [HOME]

While any of these buttons is touched, the axis jogs in the direction of the arrow. The axis moves at 1 mm/s in the low-speed mode, 10 mm/s in the medium-speed mode, or 50 mm/s in the high-speed mode. Select one of the speed.

While any of these buttons is touched, the axis inches in the direction of the arrow. Select 0.01 mm, 0.1 mm or 1.0 mm as the inching distance.

Touching [Motor Power ON] when the motor power (servo) is turned off turns on the motor power (servo) and the O lamp will become lit. Touching [Motor Power OFF] when the motor power (servo) is turned on turns off the motor power (servo) and the O lamp will become unlit.

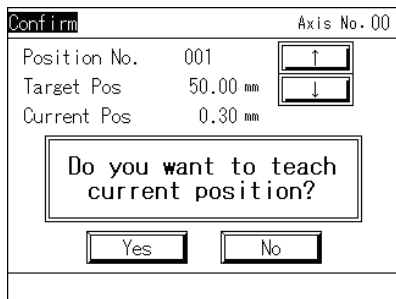
Touching [HOME] before the home return is completed causes the axis to return home and the O lamp will become lit.

Position loading operation

Touch [Load]. The confirmation screen appears.

You can change the position number by touching [↑]/[↓].






Touching [Yes] loads the current position.
















The image shows a confirmation screen titled "Confirm" in the top left corner. In the top right corner, it says "Axis No. 00". The screen displays three rows of data: "Position No. 001" with an up/down arrow button to its right, "Target Pos 50.00 mm" with a down arrow button to its right, and "Current Pos 0.30 mm". Below this data is a rectangular box containing the text "Do you want to teach current position?". At the bottom of the screen are two buttons labeled "Yes" and "No".






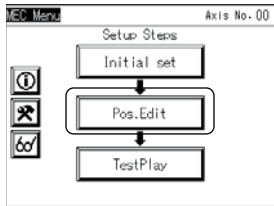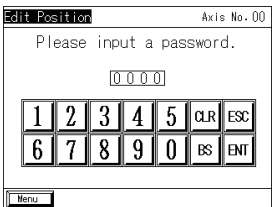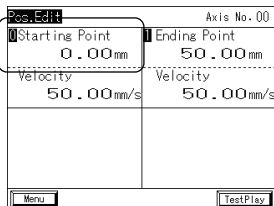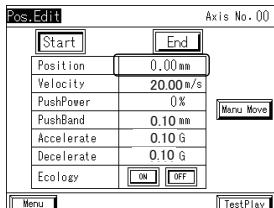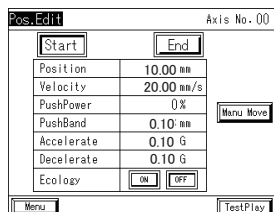
[3] Example of position setting operation
The operation is explained using specific examples.

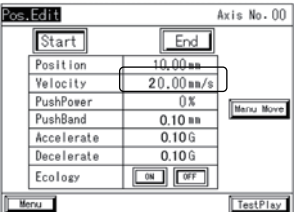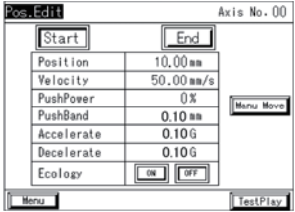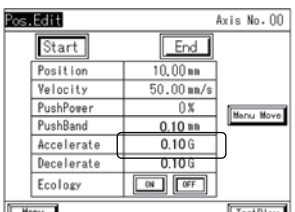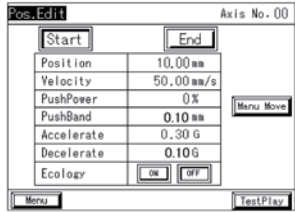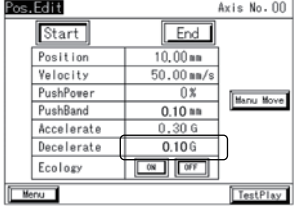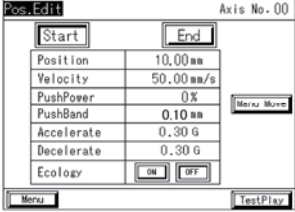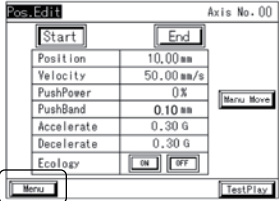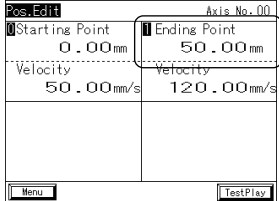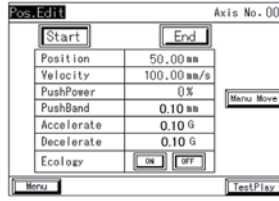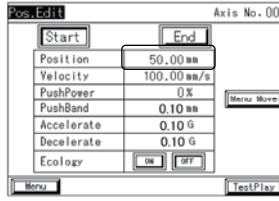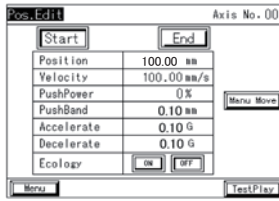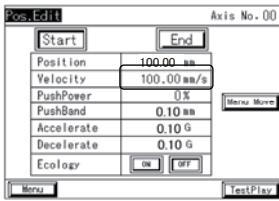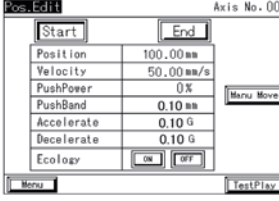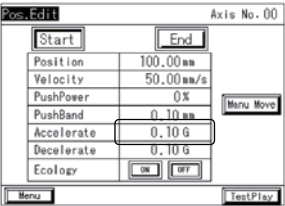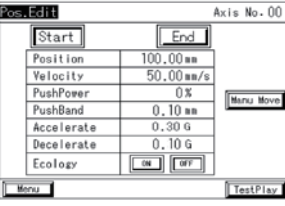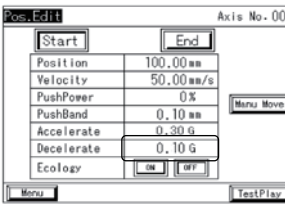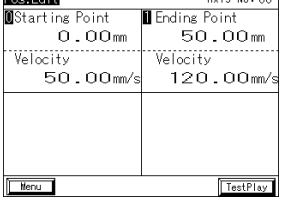
- 1) Setting the position, speed, acceleration and deceleration
An example of stopping at 2 points is explained.
Positions are set to operate the actuator back and forth between 10.0 mm and 100.0 mm.
End position: 100.0 mm, Start position: 10.0 mm

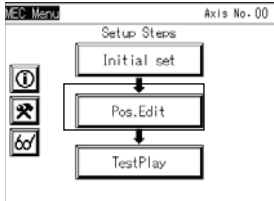
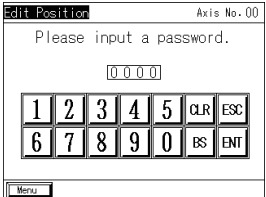
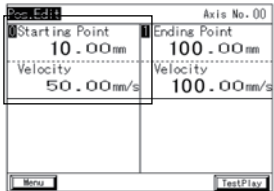
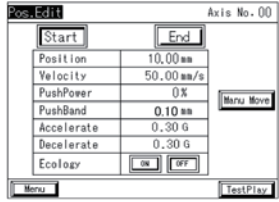
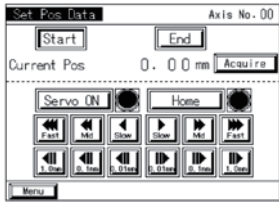

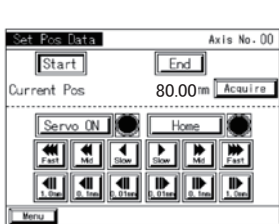


No.	Operation	Screen	Remarks
1	Touch [Pos. Edit] on the MEC menu screen.		
2	If the password is not "0000," the password entry screen appears. Enter the password.		A desired position setting password can be set in the "position data edit" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Start Point].		Touch [Menu] to return to the MEC menu screen.
4	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], and then [ENT].		Touch [Menu] to return to the position setting screen
5	"10.00" appears next to "Position."		Touch [Menu] to return to the position setting screen







No.	Operation	Screen	Remarks
6	Touch the value field of position. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen
7	"50" is shown in the speed field.		Touch [Menu] to return to the position setting screen
8	Touch the value field of acceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen
9	"0.30" is shown in the acceleration field.		Touch [Menu] to return to the position setting screen
10	Touch the value field of deceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen
11	"0.30" is shown in the deceleration field.		Touch [Menu] to return to the position setting screen

No.	Operation	Screen	Remarks
12	Touch [Menu].		
13	Set the position relating to the end point, acceleration, and deceleration. Touch [Ending Point].		Touch [Menu] to return to the MEC menu screen.
14	The display switches to the end point screen. Set the position relating to the end point, acceleration, and deceleration.		Touch [Menu] to return to the position setting screen
15	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], [0], and then [ENT].		Touch [Menu] to return to the position setting screen
16	"100" is shown in the position field.		Touch [Menu] to return to the position setting screen
17	Touch the value field of position. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen
18	"50" is shown in the speed field.		Touch [Menu] to return to the position setting screen

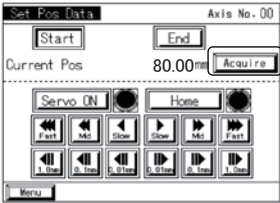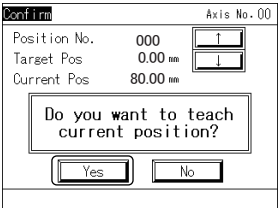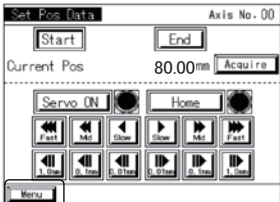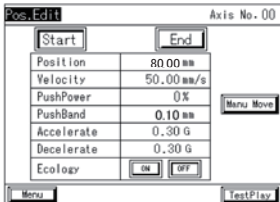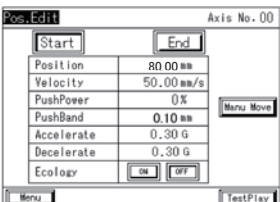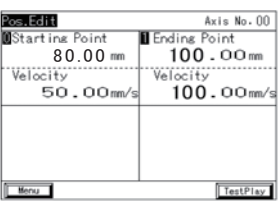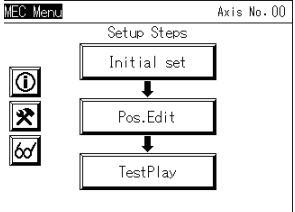
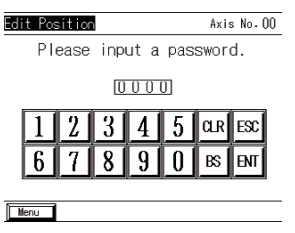
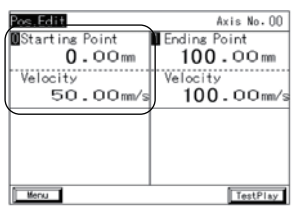

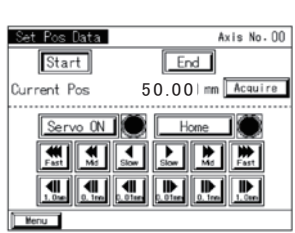
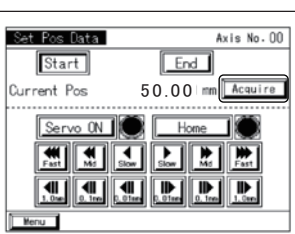
No.	Operation	Screen	Remarks
19	Touch the value field of acceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen
20	“0.30” is shown in the acceleration field.		Touch [Menu] to return to the position setting screen
21	Touch the value field of deceleration. When the numeric keypad is displayed, touch [0], [.] , [3], and then [ENT].		Touch [Menu] to return to the position setting screen
22	“0.30” is shown in the deceleration field.		Touch [Menu] to return to the position setting screen
23	Touch [Menu].		Touch [Menu] to return to the position setting screen
24			Touch [Menu] to return to the position setting screen






- 2) Manual axis operation (jogging/inching) (Using , jog/inch the actuator to the target position, and then loading the achieved position (current position) as the end point or start point)
An example of stopping at 2 points is explained.
How to load the current position of 80.0 mm as the start point is explained.

No.	Operation	Screen	Remarks
1	Touch [Pos. Edit] on the MEC menu screen.		
2	If the password is not "0000," the password entry screen appears. Enter the password.		A desired position setting password can be set in the "position data edit password" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Starting Point].		Touch [Menu] to return to the MEC menu screen.
4	Touch [Manu Move].		Touch [Menu] to return to the position setting screen * If home return is not yet complete, perform home return first.
5	If the motor power (servo) is currently off, touch [Servo ON] to turn on the motor power (servo)		
6	Use  to move the slider or rod to the target position of 80.0 mm.		<ul style="list-style-type: none"> • Jogging Touch any of  and the axis will move and continue moving. • Inching Touch any of  and the axis will move by the distance corresponding to the button you have touched.

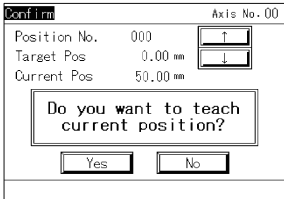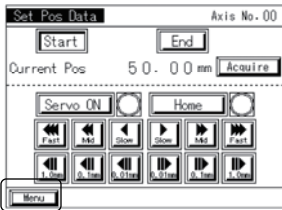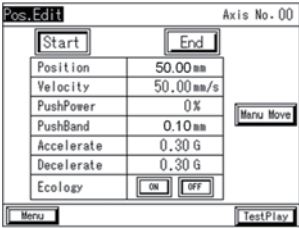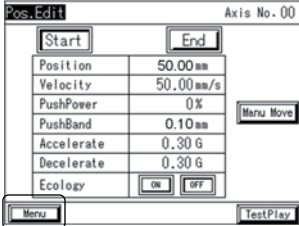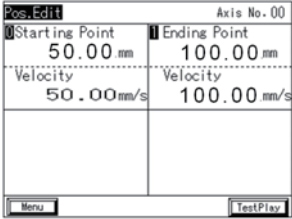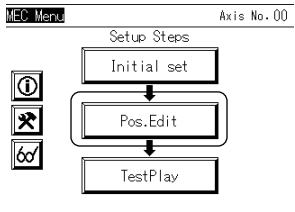
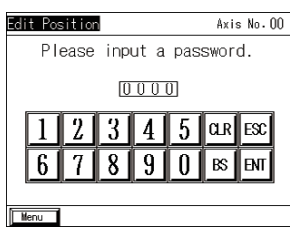
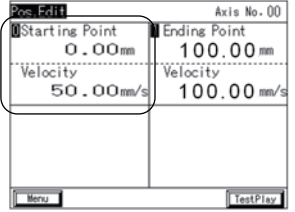

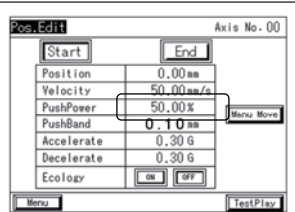
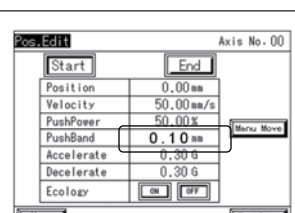
No.	Operation	Screen	Remarks
7	Touch [Load].		
8	Touch [Yes].		
9	Touch [Menu].		
10	"80.00" is shown in the position field. This confirms that the position data has been loaded.		Touch [Menu] to return to the position setting screen
11	Touch [Menu].		Touch [Menu] to return to the position setting screen
12			Touch [Menu] to return to the MEC menu screen.




- 3) Direct teaching (Moving the slider by hand to the target position, and then loading the achieved position (current position) as the end point or start point)
An example of stopping at 2 points is explained.
How to load the current position of 50.0 mm as the start point is explained.

No.	Operation	Screen	Remarks
1	Touch [Pos. Edit] on the MEC menu screen.		
2	If the password is not "0000," the password entry screen appears. Enter the password.		A desired position setting password can be set in the "position data edit" field of the parameter edit screen.
3	Set the position relating to the start point, acceleration, and deceleration. Touch [Starting Point].		Touch [Menu] to return to the MEC menu screen.
4	Touch [Manu Move].		Touch [Menu] to return to the position setting screen * If home return is not yet complete, perform home return first.
5	If the motor power (servo) is currently on, touch [Servo ON] to turn off the motor power (servo).		
6	Move the slider or rod by hand to the target position of 50.0 mm. Touch [Load].		

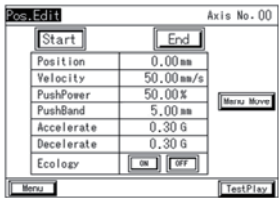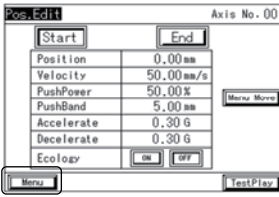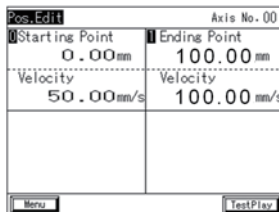
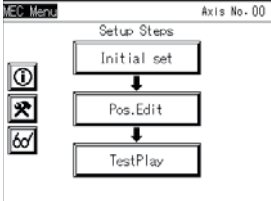
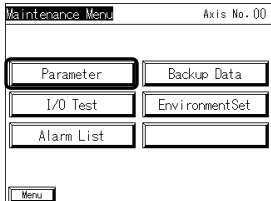
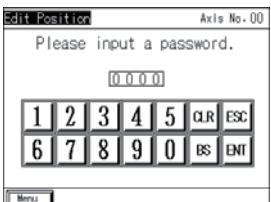
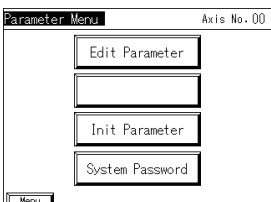
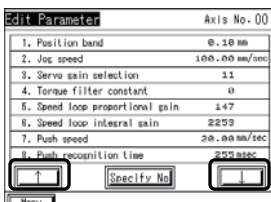

No.	Operation	Screen	Remarks
7	Touch [Yes].		
8	Touch [Menu].		
9	“50.00” is shown in the position field. This confirms that the position data has been loaded.		Touch [Menu] to return to the position setting screen
10	Touch [Menu].		Touch [Menu] to return to the position setting screen
11			Touch [Menu] to return to the MEC menu screen.








- 4) Setting for push-motion operation (push force, push band)
 An example of stopping at 2 points is explained.
 In this example, push-motion operation is performed at the start point.
 Push force: 50%, Push band: 5.0 mm








No.	Operation	Screen	Remarks
1	Touch [Pos. Edit] on the MEC menu screen.		
2	If the password is not "0000," the password entry screen appears. Enter the password.		A desired position setting password can be set in the "position data edit password" field of the parameter edit screen.
3	Touch the value field of position. When the numeric keypad is displayed, touch [1], [0], and then [ENT]. Touch [Starting Point].		Touch [Menu] to return to the MEC menu screen.
4	Touch the value field of [PushPower]. When the numeric keypad is displayed, touch [5], [0], and then [ENT].		Touch [Menu] to return to the position setting screen
5	"50" is shown in the push power field.		Touch [Menu] to return to the position setting screen
6	Touch the value field of [PushBand]. When the numeric keypad is displayed, touch [5] and then [ENT].		Touch [Menu] to return to the position setting screen

No.	Operation	Screen	Remarks
7	"5.00" is shown in the push band field.		Touch [Menu] to return to the position setting screen
8	Touch [Menu].		Touch [Menu] to return to the position setting screen
9			Touch [Menu] to return to the MEC menu screen.

- 5) Setting the energy-saving function (auto motor power (auto servo) OFF function)
 An example of stopping at 2 points is explained.
 How to automatically turn off the servo in 5.0 seconds after stopping is explained.


No.	Operation	Screen	Remarks
1	Touch  on the MEC menu screen.		
2	Set the auto motor power (auto servo) OFF delay time. Touch [Parameter].		
3	Enter the password.		The password is "5119" (factory setting). A desired password can be set using the "system password" parameter accessible from the maintenance menu.
4	Touch [Edit Parameter].		
5	. Touch [↑]/[↓] to navigate through the screens until the auto servo OFF delay time setting screen appears.		
6	Touch the value field of auto servo OFF delay time. When the numeric keypad is displayed, touch [5] and then [ENT].		

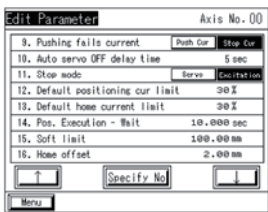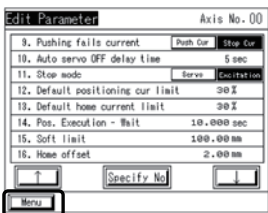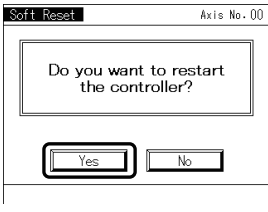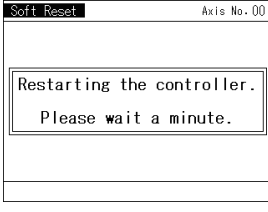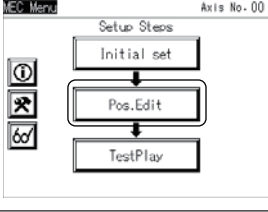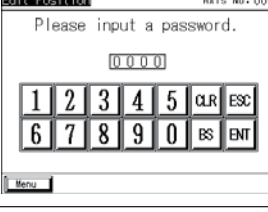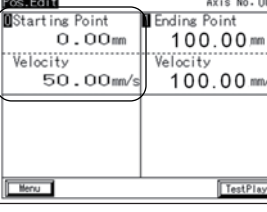No.	Operation	Screen	Remarks
7	"5" is shown.		
8	Touch [Menu].		
9	Touch [Yes].		If you touch [No], the settings you have made will not be reflected until the controller is restarted
10			
11	The controller is restarted and the MEC menu screen appears. Touch [Pos.Edit].		
12	If the password is not "0000," the password entry screen appears. Enter the password.		A desired position setting password can be set in the "position data edit password" field of the parameter edit screen.
13	Set the energy-saving function at the start point. Touch [Starting Point].		Touch [Menu] to return to the MEC menu screen.

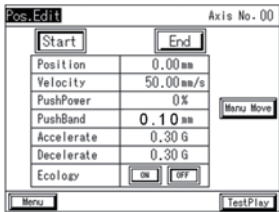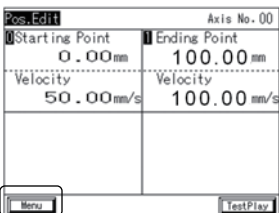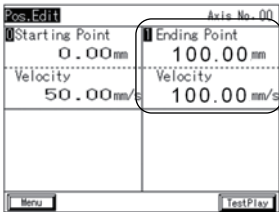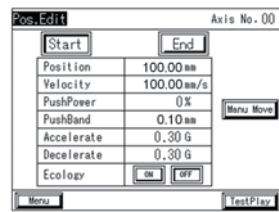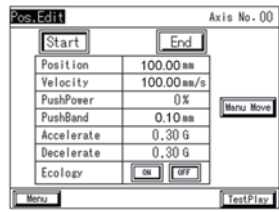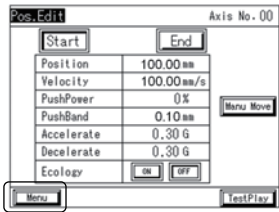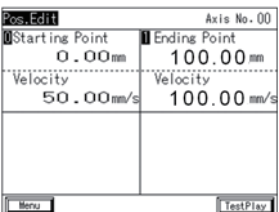No.	Operation	Screen	Remarks
14	Touch [ON].		Touch [Menu] to return to the position setting screen
15	Touch [Menu].		Touch [Menu] to return to the MEC menu screen.
16	Set the energy-saving function at the end point. Touch [Ending Point].		Touch [Menu] to return to the MEC menu screen.
17	The display switches to the end point screen. Set the energy-saving function relating to the end point.		Touch [Menu] to return to the position setting screen
18	Touch [ON].		Touch [Menu] to return to the position setting screen
19	Touch [Menu].		Touch [Menu] to return to the position setting screen
20			Touch [Menu] to return to the MEC menu screen.

7.8 Trial Operation


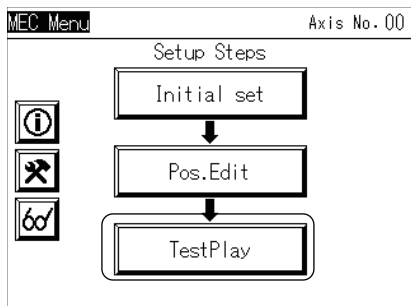
You can perform I/O tests and axis movement operation tests.




Touch [TestPlay] on the MEC menu screen.

- Operation test: You can perform operation tests of axis movement. A screen corresponding to the operation pattern you have selected appears. The display can be switched between the normal mode and reversed-home mode. If your actuator is of the reversed-home specification, you can switch to the reversed-home mode to align the display with the actual actuator.

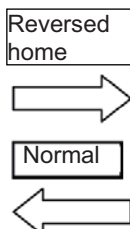
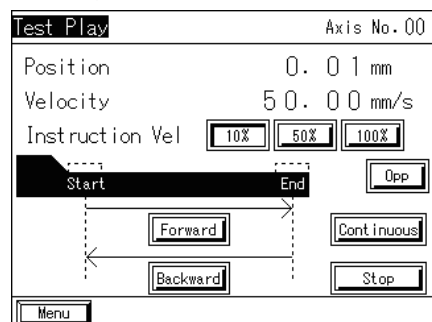
Stopping at 2 points




Stopping at 2 points (Reversed home)

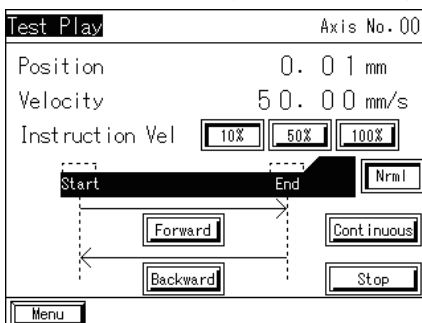


Stopping at 3 points

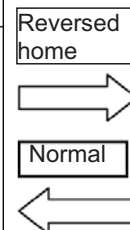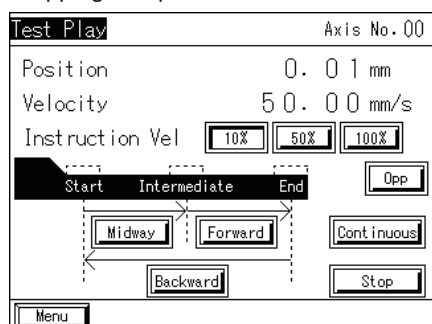

Stopping at 3 points (Reversed home)

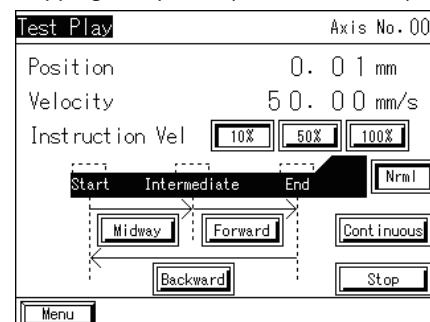

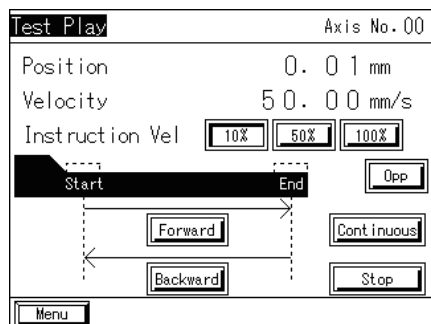The operating direction is shown by using an example of stopping at 2 points.




← The current position of the axis is shown.


→ The speed of the axis is shown.

- **Instruction Vel:** Select [10%], [50%] or [100%] as the speed for trial operation. If the speed set on the position setting screen is 600 mm/s, for example, the trial operation speed will become 600 mm/s if [100%] is selected, 300 mm/s if [50%] is selected, or 60 mm/s if [10%] is selected.
- **Forward:** Touching [Forward] causes the actuator to move toward the end point.
- **Backward:** Touching [Backward] causes the actuator to move toward the start point.
- **Continuous:** Touching [Continuous] causes the actuator to move continuously until [Stop] is touched.
If the actuator is set to stop at 2 points, it will move between the start point and end point repeatedly.
If the actuator is set to stop at 3 points, it will move in the sequence of intermediate point → end point → start point repeatedly.
- **Stop:** Touching [Stop] causes the actuator to stop.
- **Reverse, Normal:** Touching [Opp] or [Normal] toggles the display mode between normal and reversed-home.


7.9 Information

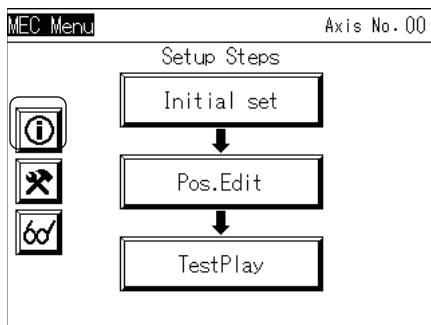The operation pattern, version and other information are shown.



Touch  on the MEC menu screen.

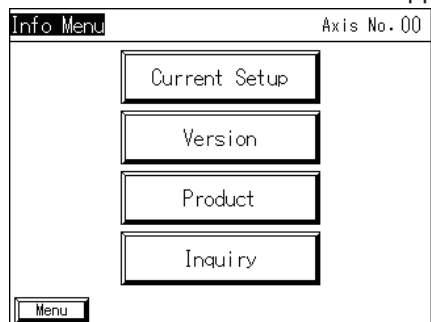The information selection screen appears.




Touch the screen you want to display.
Touch [Menu] to return to the MEC menu screen.


[Setting check]

You can check the operation pattern, operation mode and other information currently set.

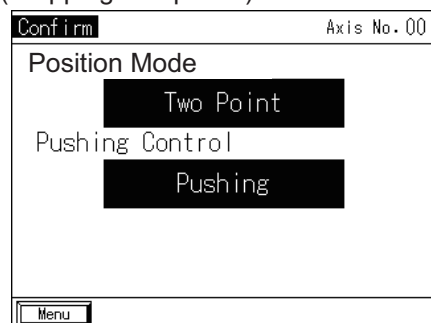(Stopping at 2 points)



(Stopping at 3 points)

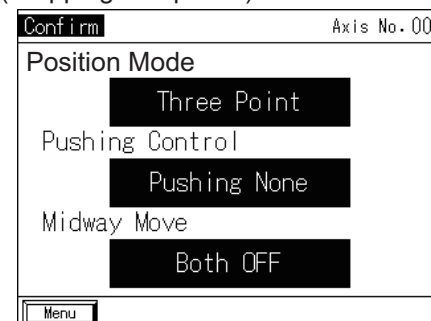

[Version/manufacturing information]
You can check the version information, etc.

VersionInfo		Axis No. 00
Series/Type	PMEC-NP	
Controller Version	AE210001	
Core Version	AE840001	
ScreenData Version	Ver. 1.10	
CPU Version	Ver. 1.10	
CPU Core Version	Ver. 1.00	
Pnl Board Version	A5000001	
Pnl Board Core Ver	A5800000	
Menu		

[Manufacturing information]
You can check the serial numbers and other manufacturing information.


Product		Axis No. 00
Controller Serial No.		
0 1 2 3 4 5 6 7 8 9 A B C D E F		
Controller PCB Revision		
M.REV: 1		
F.REV: 1		
Axis Serial No.		
F E D C B A 9 8 7 6 5 4 3 2 1 0		
Menu		

[Contact]
You can check the contact information of IAI.


Inquiry
IAI Customer center
"EIGHT"
☎ 0800-888-0088
OPEN 24 HOURS A DAY.
Weekend open 9:00AM to 5:00PM
http://www.iai-robot.co.jp/

7.10 Maintenance – Parameters

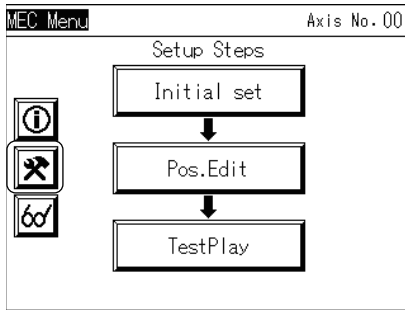Set the parameters and axis number. You can change the system password and reset all parameters to their factory defaults.




Touch  on the MEC menu screen.

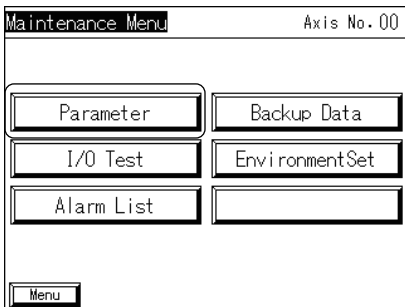

Touch [Parameter].
Touch [Menu] to return to the MEC menu screen.

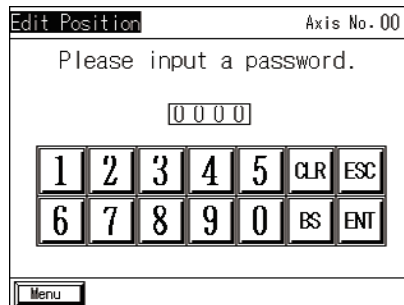
Before the display switches to the initial setting screen, the password entry screen appears if the password is other than "0000."



Enter the password using the numeric keypad, and then touch [ENT].

The password is "5119" (factory setting).

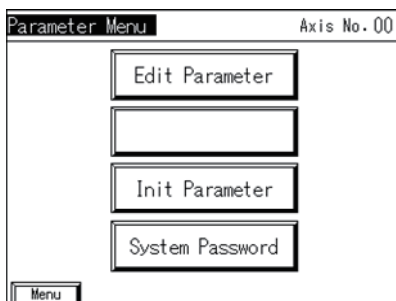A desired password can be set using the "system password" parameter accessible from the maintenance menu.



Select and touch [Edit Parameter], [Init Parameter] or [System Password].

A screen corresponding to the menu you have selected appears.

- Parameter edit : You can set 18 parameters.

Edit Parameter		Axis No. 00
1. Position band	0.10 mm	
2. Jog speed	100.00 mm/sec	
3. Servo gain selection	11	
4. Torque filter constant	0	
5. Speed loop proportional gain	147	
6. Speed loop integral gain	2253	
7. Push speed	20.00 mm/sec	
8. Push recognition time	255 msec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

- Parameter initialization : You can reset all parameters to their factory defaults (initialize the parameters).

Init Parameter		Axis No. 00
<div style="border: 1px solid black; padding: 10px; text-align: center;"> Initialize to shipment parameter? </div>		
Password : 0000		
<input type="button" value="Yes"/> <input type="button" value="No"/>		
<input type="button" value="Menu"/>		

- System password change : You can change the parameter edit password, etc.

Change System Password	
New Password : 5119	
<input type="button" value="Change"/>	
<input type="button" value="Menu"/>	

[1] Types of parameter editing

For details on each parameter, refer to the operation manual for your PMEC/AMEC controller.

(Default positioning band)

Set the default positioning band.

(Jog speed)

Set the speed of jog operation.

(Servo gain number)

Set the servo gain number that determines the response of position control loops in servo control.

(Torque filter constant)

Set the torque filter time constant that determines the filter time constant for torque commands in servo control.

(Speed loop proportional gain)

Set the speed loop proportional gain that determines the response of speed control loops in servo control.

(Speed loop integral gain)

Set the speed loop integral gain that determines the response of speed control loops in servo control.

(Push speed)

Set the speed of push-motion operation.

(Push recognition time)

Set the push recognition time to recognize completion of operation after the load was contacted in push-motion operation.

(Pushing fails current)

Set whether to use the push current or stop current as the current limiting value when the load was missed in push-motion operation.

For AMEC, if the stop current is selected when the load was missed in push-motion operation, the torque limit at the travel current limiting value is set.

(Auto servo OFF delay time)

Set the time until the auto motor power (auto servo) turns off automatically when the ecology function is enabled.

(Stop mode) Displayed for PMEC controllers

Set whether to implement servo stop based on the full servo control method or complete stop without servo control when the actuator stops.

(Note) When this parameter is changed, the new setting will not be reflected until the position data is written to the controller again.

(Current limiting value while stopped after positioning) Displayed for PMEC controller

Set the current limiting value to be applied while the actuator is stopped after positioning.

(Current limiting value during home return)

Set the current limiting value to be applied during home return operation.

(Position execution wait time during continuous operation)

This parameter is not used with PMEC and AMEC controllers.

(Soft limit)

Set the positive soft limit.

(Home return offset)

Set the offset for home return.

(Home return direction)

Set whether to perform home return in the motor direction or counter-motor direction.

The home return direction cannot be changed for some actuators, such as rod-type actuators.

(Position edit password)

Set the password for editing position data.

[2] Basic operation Set parameters.

[Parameter]

Edit Parameter		Axis No. 00
1. Position band	0.10 mm	
2. Jog speed	100.00 mm/sec	
3. Servo gain selection	11	
4. Torque filter constant	0	
5. Speed loop proportional gain	147	
6. Speed loop integral gain	2253	
7. Push speed	20.00 mm/sec	
8. Push recognition time	255 msec	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

Touch [↑] to return to the previous screen.

Touch [↓] to move to the next screen.

Three screens are available, including one showing the default positioning band and others used to edit position data and password.

Touch [Menu] to return to the parameter menu screen.

An example of setting a soft limit is explained.

Touch [↑] and [↓] on the displayed screen until the soft limit setting screen appears.


Edit Parameter		Axis No. 00
9. Pushing fails current	<input type="button" value="Push Cur"/> <input type="button" value="Stop Cur"/>	
10. Auto servo OFF delay time	0 sec	
11. Stop mode	<input type="button" value="Servo"/> <input type="button" value="Excitation"/>	
12. Default positioning cur limit	30 %	
13. Default home current limit	30 %	
14. Pos. Execution - Wait	10.000 sec	
15. Soft limit	100.00 mm	
16. Home offset	2.00 mm	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

Touch the current value.


When the numeric keypad appears, enter a desired value and then touch [ENT].

Edit Parameter		Axis No. 00
9. Pushing fails current	<input type="button" value="Push Cur"/> <input type="button" value="Stop Cur"/>	
10. Auto servo OFF delay time	0 sec	
11. Stop mode	<input type="button" value="Servo"/> <input type="button" value="Excitation"/>	
12. Default positioning cur limit	30 %	
13. Default home current limit	30 %	
14. Pos. Execution - Wait	10.000 sec	
15. Soft limit	100.00 mm	
16. Home offset	2.00 mm	
<input type="button" value="↑"/> <input type="button" value="Specify No"/> <input type="button" value="↓"/>		
<input type="button" value="Menu"/>		

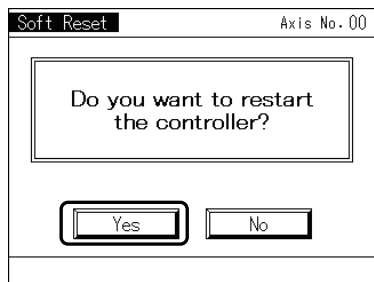Change parameters and touch [Menu] to return to the controller restart screen.



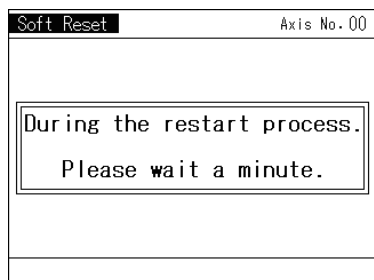
Touch [Yes].
The controller is restarted.
The controller operates according to the operation pattern settings you have made.
The display returns to the initial setting screen.



Touch [No], and the controller will not operate according to the operation pattern parameters you have set until restarted.


[Init Parameter]

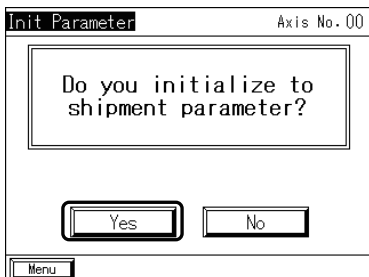The parameters are reset to their factory default settings.



Touch [Yes].

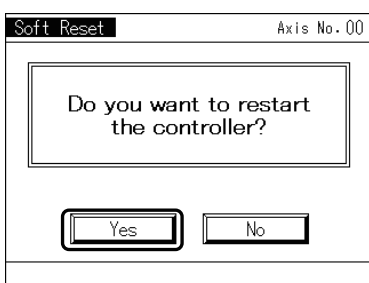
Touch [No] to return to the parameter menu screen without resetting the parameters to their factory default settings.



Touch [Yes].

The controller is restarted.
The controller operate according to the factory-set parameters.
The display returns to the initial setting screen.

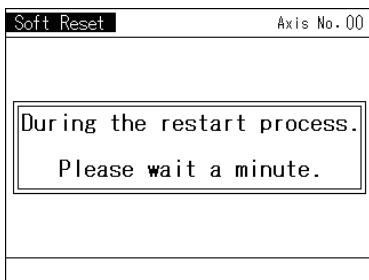Touch [No], and the controller will not operate according to the factory-set parameters until restarted.



[Change System Password]

Change the password for parameter editing.

Touch New Password.

When the numeric keypad appears, enter a desired value and then touch [ENT].

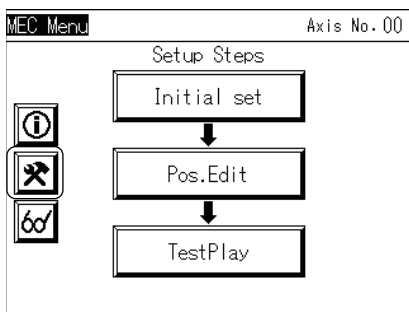
Touch [Change].

The system password changes.


Touch [OK] to return to the parameter menu screen.

7.11 Maintenance – I/O Tests


You can monitor PIO input signals.
Output signals can be forcibly turned ON or OFF.



Touch  on the MEC menu screen.

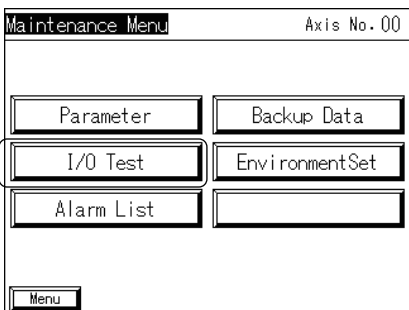

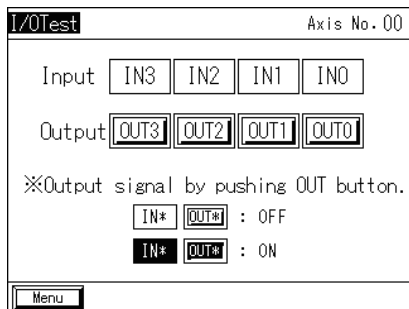Touch [I/O Test].
Touch [Menu] to return to the MEC menu screen.




You can monitor the ON/OFF statuses of input signals.

Output signals OUT0 to OUT3 can be forcibly output by touching each signal button.


Touch [Menu] to return to the maintenance menu screen.

7.12 Maintenance – Alarm List

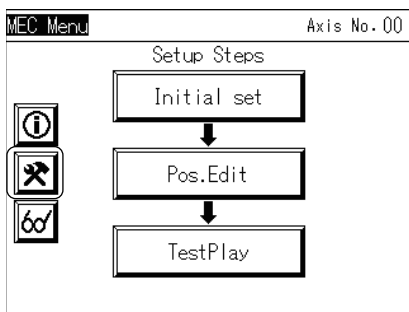A list of alarms that have generated after the controller power was turned on is displayed. [Refer to 8, “Error Display” for the details of alarms.]




Touch  on the MEC menu screen.

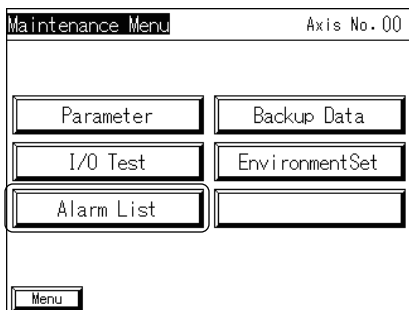

Touch [Alarm List].
Touch [Menu] to return to the MEC menu screen.

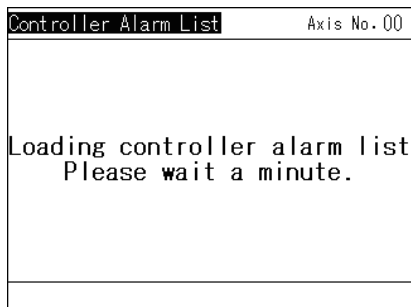
A screen appears with a message saying that the system is acquiring the alarm list.




The alarm list of the controller is displayed. The error list consists of pages 0 to 15.

Controller Alarm List					Axis No. 00
No	Code	Message	Adrs	Detail	Time
00	FFF	PowerUP No Error	*****		0:00:00
01	0A2	Pos data error	1214	0021	0:04:38
02	FFF	PowerUP No Error	*****		0:00:00
03	000		*****		0:00:00
04	000		*****		0:00:00
05	000		*****		0:00:00
06	000		*****		0:00:00
07	000		*****		0:00:00

Touch [↓] to display the next page of the list.

Controller Alarm List					Axis No. 00
No	Code	Message	Adrs	Detail	Time
08	000		****	****	0:00:00
09	000		****	****	0:00:00
10	000		****	****	0:00:00
11	000		****	****	0:00:00
12	000		****	****	0:00:00
13	000		****	****	0:00:00
14	000		****	****	0:00:00
15	000		****	****	0:00:00
<div><div></div><div><div>Erase</div></div></div> <div><div>Menu</div></div>					


Touch [>] to display the previous list screen.

Touch [Clear], and the details of all alarms will be cleared.

(Note) “Power ON log error (no error)” indicates that the controller power was turned on. This message does not indicate abnormality. The time of each error is the elapsed time after this power ON log error (no error).

7.13 Maintenance – Data Backup

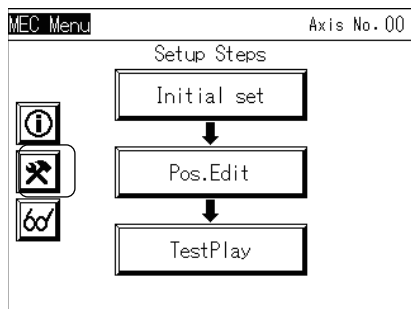Data is transferred between the memory of the touch-panel teaching pendant and the controller.



Touch  on the MEC menu screen.

The data transfer screen appears.

Backup Data		Axis No. 00
Data Type	Source	Destination
Position Data	Controller	Controller
Parameter	CON-PT	CON-PT
Stored Info	Transfer	
Menu		

Select and touch [Position Data] and/or other data you want to transfer.

Select and touch [Controller] or [CON-PT] under Source.

Select and touch [Controller] or [CON-PT] under Destination.

Touch [Transfer].

Data Transfer	Axis No. 00
TransMode: Controller⇒ CON-PT	
Data Transfer: Parameter	
Data will be overwrite.	
Do you want to continue transfer?	
Yes	No
Menu	

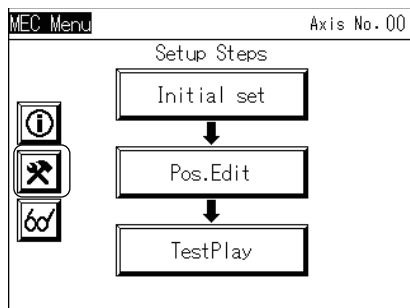
Touch [Yes].

The data is transferred.


7.14 Maintenance – Environment Setting

(Touch sound Setting, Display Language Setting, Auto Monitor Setting, Display Setting (Screen Adjustment))

You can set the touch sound, display language and auto monitor, and also adjust the screen.




Touch  on the MEC menu screen.

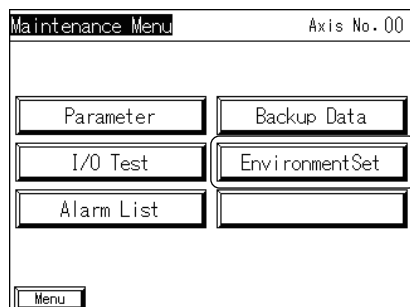


Touch [Environment Set].
Touch [Menu] to return to the MEC menu screen.

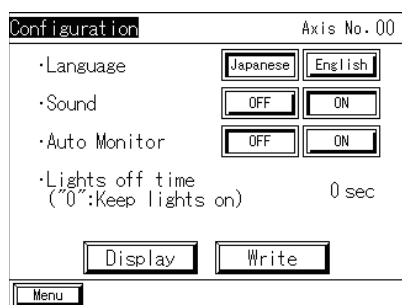The environment setting screen appears.



[1] Basic operation

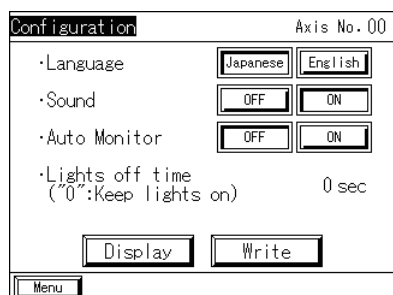- Language: Select Japanese or English as the display language.
Display for Japanese/English languages setting change (Option model code : ENG)



Select and touch [Japanese], etc.

Touch [Write].

(Note) If Write is not selected, the new setting will not become effective after the controller is restarted.

Select Chinese or Japanese as the display language.

Display for Chinese/English languages setting change (Option model code : ECH) Version V1.30 or later

Configuration Axis No. **

- Language: Chinese, English
- Sound: OFF, ON
- Auto Monitor: OFF, ON
- Dim Display Time ("0":Never Dim) **** sec

Display Write

Menu

- Sound: Set whether to output or not output a touch tone.

Configuration Axis No. 00

- Language: Japanese, English
- Sound: OFF, ON
- Auto Monitor: OFF, ON
- Lights off time ("0":Keep lights on) 0 sec

Display Write

Menu

Touch [OFF]. A touch tone is not output.

Touch [ON]. A touch tone is output.

Touch [Write].

(Note) If Write is not performed, the new setting will not become effective after the controller is restarted.

- Auto Monitor: You can have the monitor screen appear first after the touch-panel teaching pendant is connected.

Configuration Axis No. 00

- Language: Japanese, English
- Sound: OFF, ON
- Auto Monitor: OFF, ON
- Lights off time ("0":Keep lights on) 0 sec

Display Write

Menu

Touch [ON] to enable the auto monitor setting.

- Lights off time: You can set a desired time after which the display of the touch-panel teaching pendant will turn off. If "0 sec" is set, the display will remain lit at all times.

Configuration Axis No. 00

- Language: Japanese, English
- Sound: OFF, ON
- Auto Monitor: OFF, ON
- Lights off time ("0":Keep lights on) 0 sec

Display Write

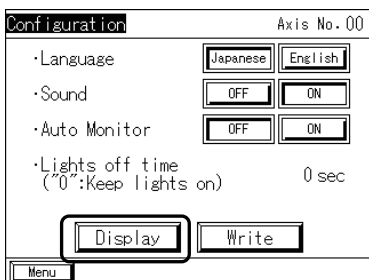
Menu

Touch Lights off time ("0":Keep lights on) 0 sec.


When the numeric keypad is displayed, use the keypad to enter the light off time.

A desired value between 1 and 9999 sec can be set.

- Display: Adjust the contrast and brightness of the screen.



Touch [Display].

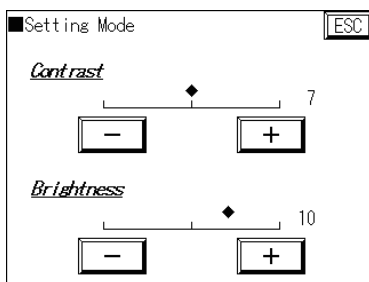

Contrast adjustment

Touch [-] and [+] under Contrast to adjust the contrast of the screen.

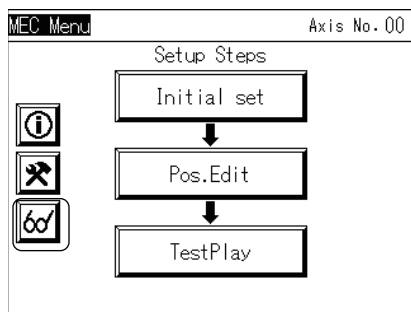
Brightness adjustment


Touch [-] and [+] under Brightness to adjust the brightness of the screen.

Touch [ESC] to return to the environment setting screen.

7.15 Monitor

The current position, speed, electrical current, system status and I/O statuses of the controller are displayed.



Touch  on the MEC menu screen.

The operation pattern is shown.

The I/O statuses of the axis are shown.

The displayed signals vary depending on the operation pattern.

Monitor Axis No. 00

P10 pattern 0
•Standard

Input		Output	
ST0	<input type="checkbox"/>	LS0	<input type="checkbox"/>
ST1	<input type="checkbox"/>	LS1	<input type="checkbox"/>
-	<input type="checkbox"/>	HEND	<input checked="" type="checkbox"/>
-	<input type="checkbox"/>	*ALM	<input checked="" type="checkbox"/>

○:OFF ●:ON

Menu

Servo ☐ Home ☒

Position 10.00 mm

Velocity 100.00 mm/s

Current Rate 0.0 %

The servo status is shown.

The home return status is shown.

The axis position is shown.

The axis speed is shown.

The electrical current of the axis is shown.

Touch [Menu] to return to the MEC menu screen.

8. Error Display

8.1 Occurrence of Alarm

If an error occurs, the alarm screen appears.
Model other than SCON-CA

Alarm	Axis No. 00
Alarm : A,B disconnect	
Alarm Cod : 0E8	
Detail : ****	
Address : ****	
Time : 0:00:00	
Back	Reset Alm Inquiry

SCON-CA

Alarm	Axis No. **
Alarm : ****	
Alarm Code : **	
Detail : ****	
Address : ****	
Time(yy/mm/dd) : **/**/ **:**	
Back	Reset Alm Inquiry

8.1.1 Alarms Detected by Controller

Alarms of codes 080 to 0FC are those detected by the controller.
These alarms include major alarms relating to the servo control system, power system, etc. For details on these alarms, refer to the operation manual for your controller.

Remove the cause of each alarm and then perform the operation specified below.

- To reset operation-cancellation level alarms, touch [Reset Alm] on the alarm screen.
- To reset cold-start level errors, reconnect the control power.

8.1.2 Alarms Detected by Touch-panel Teaching Pendant

Alarms detected by the touch-panel teaching pendant and remedial actions are explained.

[1] An alarm is displayed on the alarm screen.

Code	Error description	Cause and action
308	Response timeout error No response is returned from the controller.	[1] The controller connection cable is open. Check the connection cable for wrong wiring or wire breakage. [2] This is a temporary abnormality caused by noise, etc. Reconnect the controller power.
30D	Exceptional response receive error An abnormal response is returned from the controller.	This is a temporary abnormality caused by noise, etc. If the condition occurs frequently, check the cables, noise elimination measures taken on the power supply, etc.

[2] An alarm is displayed in the top right-hand corner of the current screen.

Code	Error description	Cause and action
**0002	NOT support error	The version of screen data may be old. Check the version.
**00FF	Timeout error No response is returned from the controller.	[1] The controller connection cable is open. Check the connection cable for wrong wiring or wire breakage. [2] This is a temporary abnormality caused by noise, etc. Reconnect the controller power.

8.2 Error Messages on Touch Panel

An error message is displayed on the touch panel display if, for example, an attempt is made to write to the controller an excessive value entered for the target position.

Check the entry to confirm that the value is correct, etc., and then try setting the value again.

Error message

Input data error
The entered value is too small
The entered value is too large
Password error

9. Warranty

9.1 Warranty Period

One of the following periods, whichever is shorter:

- 18 months after shipment from IAI
- 12 months after delivery to the specified location

9.2 Scope of Warranty

Our products are covered by warranty when all of the following conditions are met. Faulty products covered by warranty will be replaced or repaired free of charge:

- (1) The breakdown or problem in question pertains to our product as delivered by us or our authorized dealer.
- (2) The breakdown or problem in question occurred during the warranty period.
- (3) The breakdown or problem in question occurred while the product was in use for an appropriate purpose under the conditions and environment of use specified in the operation manual and catalog.
- (4) The breakdown or problem in question was caused by a specification defect or problem, or by the poor quality of our product.

Note that breakdowns due to any of the following reasons are excluded from the scope of warranty:

- [1] Anything other than our product
- [2] Modification or repair performed by a party other than us (unless we have approved such modification or repair)
- [3] Anything that could not be easily predicted with the level of science and technology available at the time of shipment from our company
- [4] A natural disaster, man-made disaster, incident or accident for which we are not liable
- [5] Natural fading of paint or other symptoms of aging
- [6] Wear, depletion or other expected result of use
- [7] Operation noise, vibration or other subjective sensation not affecting function or maintenance

Note that the warranty only covers our product as delivered and that any secondary loss arising from a breakdown of our product is excluded from the scope of warranty.

9.3 Honoring the Warranty

As a rule, the product must be brought to us for repair under warranty.

9.4 Limited Liability

- (1) We shall assume no liability for any special damage, consequential loss or passive loss such as a loss of expected profit arising from or in connection with our product.
- (2) We shall not be liable for any program or control method created by the customer to operate our product or for the result of such program or control method.

9.5 Conditions of Conformance with Applicable Standards/Regulations, Etc., and Applications

- (1) If our product is combined with another product or any system, device, etc., used by the customer, the customer must first check the applicable standards, regulations and/or rules. The customer is also responsible for confirming that such combination with our product conforms to the applicable standards, etc. In such a case we will not be liable for the conformance of our product with the applicable standards, etc.
- (2) Our product is for general industrial use. It is not intended or designed for the applications specified below, which require a high level of safety. Accordingly, as a rule our product cannot be used in these applications. Contact us if you must use our product for any of these applications:
 - [1] Medical equipment pertaining to maintenance or management of human life or health
 - [2] A mechanism or mechanical equipment intended to move or transport people (such as a vehicle, railway facility or aviation facility)
 - [3] Important safety parts of mechanical equipment (such as safety devices)
 - [4] Equipment used to handle cultural assets, art or other irreplaceable items
- (3) Contact us at the earliest opportunity if our product is to be used in any condition or environment that differs from what is specified in the catalog or operation manual.

9.6 Other Items Excluded from Warranty

The price of the product delivered to you does not include expenses associated with programming, the dispatch of engineers, etc. Accordingly, a separate fee will be charged in the following cases even during the warranty period:

- [1] Guidance for installation/adjustment and witnessing of test operation
- [2] Maintenance and inspection
- [3] Technical guidance and education on operating/wiring methods, etc.
- [4] Technical guidance and education on programming and other items related to programs

10. Change History

Revision Date	Description of Revision
September 2009	First edition
February 2010	Added operations for PMEC and AMEC controllers.
May 2011	<p>P.10 Model codes JCH, CHJ and CHE are added.</p> <p>P.11 Table for language change added</p> <p>P.18, P.66 I/O test added</p> <p>P.19, P.66, P.82, P.140, P.141, P.147, P.192, P.193</p> <p>Display for Japanese/English/EU languages setting change and display for Chinese/English/EU languages setting change added</p>
November 2011	<p>Contents changed in Safety Guide</p> <p>Caution notes added for when working with two or more persons</p> <p>P.17 5.1 Displayed Language Change</p> <p>P.90 6.1 Displayed Language Change</p> <p>P.155 7.1 Displayed Language Change</p> <p>Contents of SCON-CA added</p>



IAI Corporation

Head Office: 577-1 Obane Shimizu-KU Shizuoka City Shizuoka 424-0103, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

Technical Support available in USA, Europe and China

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL (310) 891-6015 FAX (310) 891-0815
Chicago Office: 1261 Hamilton Parkway, Itasca, IL 60143
TEL (630) 467-9900 FAX (630) 467-9912
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL (678) 354-9470 FAX (678) 354-9471
website: www.intelligentactuator.com

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL 06196-88950 FAX 06196-889524

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL 021-6448-4753 FAX 021-6448-3992
website: www.iai-robot.com